

[Manuals.plus](#) /

› [ExBrite](#) /

› ExBrite Lighted Medicine Cabinet User Manual

## ExBrite DHMC3032V6TX

# ExBrite Lighted Medicine Cabinet User Manual

Model: DHMC3032V6TX

## INTRODUCTION

Thank you for choosing the ExBrite Lighted Medicine Cabinet. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new medicine cabinet. Please read this manual thoroughly before installation and keep it for future reference.



*Image: The ExBrite Lighted Medicine Cabinet, showcasing its sleek design and integrated lighting above a modern bathroom sink.*

## IMPORTANT SAFETY INFORMATION

Always follow the installation instructions to ensure the cabinet is securely mounted. Do not overload the shelves. Keep the area around the cabinet clear to prevent any accidents. Use caution when adjusting the shelves to avoid pinch points. Always turn off the light before using the defogging feature. Consult a professional if you are unsure about any aspect of installation or use.

## PRODUCT FEATURES

The ExBrite Lighted Medicine Cabinet is designed with advanced features for convenience and functionality:

- **Stepless Adjustable & Interior LED Lighting:** Lighted medicine cabinet can be adjusted from 10% to 100% brightness to match your preferences. The LED medicine cabinet offers 3000K-6400K three-color and stepless color temperature adjustment. Moreover, the interior light inside the lighted medicine cabinet provides sufficient light source to help you find your items quickly.
- **Better Defogging & Clock and Temperature Display:** Newly developed technology enables mirror surface close to 40°C in a short period of time for faster and safer defogging. The defogging automatically turns off when the light is off. IP44 rated waterproof aluminum frame provides better durability and safety. Digital clock and temperature display (temperature in bathroom) shows on the surface of the mirror.
- **Mirrored Glass Shelf:** Mirror-type shelf design adds a greater sense of space. Each layer bears 11 pounds and is 5mm thick for worry-free storage. 3 shelves are adjustable in height for more freewheeling settings.
- **Built-in Outlets & USB Ports:** Built-in 2 Amp dual outlet and 2 USB ports are suitable for shavers or electric toothbrushes, allowing you to charge devices inside the medicine cabinet.
- **Recessed or Surface Installation:** Can be embedded in the wall for minimal protrusion or mounted directly on the wall.
- **Upgraded Packaging and Hinge:** Improved packaging reduces transit damage. Upgraded 120° soft hinge better supports the mirror's weight.
- **ETL Certified:** Ensures compliance with safety standards, enhancing aesthetic and meeting rigorous electrical safety requirements.



*Image: Overview of key features including 3 color temperature, time/temperature display, dimming, interior LED, storage, adjustable shelves, anti-fog, and double-sided mirror.*



*Image: Interior view of the medicine cabinet, highlighting the adjustable glass shelves and internal LED lighting.*

Interior LED Lighting 5000K  
automatically turns on

Outlet & USB



110° Open swing  
soft close hinges

Adjustable tempered  
8mm clear glass shelves

*Image: Close-up of the integrated 120Vac 15A Max outlets and USB ports inside the cabinet for convenient charging.*

### Official Product Video

*Video: An official product video from ExBrite showcasing the features and design of the Lighted Medicine Cabinet with Mirror.*

## SPECIFICATIONS

| Attribute    | Value        |
|--------------|--------------|
| Brand        | ExBrite      |
| Model Number | DHMC3032V6TX |

|                          |                                                                                          |
|--------------------------|------------------------------------------------------------------------------------------|
| Product Dimensions       | 5.5"D x 30"W x 32"H                                                                      |
| Item Weight              | 52.9 Pounds                                                                              |
| Material                 | Aluminum                                                                                 |
| Mounting Type            | Wall Mount (Recessed or Surface)                                                         |
| Number of Shelves        | 3                                                                                        |
| Weight Limit (per shelf) | 11 Pounds                                                                                |
| Special Features         | Lighting Memory Function, 3 color temperature, Dimmable, Defog, Adjustable Glass Shelves |
| Certifications           | ETL Certified                                                                            |

## SETUP AND INSTALLATION

The ExBrite Lighted Medicine Cabinet offers versatile installation options: recessed or surface mounting. Choose the method that best suits your bathroom design and structural capabilities.

### Installation Options:

- **Recessed Installation:** This method involves embedding the cabinet into the wall, resulting in a nearly flush appearance with only about 1 inch of protrusion for easy opening and closing, minimizing spatial occupation. This requires cutting into the wall and building a frame.
- **Surface Mounting:** This method involves mounting the cabinet directly onto the wall surface. This is a simpler installation process that does not require wall modification.

## SURFACE MOUNTING



## RECESSED MOUNTING



*Image: Visual comparison of surface mounting versus recessed mounting for the medicine cabinet.*

Refer to the detailed installation guide included with your product packaging for step-by-step instructions, required tools, and safety precautions specific to your chosen installation method.

## OPERATING INSTRUCTIONS

Your ExBrite Lighted Medicine Cabinet features intuitive touch controls for various functions:

- **Light Control & Dimming:** Touch the light icon on the mirror surface to turn the LED lighting on or off. Long press the light icon to adjust the brightness steplessly from 10% to 100%. The cabinet remembers your last brightness setting.
- **Color Temperature Adjustment:** Touch the color temperature icon to cycle through three color temperatures: 3000K (Warm), 4000K (Natural), and 6400K (White).
- **Defogging Function:** Activate the defogger by touching the defog icon. The mirror surface will warm up to quickly clear fog. The defogging function automatically turns off when the light is off.


- **Clock & Temperature Display:** The mirror surface displays the current time and bathroom temperature.



**Three color temperatures  
can be adjusted**

Short press to adjust the color  
temperatures

*Image: Demonstrates the three adjustable color temperatures: 3000K Warm, 4000K Natural, and 6000K White.*

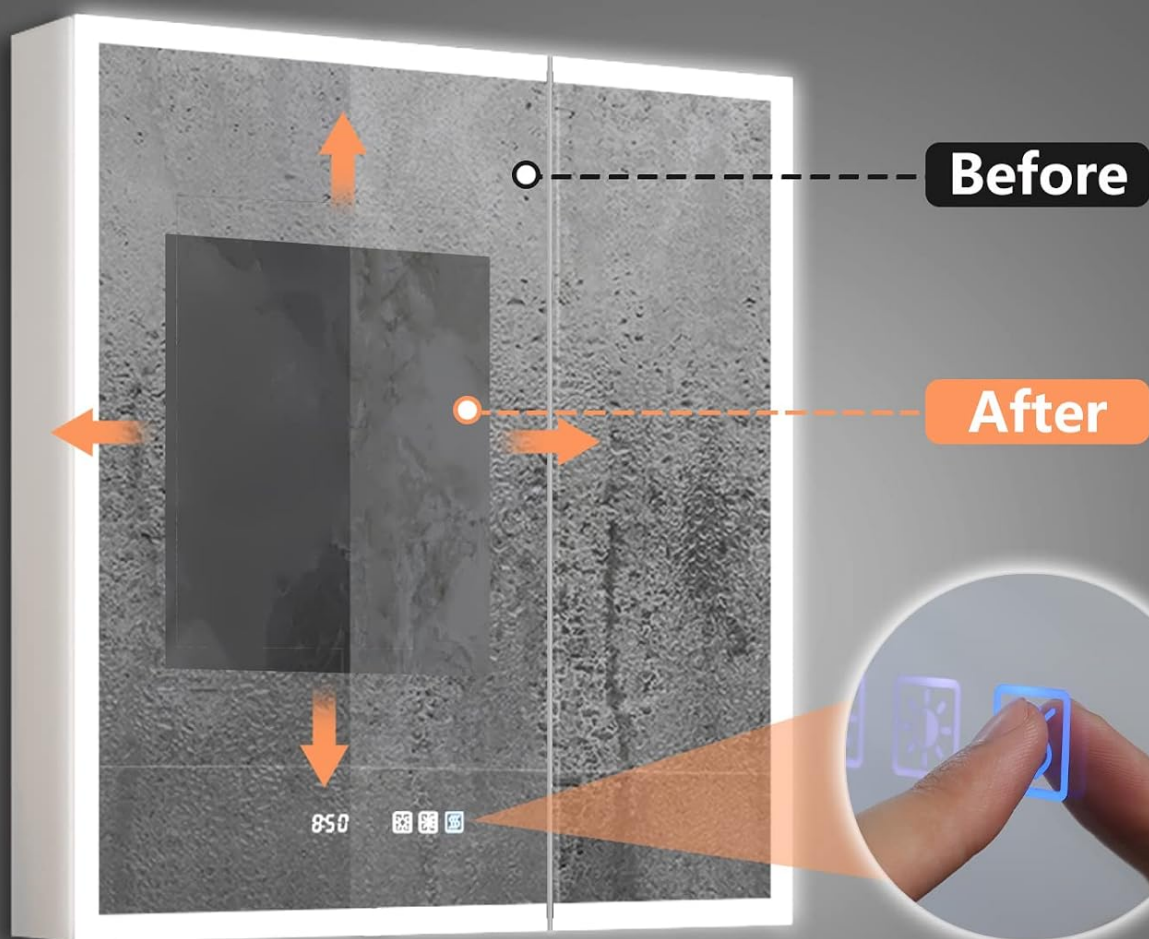


## One Touch to Anti-Fog

*Image: Illustrates the effectiveness of the one-touch anti-fog function, showing a clear mirror after activation.*



**Long press to adjust brightness**



## Memory Function

Remember your personal brightness setting for the led medicine cabinet.

*Image: Shows the stepless dimming capability from 100% to 10% brightness with memory function.*

## MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your medicine cabinet, follow these maintenance guidelines:

- **Cleaning the Mirror and Cabinet:** Use a soft, damp cloth and a mild, non-abrasive glass cleaner to clean the mirror surface. For the aluminum frame and interior, wipe with a soft cloth and a gentle, non-abrasive cleaner or alcohol. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Shelf Care:** The glass shelves can be removed for cleaning. Wash them with warm, soapy water and dry thoroughly before reinserting.
- **Hinge Maintenance:** The 120° soft-close hinges are designed for durability. If you notice any stiffness or misalignment, refer to the installation guide for adjustment instructions.
- **Electrical Components:** Ensure all electrical connections are secure. Do not attempt to repair electrical components yourself. Contact qualified personnel for any electrical issues.

## TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Cabinet door won't close:** Check if the hinges are correctly installed or if there's any obstruction. Adjust the screws on the hinges to achieve proper alignment for the door to close.
- **Internal lighting or other electronic features not working:** Ensure the power plug is properly inserted and the power switch is turned on. If the clock, temperature display, or buttons aren't functioning, unplug the electrical connection between the door and the cabinet for one to two hours, then restart the mirror cabinet to see if it works.
- **Can the lighting for the clock and temperature display on the mirror cabinet be turned off?** No, the lighting for the clock and temperature display cannot be turned off.
- **Rust or marks on the cabinet:** Clean with non-abrasive cleaner or alcohol.

## WARRANTY AND SUPPORT

ExBrite is committed to providing high-quality products and excellent customer service.

- **Free Repair:** Enjoy free repair services for your medicine cabinet within 2 years of purchase.
- **Replacement for Damaged or Quality Issues:** If you receive a damaged product or encounter quality issues, simply provide us with pictures of the damaged cabinet or the quality issue. We will send you a new cabinet for free, without requiring you to return the old one or pay any additional costs.
- **Customer Service:** ExBrite After-Sales provides 24/7 support. For any inquiries or assistance, please contact our customer service team.

© 2024 ExBrite. All rights reserved.  
For more information, visit [ExBrite Store](#)

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question