

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LifeBasis](#) /

› [LifeBasis Tattoo Stencil Transfer Machine User Manual](#)

LifeBasis B0BQ6LVPF9

LifeBasis Tattoo Stencil Transfer Machine User Manual

Model: B0BQ6LVPF9

1. PRODUCT OVERVIEW

The LifeBasis Tattoo Stencil Transfer Machine is a professional thermal printer designed for transferring tattoo designs onto stencil paper. It offers efficient and accurate replication of various patterns, including simple lines, complex lines, and shaded designs. This device supports A4 and A5 paper sizes and operates without the need for ink or replacement parts.

2. SETUP INSTRUCTIONS

2.1 Unboxing and Components

Upon unboxing, verify that all components are present:

- LifeBasis Tattoo Stencil Transfer Machine
- Power Cable
- User Manual
- 20 sheets of Tattoo Stencil Transfer Paper

2.2 Machine Orientation and Controls

Familiarize yourself with the machine's layout and control panel:

Operation Panel Introduction

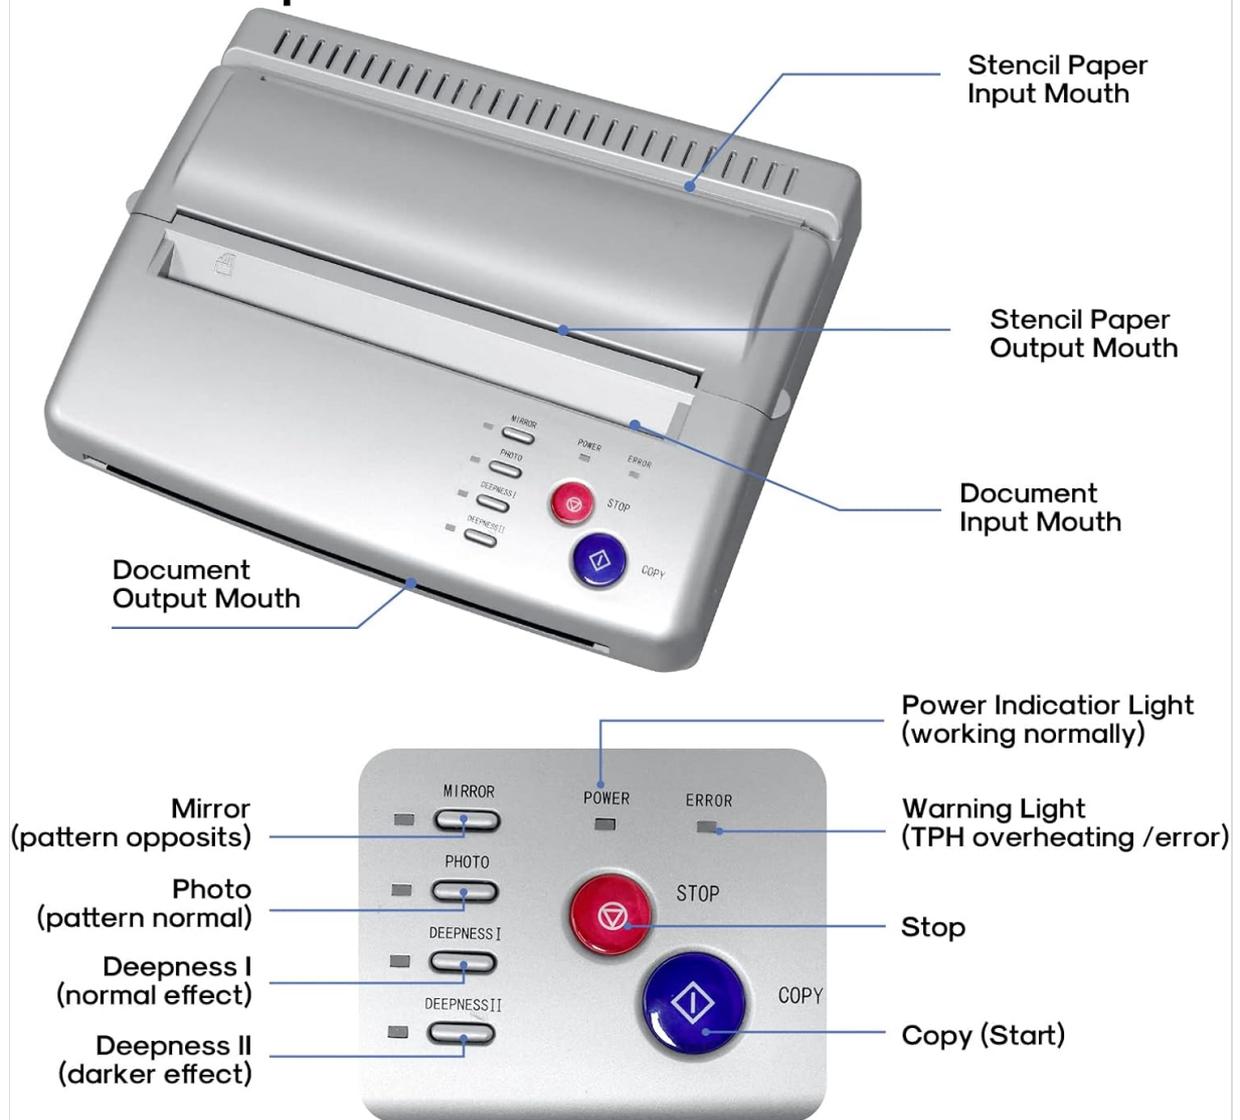


Image: Overview of the machine's operation panel, indicating buttons for Mirror, Normal, Deepness I, Deepness II, Power, Error, Stop, and Copy.

2.3 Initial Power On

Connect the power cable to the machine and a suitable power outlet. Press the power switch located on the side of the machine to turn it on. Allow the machine to heat up for a few moments.

3. OPERATING INSTRUCTIONS

3.1 Preparing Transfer Paper

Tattoo transfer paper consists of multiple layers. For optimal transfer, remove the protective film and the yellow backing sheet, leaving the white tracing sheet and blue carbon sheet. Ensure the white paper faces up and the blue paper faces down when inserting into the machine.

HOW TO USE THE TATTOO TRANSFER MACHINE



Image: Step-by-step guide on how to prepare the tattoo transfer paper by removing the protective layers.

3.2 Loading Paper and Pattern

1. Open the cover of the transfer machine.
2. Carefully insert the prepared transfer paper into the paper guide slot, ensuring it is centered and straight. The top of the paper should block the transducers.
3. Place your original pattern paper into the document input mouth.
4. Close the machine cover. A 'click' sound indicates secure closure.

3.3 Selecting Copy Mode and Deepness

The machine offers two copy modes and two deepness settings:

- **Mirror Copy:** For patterns that need to be reversed (e.g., text).
- **Normal Copy:** For standard patterns.
- **Deepness I:** Normal effect for standard lines.
- **Deepness II:** Darker effect for more pronounced lines.

Select the desired mode and deepness level using the buttons on the control panel.

3.4 Initiating Transfer

Once the paper and pattern are correctly loaded and settings are selected, press the **COPY** button to start the transfer process. The machine will feed the pattern and transfer the design onto the stencil paper.



Image: The transfer machine actively printing a design onto stencil paper, illustrating the process.

3.5 Transfer Effect Comparison

The machine is designed to produce clear transfers for various line patterns. For best results, use patterns with clear lines and light backgrounds.

LINES PATTERNS



Before



After

SHADED PATTERNS



Before



After

Image: Visual comparison of original line and shaded patterns versus their transferred stencil versions, highlighting clarity.

3.6 Official Product Videos

Your browser does not support the video tag.

Video: Demonstrates the LifeBasis Tattoo Stencil Transfer Machine in operation, showcasing its features and ease of use.

Your browser does not support the video tag.

Video: A detailed look at the LifeBasis Tattoo Stencil Printer, illustrating the paper loading and printing process.

Your browser does not support the video tag.

Video: User Guide providing comprehensive instructions on how to use the Phomemo-YQ printer, including phone, MacOS, and Windows usage.

4. MAINTENANCE

- Regularly wipe the roller to prevent residue buildup and ensure smooth paper feeding.
- After 1-2 transfers, allow the machine to rest for a few minutes to prevent overheating and ensure optimal transfer quality.

5. TROUBLESHOOTING

-
- **Poor Transfer Quality:** Ensure the machine has rested after consecutive transfers. Check that the transfer paper and pattern paper are correctly aligned and inserted. Adjust deepness settings if lines are too light.
 - **Paper Jam:** Open the machine cover and carefully remove any jammed paper. Ensure paper is inserted straight and centered.
 - **Indicator Light Red:** This typically indicates no paper is loaded or a paper feeding issue. Load paper correctly; the light should turn green.
 - **Machine Not Turning On:** Ensure the power cable is securely connected and the power switch is on. If battery-operated, ensure it is charged using the original USB cable.

6. SPECIFICATIONS

- **Model:** B0BQ6LVPF9
- **Color:** Silver
- **Package Dimensions:** 12.8 x 11.97 x 5.43 inches
- **Item Weight:** 4.99 pounds
- **Supported Paper Sizes:** A4, A5
- **Manufacturer:** Life Basis
- **Date First Available:** December 15, 2022

7. WARRANTY AND SUPPORT

For any questions or issues regarding the product, please contact LifeBasis customer support for assistance. Solutions will be provided promptly.