

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Osim](#) /

› [OSIM uVision Air Eye Massager Instruction Manual OS-1202](#)

Osim OS-1202

OSIM uVision Air Eye Massager Instruction Manual

Model: OS-1202

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the OSIM uVision Air Eye Massager. Failure to follow these instructions may result in injury or damage to the device.

- This product is not intended for self-diagnosis or self-treatment of conditions that should be managed by a qualified healthcare provider.
- Consult your healthcare provider before use if you are under any medication or fall into any of the following categories:
 - Heart diseases
 - High or low blood pressure, deep vein thrombosis (DVT)
 - Pregnant
 - Diabetes
 - Individuals fitted with medical implants (e.g., pacemaker, automatic cardiac defibrillator (AICD))
 - Recently underwent surgical operations
 - Those with any bone conditions like fractures, osteoporosis
- Do not use the device while driving or operating heavy machinery.
- Keep out of reach of children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The OSIM uVision Air Eye Massager is designed to provide targeted airbag massage and soothing warmth to help alleviate eye fatigue, dark circles, fine lines, and dry eyes. Its foldable and lightweight design ensures portability.

uVision Air

Your eye care
routine essential



Image: The OSIM uVision Air Eye Massager being worn by a woman relaxing, illustrating its intended use for daily eye care.

Key Features:

- **Airbag Massage:** Strategically positioned airbags target vital acupressure points around the eyes.
- **Soothing Warmth:** Provides an optimum temperature of 40°C - 49°C to enhance massage benefits.
- **Portable Design:** Foldable and lightweight for easy transport.
- **Multiple Programs:** Three specialized massage programs to suit different needs.
- **USB Charging:** Convenient charging for on-the-go use.

3. SETUP AND CHARGING

Charging the Device:

1. Locate the USB input port on the massager.
2. Connect the provided USB cable to the massager and a compatible 5V-1A USB power source (e.g., wall adapter, computer USB port).

3. The charging indicator light will illuminate. A full charge provides up to 4 hours of use.
4. Once fully charged, disconnect the USB cable.



Adjustable Strap

Ensure that the uVision Air fits perfectly and snug for maximum comfort and effectiveness.

USB Charging

USB charging so you can enjoy your eye care routine on-the-go. Up to 4 hours of use per full charge.

Image: A detailed view of the USB charging port on the OSIM uVision Air Eye Massager, highlighting its charging capability.

Adjusting the Strap:

The uVision Air features an adjustable strap to ensure a comfortable and secure fit for maximum effectiveness.

1. Place the massager over your eyes.
2. Adjust the strap until the device fits perfectly and snugly without being too tight.



Easy One-touch Button

Switch on/off and toggle between different massage programs with just one button.

Plush Cushion, Soft Leatherette

Easy-to-clean leatherette with plush cushion that provides extra comfort and support for your eyes.



Image: A close-up showing the adjustable strap and the one-touch control button of the OSIM uVision Air Eye Massager.

4. OPERATING INSTRUCTIONS

Power On/Off and Program Selection:

The device is operated using a single one-touch button.

1. **To Power On:** Press and hold the power button for a few seconds until the device activates.
2. **To Select Program:** Briefly press the power button to cycle through the available massage programs.
3. **To Power Off:** Press and hold the power button again until the device shuts down.

Massage Programs:

The uVision Air offers three specialized massage programs, each designed for different needs:

- **Soft (Sleep) Mode:** Ideal for improving sleep quality and reducing the appearance of dark circles with soothing warmth.



For The Nocturnal

Stay up late at night and has poor sleep patterns

Concerns: Dark circles and puffy eyes

Massage Program Mode: Soft (Sleep)

Improve sleep quality and the appearance of dark circles with soothing warmth



Warmth



Image: A woman sleeping while wearing the OSIM uVision Air, demonstrating the 'For The Nocturnal' program mode for sleep and dark circles.

- **Medium (Energize) Mode:** Refreshes tired and dry eyes, especially after long screen exposure, using low airbag massage and soothing warmth.



For The Busy Executive

Spend long hours on screen with exposure to blue light

Concerns: Dry and tired eyes

Massage Program Mode: Medium (Energize)

Refresh your eyes with airbag massage and soothing warmth



Warmth



Low airbag massage

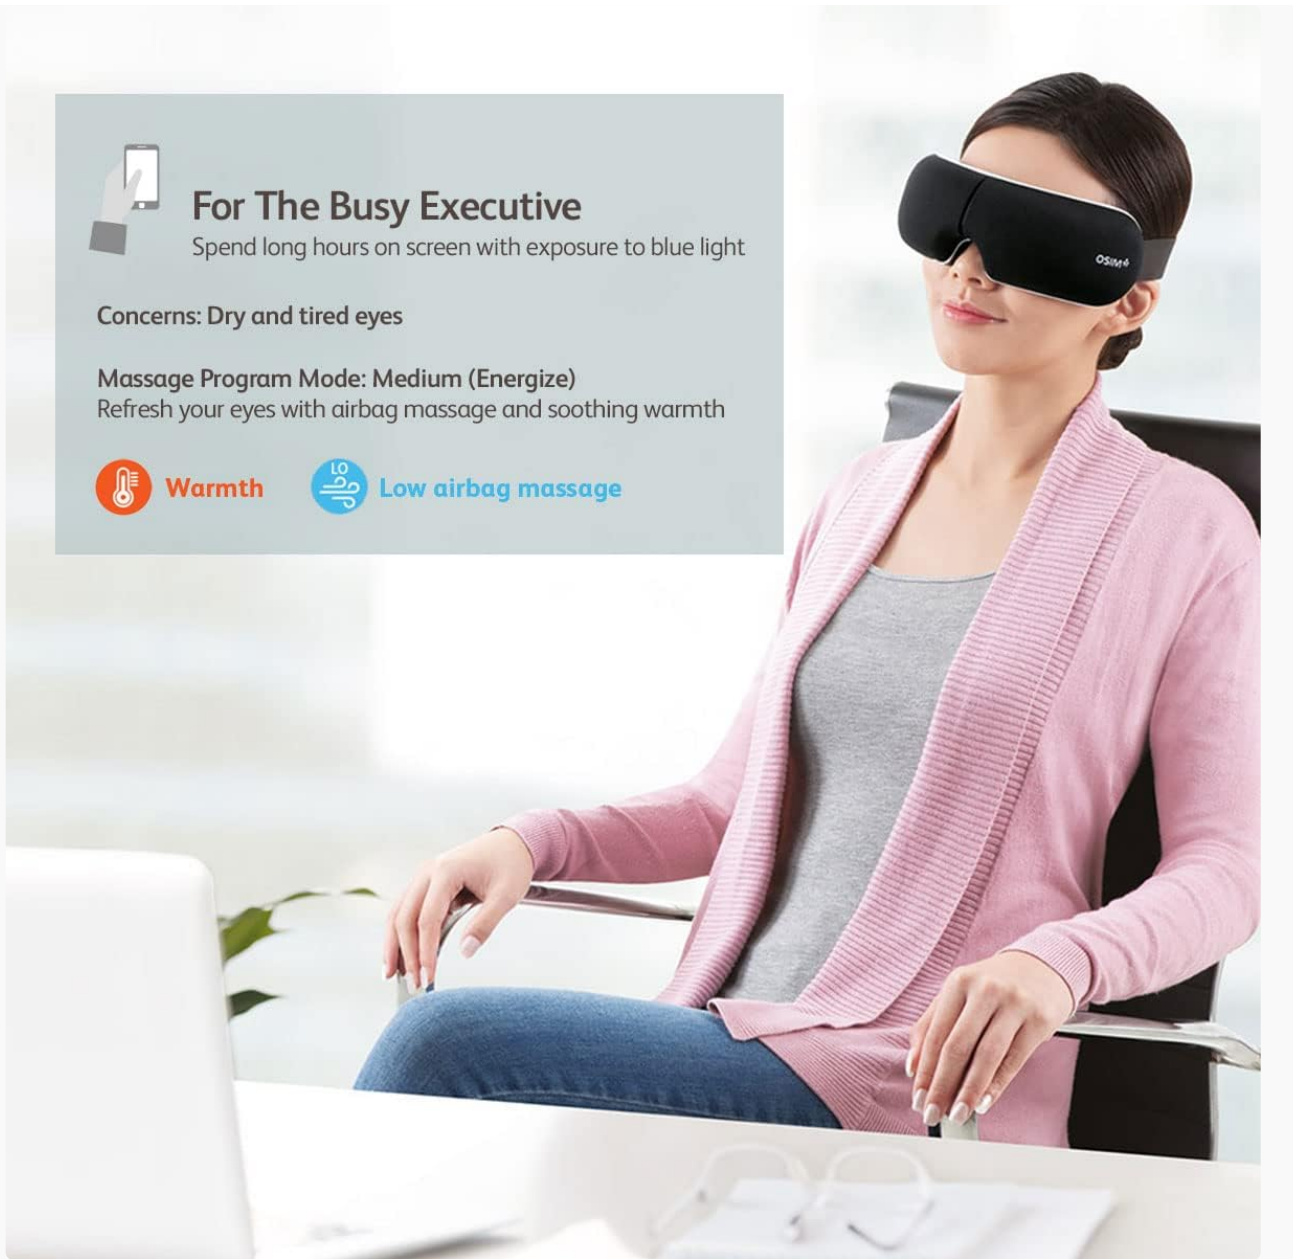


Image: A woman wearing the OSIM uVision Air while working at a desk, illustrating the 'For The Busy Executive' program mode for dry and tired eyes.

- **Hard (Beauty) Mode:** Provides a firming effect to address fine lines and wrinkles with high airbag massage.



For The Beauty Lover

Take good care of skin to prevent aging

Concerns: Fine lines and wrinkles

Massage Program Mode: Hard (Beauty)

Reverse the signs of aging with airbag massage for a firming effect



High airbag massage



Image: A woman smiling while wearing the OSIM uVision Air, demonstrating the 'For The Beauty Lover' program mode for fine lines and wrinkles.

Targeted Acupressure Points:

The airbag massage targets specific acupressure points for maximum benefit:

- **Zān Zhú massage (攒竹)**: Helps with eye fatigue.
- **Shī Zhú Kōng massage (睛明)**: Relieves migraine and helps firm droopy eyelids.
- **Tài Yáng massage (太阳)**: Alleviates headache and stress.
- **Sì Bái massage (四白)**: Relieves dry and itchy eyes.

Targeted Massage For Your Eyes

Strategically positioned airbags to target vital acupressure points.



1. Zǎn Zhú massage (攒竹穴)

Helps with eye fatigue.

Targeted massage for your eyes

2. Shī Zhú Kōng massage (丝竹空穴)

Relieves migraine and firm droopy eyelids.

3. Tài Yáng massage (太阳穴)

Alleviates headache and stress.

4. Sì Bái massage (四白穴)

Relieves dry and itchy eyes.

Soothing Warmth

Optimum temperature of 40°C - 49°C to further enhance massage benefits

Image: A diagram illustrating the specific acupressure points around the eye that the OSIM uVision Air targets for various benefits.

5. MAINTENANCE AND STORAGE

Cleaning:

The uVision Air features easy-to-clean leatherette and plush cushioning.

- Wipe the surface of the massager with a soft, damp cloth.
- Do not use abrasive cleaners or immerse the device in water.
- Ensure the device is completely dry before storing or using again.

Storage:

After use, store the massager in a clean, dry place. Its foldable design makes it compact for storage.



Lightweight and Portable

The foldable and lightweight uVision Air allows you to easily slip it in your bag, so you can soothe your tired eyes wherever you are.

Image: The OSIM uVision Air Eye Massager displayed in its folded position, emphasizing its lightweight and portable design for easy storage.

6. TROUBLESHOOTING

If you encounter any issues with your OSIM uVision Air Eye Massager, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- **No massage or warmth:** Check that the device is powered on and a program is selected. If the battery is low, the functions may be limited. Recharge the device.
- **Discomfort during use:** Adjust the strap for a more comfortable fit. If discomfort persists, discontinue use and consult a healthcare professional.
- **Charging issues:** Ensure the USB cable is securely connected to both the device and the power source. Try a different USB cable or power adapter if available.

If the problem persists after trying these steps, please contact OSIM customer support.

7. SPECIFICATIONS

Specification	Detail
Model Number	OS-1202
USB Input	5V --- 1A
Net Weight	Approx. 300g
Gross Weight	Approx. 770g
Material	Plastic, Silicone
Color	Black
Power Source	Corded Electric (for charging), Cordless (for use)
Special Features	Fatigue relief, Foldable
Optimum Warmth Temperature	40°C - 49°C
Battery Life	Up to 4 hours of use per full charge

8. WARRANTY INFORMATION

OSIM products are manufactured to the highest quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official OSIM website. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For further assistance, product inquiries, or technical support, please contact OSIM customer service through their official website or the contact information provided in your product packaging.

You can visit the [Osim Store on Amazon](#) for more information.

