

Ugee M908

Ugee M908 Graphic Tablet User Manual

Model: M908

1. INTRODUCTION

Thank you for choosing the Ugee M908 Graphic Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it carefully to ensure optimal performance and longevity of your graphic tablet.

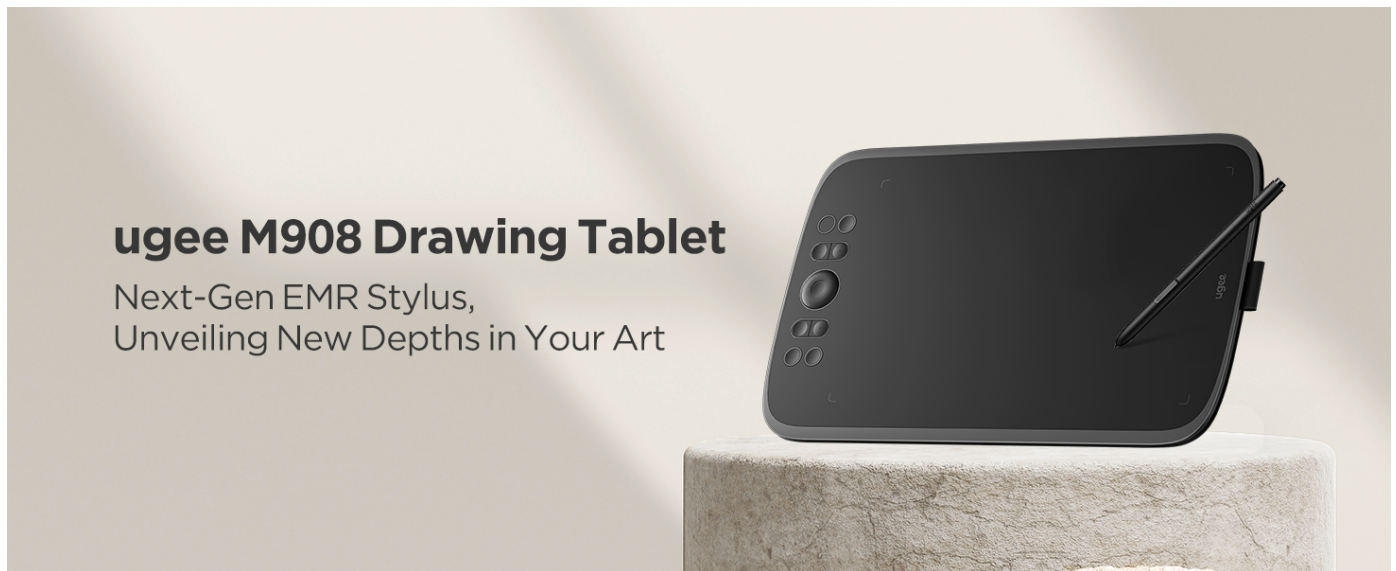


Image 1: Ugee M908 Graphic Tablet with its battery-free stylus.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Active Area:** 10 x 6.25 inches, providing ample space for creative work.
- **Stylus:** PH23 new generation battery-free stylus with 8192 pressure sensitivity levels and 60° tilt recognition.
- **Customizable Controls:** Integrated scroll wheel for canvas adjustment and 8 programmable shortcut keys for

enhanced workflow efficiency.


- **Connectivity:** Type-C port for seamless connection to various devices.
- **Compatibility:** Supports Windows, Mac, Android, Chrome OS, and Linux operating systems.

2.2 Package Contents

The Ugee M908 Graphic Tablet package includes the following items:

- Ugee M908 Drawing Tablet (x1)
- PH23 Battery-Free Stylus (x1)
- Replacement Nibs (x10)
- Nib Extractor (x1)
- USB-A to C Cable (x1)
- Micro USB OTG Adapter (x1)
- Warranty Policy (x1)
- Quick Guide (x1)
- Quick Guide for Android (x1)

Contenuto della confezione

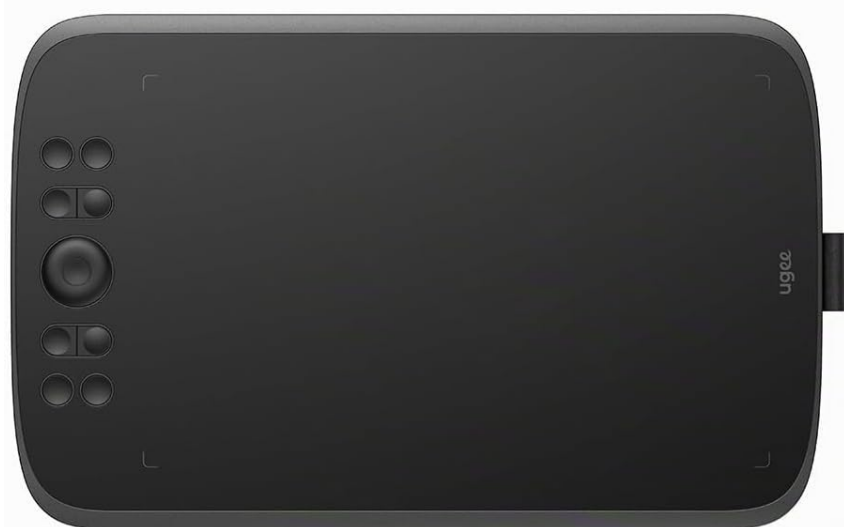

ugee M908 Drawing Tablet
x 1



Stilo 8192
x 1



Punte di ricambio
x (10pcs)




Cavo USB-A a C
x 1



Estrattore per punte
x 1



Micro USB
Adattatore OTG
x 1

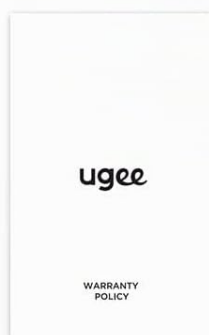

Warranty Policy
x 1



Quick Guide
x 1



Quick Guide
for Android
x 1

Image 2: All items included in the Ugee M908 Graphic Tablet package.

3. SETUP INSTRUCTIONS

3.1 Driver Installation

1. Visit the official Ugee website to download the latest driver for your M908 tablet.
2. Before installation, ensure all other graphic tablet drivers are uninstalled and close any drawing software.
3. Run the downloaded installer and follow the on-screen instructions.
4. Restart your computer after the installation is complete.

3.2 Connecting the Tablet

Connect the Ugee M908 tablet to your computer or compatible Android device using the provided USB-A to C cable. For Android devices, use the Micro USB OTG adapter if necessary.



Cambio dell'area di disegno unico

Compatibile con Android 6.0 e versioni successive tramite adattatori OTG



Image 3: The Ugee M908 tablet connected to a computer, highlighting its broad operating system compatibility.

3.3 System and Software Compatibility

The M908 is compatible with a wide range of operating systems and creative software:

- **Operating Systems:** Windows 7 or higher, Mac OS 10.10 or higher, Android 6.0 or higher, Chrome OS 88 or higher, and Linux.
- **Software:** Integrates with popular design and drawing applications such as Photoshop, Illustrator, Sai, Corel Painter, ibis Paint, Blender, GIMP, Maya, and more.

Extraordinary Compatibility

Ugee M908 is compatible with Windows 7 or later, Mac OS 10.10 or later, Chrome OS 88 or later, Android 6.0 or later, Harmony 2 or later, and Linux. Supporting mainstream designing and drawing software of various kinds.

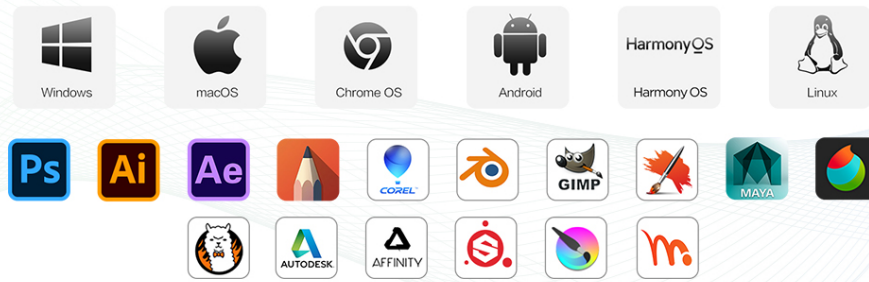


Image 4: A visual representation of the Ugee M908's compatibility with various operating systems and creative software.

4. OPERATING INSTRUCTIONS

4.1 Using the PH23 Battery-Free Stylus

The PH23 stylus offers a natural drawing experience with 8192 levels of pressure sensitivity and 60° tilt recognition. This allows for precise control over line thickness and shading. The stylus is designed to be free from rebound, wobble, or deformation, ensuring smooth and accurate strokes.

Design del rullo di smorzamento meccanico

Rotella di scorrimento + 8 tasti di scelta rapida

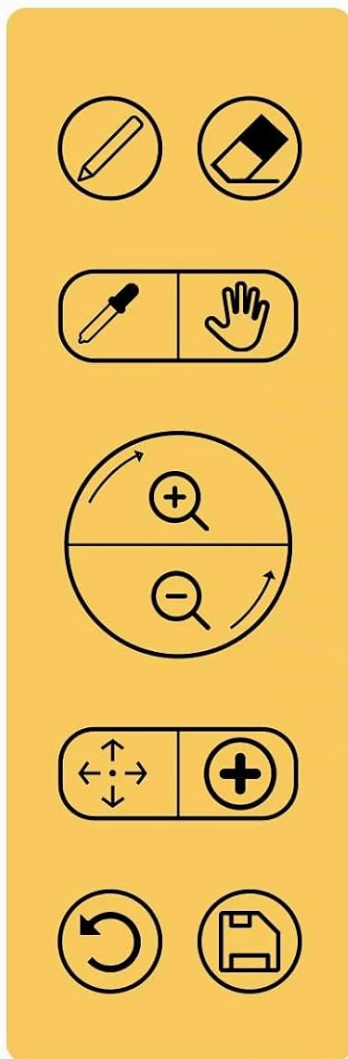


Image 5: Detailed features of the PH23 battery-free stylus, including pressure sensitivity and tilt function.

4.2 Customizing Shortcut Keys and Scroll Wheel

The M908 features a mechanical scroll wheel and 8 customizable shortcut keys. These can be configured through the tablet driver software to perform various functions, such as zooming, undo/redo, brush size adjustment, or switching tools. The tactile design of the keys allows for blind operation.

Fattore di forma con cornice stretta

Area di lavoro per il disegno più ampia



Image 6: Illustration of the scroll wheel and programmable shortcut keys on the tablet.

4.3 Workspace Modes (Computer vs. Phone)

The tablet supports different workspace modes depending on the connected device. When connected to a computer, it utilizes the full 10 x 6.25 inch active area. When connected to an Android phone or tablet, the active area automatically adjusts to a 2.8 x 6.25 inch section, optimizing for mobile use.

Compatibile con la maggior parte delle applicazioni



Image 7: The tablet connected to an Android device, showing the adjusted active drawing area for mobile use.

4.4 Multi-Situational Applications

The Ugee M908 is versatile and suitable for various applications, including digital drawing, sketching, 3D design, image editing, online teaching, remote work, and even gaming.

Crea con il tuo computer

Compatibile con Windows 7 o versioni successive, mac os 10.10 o versioni successive, Chrome 88 o versioni successive e Linux

*Non compatibile con iPhone/iPad



Image 8: Examples of the Ugee M908 tablet's diverse applications in different scenarios.

5. MAINTENANCE

5.1 General Care

- Keep the tablet and stylus clean by wiping them with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Do not use harsh chemicals or abrasive cleaners.
- Store the tablet in a safe place to prevent scratches or damage when not in use.

5.2 Replacing Pen Nibs

The PH23 stylus comes with 10 replacement nibs. When the pen nib wears down, use the provided nib extractor to carefully remove the old nib and insert a new one. Ensure the new nib is fully seated.

6. TROUBLESHOOTING

If you encounter issues with your Ugee M908 Graphic Tablet, please refer to the following common solutions:

Problem	Possible Cause	Solution
Stylus not responding or intermittent response	Driver issue, loose connection, worn nib, software conflict.	1. Ensure the USB cable is securely connected. 2. Reinstall the latest driver from the Ugee website. 3. Replace the pen nib if it appears worn. 4. Close other drawing software or tablet drivers.
Pressure sensitivity not working	Driver not installed correctly, software settings, pen malfunction.	1. Verify driver installation and restart your computer. 2. Check pressure sensitivity settings within your drawing software. 3. Test with another compatible software.
Shortcut keys not functioning	Driver not installed, incorrect key mapping.	1. Ensure the driver is installed. 2. Open the Ugee tablet settings and customize the shortcut key functions.
Tablet not recognized by Android device	OTG adapter issue, device compatibility.	1. Ensure your Android device supports OTG functionality. 2. Use the provided Micro USB OTG adapter correctly. 3. Check if your Android OS is 6.0 or higher.

If the problem persists, please contact Ugee customer support for further assistance.

7. SPECIFICATIONS

Below are the technical specifications for the Ugee M908 Graphic Tablet:



Active Area	10 x 6.25inch (254 x 158.75mm)
Battery-free Stylus	PH23
Levels of Pressure Sensitivity	8192
Report Rate	Max≥220RPS
Reading Height	Max≥10mm
Tilt Recognition	±60°
Product Dimension	330.1x 210.1x 9.3mm
Weight	495g
Shortcut Keys	1 scroll wheel + 8 buttons
Connectivity	USB-A to C cable

Image 9: Detailed product specifications for the Ugee M908 Graphic Tablet.

Feature	Detail
Active Area	10 x 6.25 inches (254 x 158.75 mm)

Feature	Detail
Stylus	PH23 Battery-free
Pressure Sensitivity	8192 Levels
Report Rate	Max ≥220 RPS
Reading Height	Max ≥10 mm
Tilt Recognition	±60°
Product Dimensions	330.1 x 210.1 x 9.3 mm
Weight	495g
Shortcut Keys	1 Scroll Wheel + 8 Customizable Buttons
Connectivity	USB-A to C Cable
Operating System Compatibility	Windows 7 or later, Mac OS 10.10 or later, Android 6.0 or later, Chrome OS 88 or later, Linux

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Ugee M908 Graphic Tablet comes with a warranty. Please refer to the included 'Warranty Policy' document in your package for detailed terms and conditions, including warranty period and coverage.

8.2 Customer Support

For technical support, driver updates, or any inquiries not covered in this manual, please visit the official Ugee website or contact Ugee customer service. Contact information can typically be found on the Ugee website or in your warranty documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question