



[Manuals.plus](#) /

> [ORALNER](#) /

> ORALNER 32-inch Electric Fireplace with Mantel Instruction Manual

ORALNER SF105-18G

ORALNER 32-inch Electric Fireplace with Mantel Instruction Manual

Model: SF105-18G

[Contents](#) [Setup](#) [Introduction](#) [Safety Information](#) [Package](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the ORALNER 32-inch Electric Fireplace with Mantel. This manual provides important information for the safe assembly, operation, and maintenance of your electric fireplace. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Connect to properly grounded outlets only.

- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- The fireplace includes an anti-tip design. Ensure it is properly installed to prevent accidental tipping.



Figure 1: Anti-tip design installation. This device helps secure the fireplace mantel to prevent accidental tipping, especially important in households with children or pets.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1 x 19-inch Electric Fireplace Insert

- 1 x 32-inch Mantel
- 1 x Remote Control
- 1 x User Manual (this document)



Figure 2: The ORALNER 32-inch Electric Fireplace with Mantel, showcasing its design and typical placement in a home environment.

4. ASSEMBLY AND SETUP

The fireplace mantel requires assembly. Follow the instructions provided with the mantel components. Ensure all connections are secure before proceeding.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Assemble Mantel:** Follow the step-by-step instructions included with the mantel. Typically, this involves attaching side panels, top, and base using the provided hardware.
3. **Insert Fireplace:** Once the mantel is assembled, carefully slide the 19-inch electric fireplace insert into the designated opening in the mantel. Ensure it fits snugly and is properly aligned.
4. **Position Fireplace:** Place the assembled fireplace on a flat, stable surface, away from drapes, furniture, and high-traffic areas. Ensure there is adequate clearance around the unit for proper

ventilation.

5. **Secure Anti-Tip Device:** Install the anti-tip device as shown in Figure 1 to secure the fireplace to the wall, preventing accidental tipping.
6. **Power Connection:** Plug the fireplace into a grounded 120V AC outlet. Do not use extension cords or power strips.



Figure 3: Product dimensions for the mantel (32"W x 9"D x 30"H) and the fireplace insert (18"W x 5"D x 17"H).

5. OPERATING INSTRUCTIONS

The ORALNER Electric Fireplace can be operated using the control panel on the unit or the included remote control.

5.1 Control Panel and Remote Control Overview



2-Way Operation



Figure 4: Overview of the control panel buttons and remote control functions, including Power, Heater Control, Flame Control, Timer Control, Heater Up, and Heater Down.

5.2 Basic Operation

- **Power On/Off:** Press the **Power Button** on the control panel or remote to turn the unit on or off.
- **Flame Effect:** Press the **Flame Control** button to cycle through 3 different flame brightness levels (L1, L2, L3). The fireplace can be used with or without heat.
- **Heater Function:** Press the **Heater Control** button to activate the heating function. Use the **Heater Up** and **Heater Down** buttons to adjust the thermostat to your desired temperature (17°C - 27°C). The heater provides warmth for up to 400 sq ft.
- **Timer Setting:** Press the **Timer Control** button to set the automatic shut-off timer. Options typically range from 0.5 to 6 hours.

3D Realistic Flame Effect



No Smoke



No Ashes



No Smell



3-level Flame Brightness



Figure 5: The 3D realistic flame effect with three adjustable brightness levels (L1, L2, L3) for varied ambiance.

High-Efficiency Heating

The built-in thermostat makes your room always in a suitable temperature

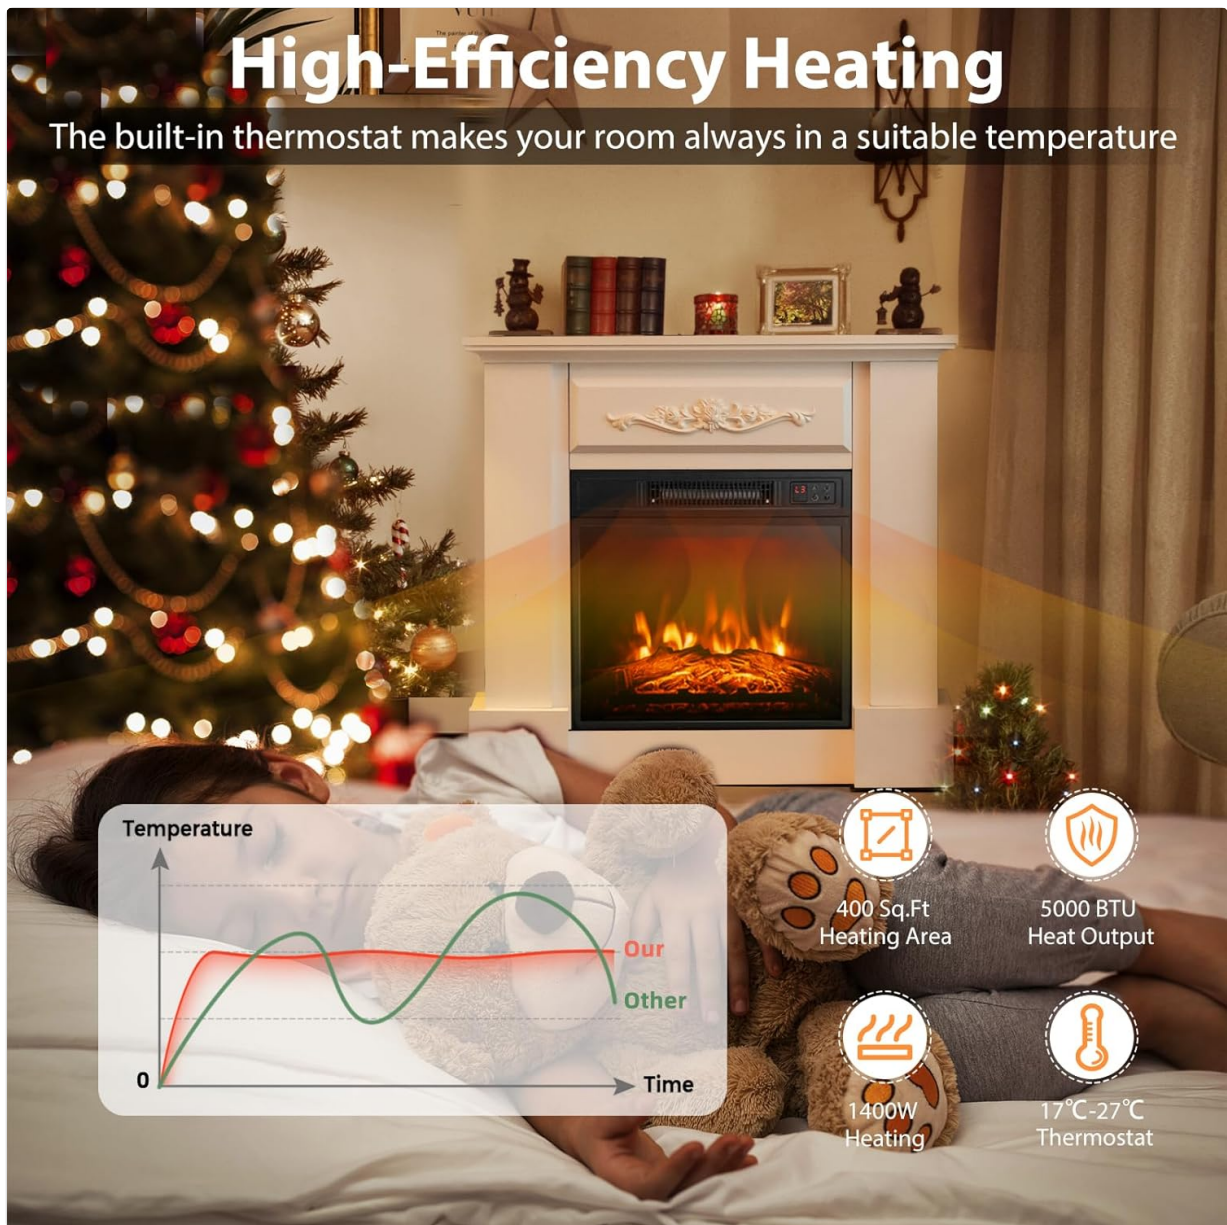


Figure 6: High-efficiency heating with a built-in thermostat, covering up to 400 sq ft with 5000 BTU heat output and 1400W power.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your electric fireplace.

- **Cleaning:** Always unplug the unit before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Air Vents:** Keep the air inlet and outlet vents clear of dust and debris to ensure proper airflow and prevent overheating.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, dust-free location.



Figure 7: Features like an easy-to-clean surface, clearly marked air inlet and outlet, and a UL certified plug for safety.

7. TROUBLESHOOTING

If you encounter issues with your electric fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power cord not plugged in, circuit breaker tripped.	Ensure unit is plugged into a grounded outlet. Check household circuit breaker.
No heat output.	Heater function not activated, thermostat set too low, overheat protection activated.	Activate heater function. Increase thermostat setting. Unplug unit for 15 minutes to reset overheat protection.
Flame effect not working.	Flame effect turned off, internal component issue.	Press the Flame Control button to activate. If issue persists, contact customer support.

Problem	Possible Cause	Solution
Remote control not working.	Batteries dead or incorrectly inserted, remote out of range.	Replace batteries (2 x AAA, not included). Ensure remote is within 8m effective control distance and pointed at the unit.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	ORALNER
Model Name	Freestanding Electric Fireplace
Item Model Number	SF105-18G
Product Dimensions (Mantel)	9"D x 32"W x 30"H
Fireplace Insert Size	18" x 17"
Material	Metal, Wood Frame
Power Source	Corded Electric
Power Consumption	1400 Watts
Heat Output	5000 British Thermal Units (BTU)
Heating Coverage	Up to 400 sq ft
Thermostat Range	17°C - 27°C (64°F - 82°F)
Flame Effects	3-level brightness
Timer	0.5 - 6 hours
Special Features	Remote control, Safety Shut Off, Overheat Protection
Item Weight	40 Pounds
UPC	798470130296

9. WARRANTY AND CUSTOMER SUPPORT

This ORALNER product comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical assistance, replacement parts, or any questions regarding your product, please contact ORALNER customer support.

Customer Support: Refer to the contact information provided on the ORALNER official website or your purchase documentation.

Online Resources: Visit the [ORALNER Store on Amazon](#) for additional product information and support.

