

## MEGOO B08L793CZ9

# MEGOO LED Mask with Bluetooth Programmable App (Battery Model)

User Instruction Manual

## INTRODUCTION

---

Thank you for choosing the MEGOO LED Mask. This full-face LED mask offers a unique way to express creativity and enhance various events. With its programmable Bluetooth app, you can customize dynamic and static displays, upload text and images, and even control animations with gestures. Designed for comfort and ease of use, this mask is suitable for adults and children for occasions such as parties, cosplay, Halloween, and electronic music festivals.




*The MEGOO LED Mask, shown with its packaging and a smartphone displaying the control app.*

## PRODUCT FEATURES

---

- **High-Quality LED Display:** Features 2074 (2121RGB) lamp beads for bright and vibrant graphics.
- **Comfortable Design:** Lightweight (303g) with an adjustable strap and soft padding for extended wear.
- **App Control:** Connects via Bluetooth to the 'Shining Mask' app for extensive customization.
- **Dynamic & Static Modes:** Offers 45 dynamic display modes and 70 static display images.
- **DIY Customization:** Upload text, images, or create graffiti patterns through the app.
- **Gesture Control:** Change display patterns with a simple hand gesture in front of the mask's sensor.
- **Battery Operated:** Requires 3 AA dry batteries (not included) for power.

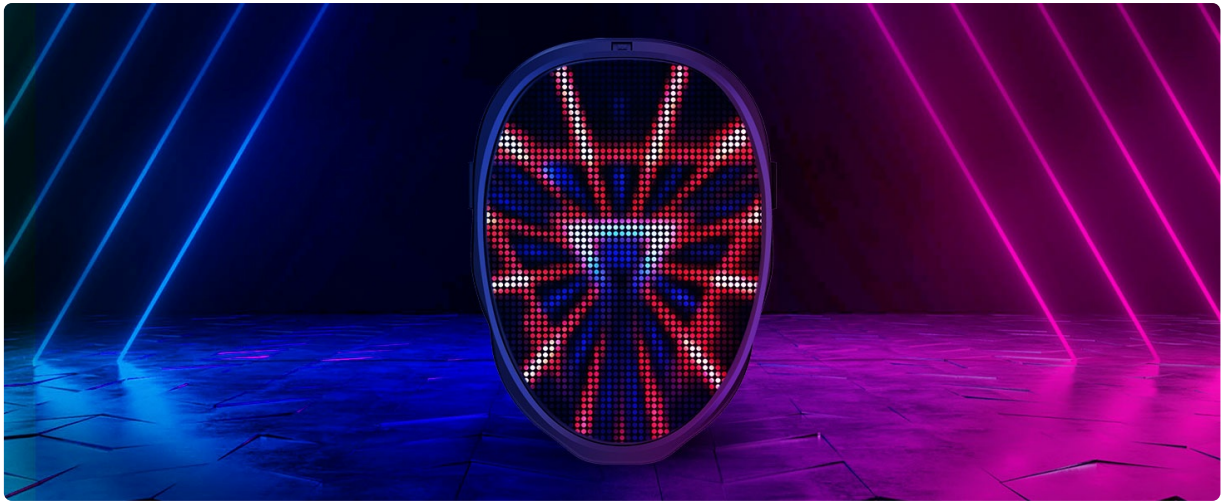

Detailed view of the MEGOO LED Mask highlighting its dimensions, weight, and the number of LED beads.

## SETUP INSTRUCTIONS

---

### 1. Battery Installation:

- Locate the battery compartment on the mask.
- Insert 3 AA dry batteries (not included), ensuring correct polarity.



Diagram showing the correct placement of 3 AA dry batteries into the mask's compartment.

2. **Power On:** Press the power button located on the mask to turn it on.

### 3. App Download:

- Scan the QR code provided in the product packaging or search for 'Shining Mask' in your mobile app store (App Store for iOS, Google Play for Android).
- Download and install the app.

### 4. Bluetooth Connection:


- Ensure Bluetooth is enabled on your mobile device.
- Open the 'Shining Mask' app.
- On the app's home page, click 'Connect Device' and select the mask's Bluetooth ID from the list.
- The mask will display a connection icon upon successful pairing.

## OPERATING INSTRUCTIONS

---

Once connected to the 'Shining Mask' app, you can explore various customization options:

- **Dynamic & Static Displays:** Browse through 45 dynamic modes and 70 static images within the app's gallery. Select your preferred display to instantly change the mask's appearance.
- **Text Editing Mode:** Input custom text, choose text color, and select a background pattern.
- **Picture Mode:** Upload your own images or photos to be displayed on the mask. The app will adjust the image for optimal display.
- **DIY Mode:** Create unique graffiti patterns or animations directly within the app.
- **Musical Rhythm Mode:** The mask can automatically scan local music and play it, displaying rhythm effects that synchronize with the audio.

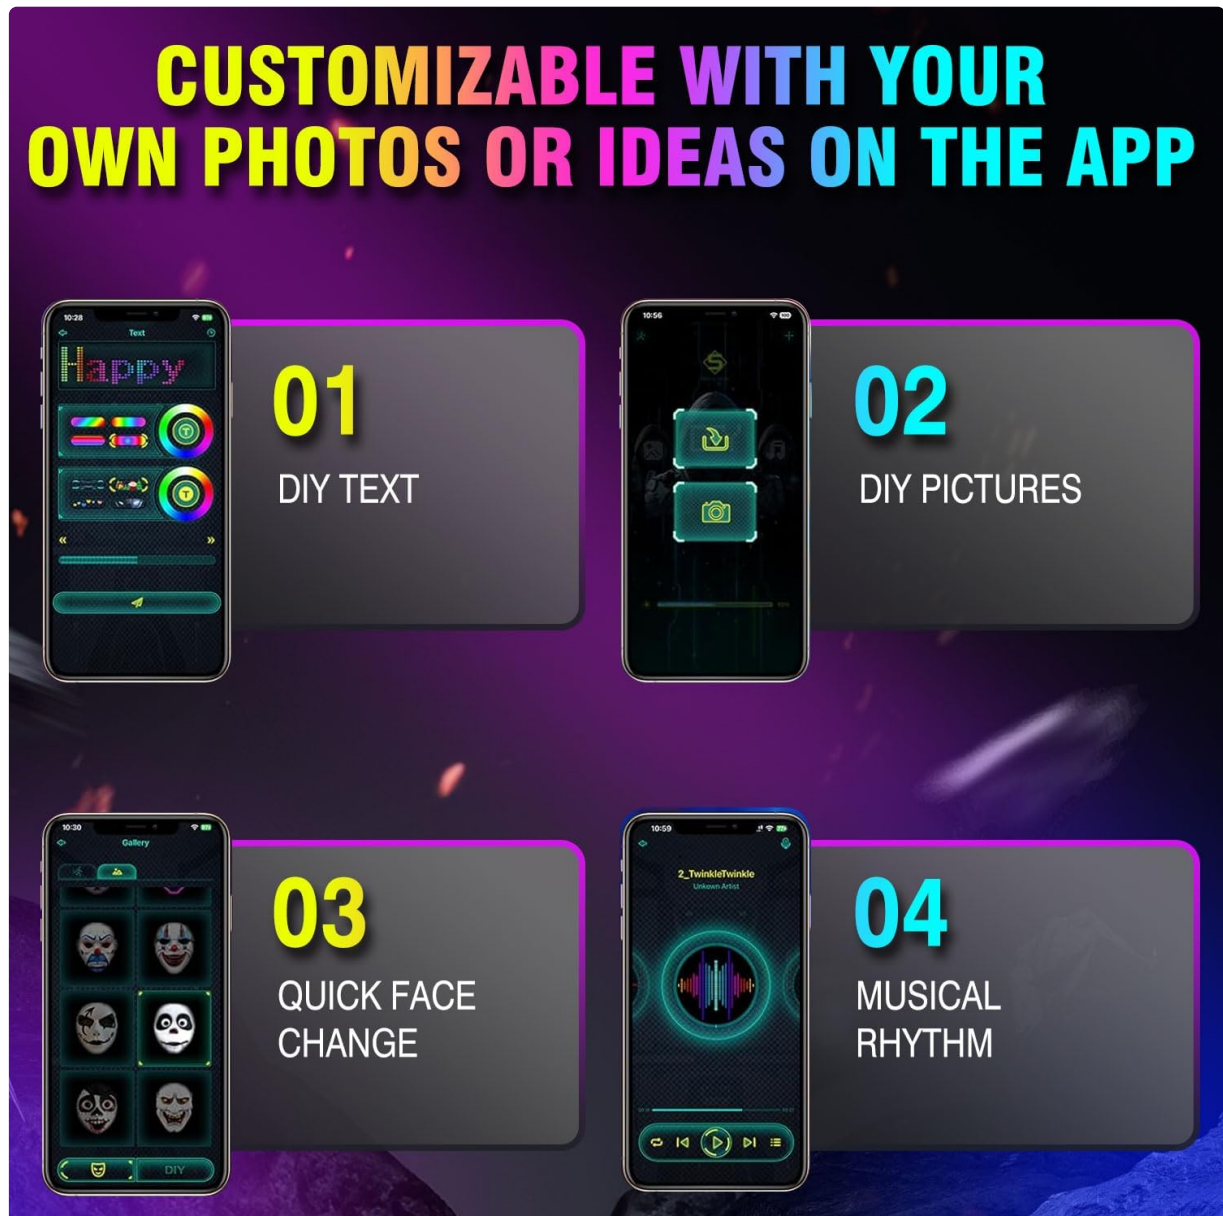

*The 'Shining Mask' app interface, demonstrating options for DIY text, pictures, quick face changes, and musical rhythm synchronization.*

*Official product video demonstrating the MEGOO LED Mask's app control features, including text editing, animation, picture upload, DIY mode, and music rhythm effects.*

## GESTURE CONTROL

The MEGOO LED Mask features a gesture sensor that allows you to change display patterns without using

your phone. To activate or deactivate this feature:

- Within the 'Shining Mask' app, navigate to the settings to enable or disable gesture control.
- When enabled, simply place your hand approximately 4cm in front of the mask's sensor for 5 seconds. The mask will display 'OK' or 'X' to confirm activation or deactivation of the face change function.
- Once activated, a quick wave of your hand in front of the sensor will cycle through the available display patterns.



*An image illustrating how to use hand gestures to change the display on the MEGOO LED Mask.*

## MAINTENANCE

---

- **Cleaning:** Hand wash with mild soap and water after use.
- **Drying:** Air dry the mask completely before storage or next use.
- **Storage:** Store in a cool, dry place away from direct sunlight to prolong battery life and LED integrity.

## TROUBLESHOOTING

---

- **Mask Not Turning On:**

- Ensure batteries are correctly inserted with proper polarity.
- Replace with fresh AA dry batteries.
- **App Not Connecting to Mask:**
  - Verify Bluetooth is enabled on your mobile device.
  - Restart the mask and the 'Shining Mask' app.
  - Ensure the mask is within close proximity to your device.
  - If issues persist, try connecting directly from your phone's Bluetooth settings before opening the app.
- **Display Flickering (when recording):** This is a common effect when recording LED displays with a camera and is not visible to the naked eye.
- **Limited Visibility:** The mask's design may limit peripheral vision. Exercise caution when wearing in environments requiring full situational awareness.

## SPECIFICATIONS

---

Feature	Detail
Brand	MEGOO
Model	B08L793CZ9 (Battery)
Material	Plastic
LED Beads	2074 PCS (2121RGB Lamp Beads)
Power Source	3 AA Dry Batteries (not included)
Connectivity	Bluetooth (Shining Mask App)
Display Modes	45 Dynamic, 70 Static
Control Features	Text/Image Upload, DIY, Musical Rhythm, Gesture Control
Care Instructions	Hand wash with mild soap and water, air dry.

## WARRANTY AND SUPPORT

---

MEGOO LED Masks undergo quality inspection before leaving the factory. For any service inquiries or support regarding your MEGOO LED Mask, please feel free to contact the MEGOO Service Team. Refer to your product packaging or the official MEGOO website for specific warranty details and contact information.