

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AZLA](#) /

> [AZLA SednaEarfit Origin \(S\) Earbud Tips Instruction Manual](#)

AZLA AZL-ORIGIN-ST-S

AZLA SednaEarfit Origin (S) Earbud Tips Instruction Manual

Model: AZL-ORIGIN-ST-S

[Overview](#)

[Setup](#)

[Usage](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. PRODUCT OVERVIEW

The AZLA SednaEarfit Origin earbud tips are designed to enhance the audio experience and comfort of your in-ear monitors and headphones. Crafted from medical-grade silicone, these tips provide a secure fit, improved noise cancellation, and clear sound reproduction. The design is based on extensive ear canal data to ensure optimal fit for a wide range of users.



Figure 1: AZLA SednaEarfit Origin (S) Earbud Tips with Adapters.

Key Features:

- **Medical Silicone Construction:** Ensures safety and comfort for extended wear.



Figure 2: Medical Silicone Certification for AZLA SednaEarfit Origin tips.

- **Tapered Structure:** Designed to prevent discomfort and maximize noise cancellation.
- **Straight Internal Structure:** Minimizes bass distortion and treble for enhanced sound clarity.



Figure 3: Design features for comfort and sound insulation.

- **Universal Compatibility:** Includes adapters for thin-nozzle earbuds, compatible with various models including Sony WF-1000XM4, WF-1000XM3, LinkBuds S, WF-H800, and WF-C700N.
- **Science-Backed Design:** Engineered using data from 788 ear canal molds for an optimal fit.

2. SETUP AND INSTALLATION

Proper installation of the earbud tips is crucial for achieving the best sound quality and comfort. Follow these steps to install your AZLA SednaEarfit Origin tips.

2.1 Selecting the Correct Size

The SednaEarfit Origin tips are available in multiple sizes (SS, S, MS, M, ML, L). Selecting the correct size is essential for a secure fit and effective noise cancellation. Refer to the size chart below and compare with your existing ear tips or ear canal measurements.

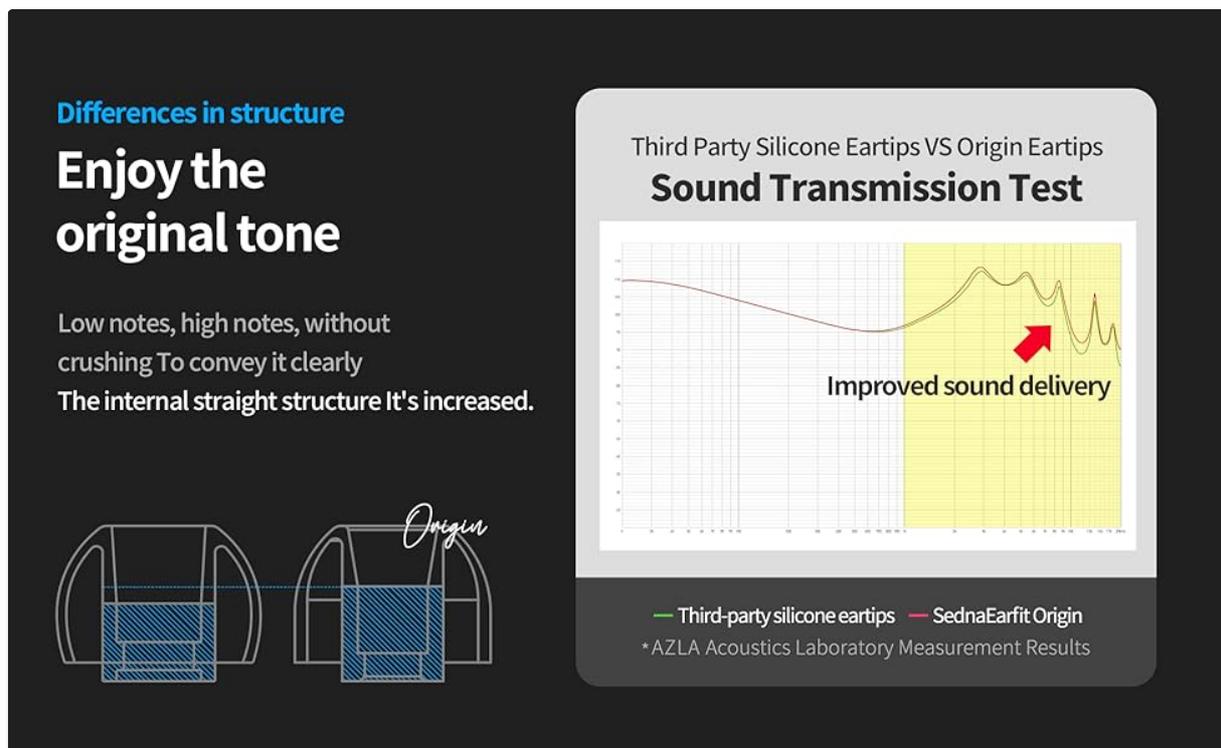


Figure 4: SednaEarfit Origin Size Chart. Measure your earbud nozzle and compare with the outer diameter of the tips for optimal fit.

2.2 Attaching the Ear Tips

1. **Remove Existing Tips:** Gently pull off the current ear tips from your earbud nozzles.
2. **Check Nozzle Size:** Determine if your earbud has a standard or thin nozzle. The SednaEarfit Origin includes an adapter for thin-nozzle earbuds.
3. **Attach Adapter (if needed):** If your earbud has a thin nozzle, first slide the black adapter onto the earbud nozzle until it is secure.



Figure 5: Earbud Tip and Adapter Assembly. The black adapter is used for earbuds with thin nozzles.

4. **Attach SednaEarfit Origin Tip:** Align the opening of the selected SednaEarfit Origin tip with the earbud nozzle (or adapter, if used). Gently push and twist the tip onto the nozzle until it is firmly seated. Ensure the tip is fully attached and not loose.

3. OPTIMAL USAGE

To experience the full benefits of your AZLA SednaEarfit Origin tips, proper insertion and fit are important.

- **Achieving a Seal:** Gently insert the earbud into your ear canal. You should feel a slight pressure and a reduction in ambient noise, indicating a good seal. If the seal is not achieved, try a different size ear tip.
- **Comfortable Fit:** The tapered design of the SednaEarfit Origin tips is intended for a comfortable, pain-free fit even during extended listening sessions. If you experience discomfort, re-evaluate the size or angle of insertion.
- **Sound Quality:** A proper seal ensures optimal bass response and overall sound clarity. If the audio sounds thin or lacks bass, adjust the earbud's position or try a larger tip size to improve the seal.

4. CARE AND MAINTENANCE

Regular cleaning of your earbud tips will maintain hygiene and prolong their lifespan.

1. **Remove Tips:** Gently detach the ear tips from your earbuds.
2. **Clean with Water:** Rinse the silicone ear tips under lukewarm water.
3. **Mild Soap (Optional):** For deeper cleaning, use a small amount of mild, non-abrasive soap. Gently rub the tips between your fingers.
4. **Rinse Thoroughly:** Ensure all soap residue is rinsed off.
5. **Dry Completely:** Allow the ear tips to air dry completely before reattaching them to your earbuds. Do not use heat to dry them, as this may damage the silicone.
6. **Storage:** Store unused ear tips in a clean, dry place, preferably in the provided case, to prevent dust accumulation and damage.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Poor Noise Cancellation / Lack of Bass	Inadequate seal in the ear canal. Incorrect tip size.	<ul style="list-style-type: none">• Try a larger ear tip size to achieve a better seal.• Ensure the earbud is inserted correctly and fully into the ear canal.
Discomfort or Pain	Tip size is too large. Improper insertion.	<ul style="list-style-type: none">• Try a smaller ear tip size.• Adjust the angle of insertion.• Ensure the tip is not pushed too deep.
Ear Tips Fall Out Easily	Tip size is too small. Improper insertion.	<ul style="list-style-type: none">• Try a larger ear tip size.• Ensure the earbud is inserted correctly and fully into the ear canal.
Tips Don't Fit Earbud Nozzle	Nozzle diameter mismatch. Adapter not used for thin nozzles.	<ul style="list-style-type: none">• Ensure you are using the correct adapter for thin-nozzle earbuds.• Verify compatibility with your specific earbud model.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	AZL-ORIGIN-ST-S
Brand	AZLA
Material	Medical Silicone
Color	Clear & Light Blue (core)
Item Weight	0.352 ounces
Package Dimensions	3.74 x 2.8 x 0.75 inches
Compatible Devices	Earphones, Headphones (including Sony WF-1000XM4, WF-1000XM3, LinkBuds S, WF-H800, WF-C700N)

7. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support regarding your AZLA SednaEarfit Origin earbud tips, please refer to the official AZLA website or contact your retailer. Keep your proof of purchase for any warranty claims.

Official AZLA Store: [AZLA Store on Amazon](#)

