

## Beetel G30

# Beetel G30 Corded Landline Phone User Manual

Model: G30

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Beetel G30 Corded Landline Phone. Please read this manual thoroughly before using the device to ensure proper functionality and to take full advantage of its features.

### Key Features:

- **TEC Certified:** Complies with Indian technical standards.
- **2-Way Speaker Phone:** Allows hands-free communication with adjustable volume.
- **LCD Display:** Provides visual information including Caller ID, date, and time, with 3 levels of adjustable contrast.
- **DTMF/FSK Compatible:** Ensures compatibility with various telephone networks for Caller ID.
- **Adjustable Volumes:** Customize handset and ringer volumes.
- **Music on Hold:** Keeps callers engaged while waiting.
- **Desk/Wall Mountable:** Flexible installation options.
- **Ringer LED:** Visual alert for incoming calls.

## 2. SETUP

### 2.1 Unboxing

Carefully remove all components from the packaging. The box should contain:

- Beetel G30 Landline Phone Unit
- Handset

- Coiled Handset Cord
- Line Cord
- User Manual (this document)

## 2.2 Connecting the Phone

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack labeled with a handset icon on the side of the phone base unit.
2. **Connect the Line Cord:** Plug one end of the line cord into the jack labeled with a telephone line icon on the back of the phone base unit. Plug the other end into your telephone wall jack.
3. **Power Connection:** The Beetel G30 is a corded electric phone and draws power directly from the telephone line. No external power adapter is required.



Image: The Beetel G30 phone unit with its handset and coiled cord, illustrating the components for initial setup.

## 2.3 Mounting Options

The Beetel G30 can be placed on a desk or mounted on a wall.

- **Desk Mount:** Place the phone on a flat, stable surface. Ensure the cords are not tangled or obstructing pathways.
- **Wall Mount:** Use the integrated wall mount holes on the back of the phone. Secure two screws (not included) into the wall at the appropriate distance, then slide the phone onto the screws. Ensure the handset cradle is adjusted for wall mounting to prevent the handset from falling.



Image: The Beetel G30 is designed for both desktop placement and convenient wall mounting, offering flexible installation.

## 3. OPERATION

### 3.1 Basic Calling Functions

- **Making a Call:** Lift the handset or press the **SPEAKER** button. Wait for a dial tone, then dial the desired phone number using the alphanumeric keypad.
- **Answering a Call:** When the phone rings, lift the handset or press the **SPEAKER** button.
- **Ending a Call:** Place the handset back on the cradle or press the **SPEAKER** button again if using speakerphone.



# Alphanumeric Keypad



Image: The alphanumeric keypad of the Beetel G30, used for dialing numbers and accessing various functions.

## 3.2 Caller ID and Call Memory

The LCD display shows incoming caller information (if subscribed to Caller ID service) and stores a history of calls.

- **Caller ID Display:** Upon an incoming call, the caller's number (and name, if available) will be shown on the LCD.
- **Call Memory:** The phone stores up to 40 incoming call records (with 10 digits). Use the **UP** and **DOWN** buttons to scroll through the call history.



BEETEL

## Caller ID Telephone

# 40 Incoming Calls Memory

(With 10 Digits)



**G30**

Image: The Beetel G30 features Caller ID display and memory for up to 40 incoming calls, enhancing call management.

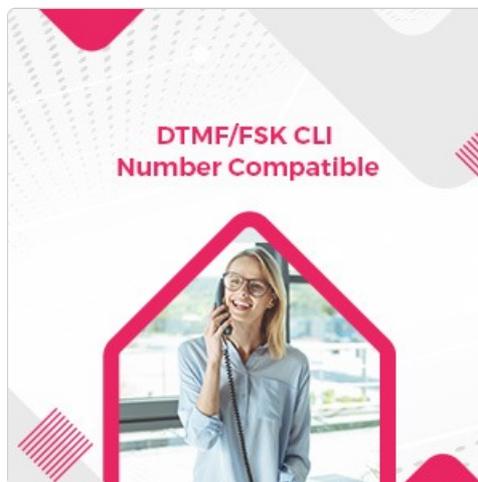


Image: The Beetel G30 is compatible with both DTMF and FSK Caller Line Identification (CLI) systems.

### 3.3 Speakerphone Function

The 2-way speakerphone allows for hands-free conversations.

- **Activate Speakerphone:** Press the **SPEAKER** button during a call or to initiate a call without lifting the handset.
- **Adjust Speaker Volume:** Use the **VOL+** and **VOL-** buttons to adjust the speaker volume during a speakerphone call.



Image: The Beetel G30 features a 2-way speakerphone with adjustable receive volume for hands-free communication.

### 3.4 Volume Adjustments

- **Handset Volume:** Adjust the volume during a handset call using the **VOL+** and **VOL-** buttons.
- **Ringer Volume:** The ringer volume can be adjusted to your preference. Refer to the phone's settings menu (usually accessed via a **SET** or **MENU** button) for specific steps.



Image: The Beetel G30 includes a Ringer LED that illuminates to indicate an incoming call.

### 3.5 Special Features

- **Music on Hold:** Press the **HOLD** button during a call to place the caller on hold with music. Press **HOLD** again to resume the conversation.
- **Do Not Disturb (DND) Function:** Activate the DND feature to silence incoming calls. Refer to the phone's settings for activation and deactivation.
- **Alarm Clock Setting:** The phone includes an alarm clock function. Set the desired time through the phone's menu.
- **LCD Contrast Adjustment:** Adjust the LCD display contrast (3 levels) for optimal viewing in different lighting conditions.

**b**

BEETEL



**Alarm  
Clock  
Setting**

---



**Music  
on Hold**

**G30**

Image: The Beitel G30 offers convenient features such as an alarm clock setting and music on hold.

**b**

**BEETEL**

**16 Ring  
Melody  
Selectable**

**Do Not  
Disturb  
Function**



**G30**

Image: The Beetel G30 allows selection from 16 ring melodies and includes a Do Not Disturb function.

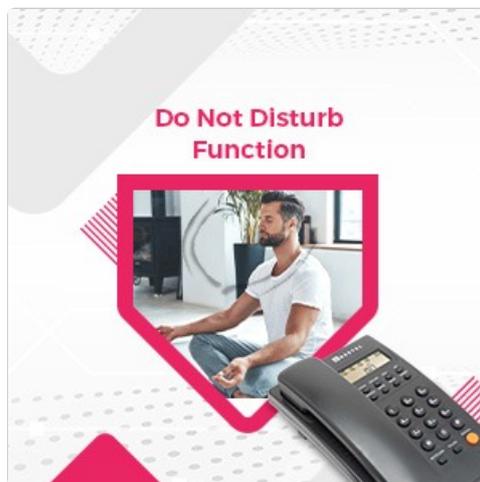


Image: The Beetel G30 features a Do Not Disturb function to silence incoming calls when desired.



Image: The Beetel G30's LCD display offers 3 levels of adjustable contrast for optimal readability.

## 4. MAINTENANCE

### 4.1 Cleaning

To keep your Beetel G30 phone in good condition:

- Wipe the phone's surface with a soft, damp cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Avoid spraying cleaning liquids directly onto the phone.

### 4.2 Storage

If storing the phone for an extended period, disconnect it from the telephone line and store it in a cool, dry place away from direct sunlight and extreme temperatures.

## 5. TROUBLESHOOTING

If you encounter issues with your Beetel G30, try the following solutions before contacting support:

Problem	Possible Cause	Solution
No dial tone	Line cord not connected properly; telephone service issue.	Ensure line cord is securely plugged into both the phone and the wall jack. Test with another phone if possible to check line service.
No display on LCD	Contrast setting too low/high; phone line issue.	Adjust LCD contrast. Check line cord connection.
Caller ID not displayed	Not subscribed to Caller ID service; service issue.	Contact your telephone service provider to confirm Caller ID subscription and service status.
Ringer not working	Ringer volume set to minimum or off; DND activated.	Increase ringer volume. Deactivate Do Not Disturb function.

Problem	Possible Cause	Solution
Speakerphone volume too low/high	Volume not adjusted.	Use the <b>VOL+</b> and <b>VOL-</b> buttons to adjust the speaker volume during a call.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	G30
Product Dimensions	13 x 20.5 x 8 cm
Item Weight	415 g
Colour	Black
Telephone Type	Corded Landline
Material	Plastic
Power Source	Corded Electric (Line Powered)
Call Conference	3-way
Display Features	LCD Display with 3-level contrast
Caller ID Compatibility	DTMF/FSK
Country of Origin	India
Manufacturer	Beetel Teletech Limited

## 7. WARRANTY & SUPPORT

For warranty information and technical support, please contact Beetel Teletech Limited directly. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Beetel Teletech Limited

For further assistance, refer to the official Beetel website or contact their customer service.



Personal Choice 65™ PPO  
2025 Provider/Pharmacy Directory

Personal Choice 65 Elite Rx PPO, Personal Choice 65 Rx PPO,  
Personal Choice 65 Plus Rx PPO, Personal Choice 65 Prime Rx PPO,  
and Personal Choice 65 Saver Rx PPO Plans

This Provider/Pharmacy Directory is current as of June 2025. This directory provides a list of Personal Choice 65 Elite Rx PPO, Personal Choice 65 Rx PPO, Personal Choice 65 Plus Rx PPO, Personal Choice 65 Prime Rx PPO, and Personal Choice 65 Saver Rx PPO's recent network providers. This directory is for Bucks, Chester, Delaware, Montgomery, and Philadelphia counties in Pennsylvania.

For more recent information or other questions, Personal Choice 65 PPO members may call 1-800-728-3333 or TTY users 711 seven days a week, 8 a.m. to 8 p.m. Please note that on weekends and holidays from April 1 through September 30, your call may be toll-free. Or visit [www.ibxmedicare.com/directory](https://www.ibxmedicare.com/directory).

Changes to our pharmacy network may occur during the benefit year. An updated Provider/Pharmacy Directory is located on our website at [www.ibxmedicare.com/directory](https://www.ibxmedicare.com/directory). You may also call our Member Help Team for updated provider information.

You can get this information for free in other formats, such as large print, braille, or audio. Call our toll-free number at 1-800-728-3333 (TTY/TDD users should call 711).

Independence

IBX

Y09H, H3909, PC, 25, 118342, C

[pdf]

Provider and pharmacy directory Personal Choice 65SM PPO 2025 Pharmacy Directory This is current as of June provides a list 65 Elite Rx pc ibxmedicare s members guides forms |||

Personal Choice 65SM PPO 2025 Provider/Pharmacy Directory Personal Choice 65 Elite Rx PPO, Personal ... ley Rd Langhorne, PA 19047 267 420-2466

LABORATORY CORPORATION OF AMERICA 930 Town Center Dr, Ste **G30**

Langhorne, PA 19047 267 635-4770 BLACKBIRD CLINICAL SERVICES PC 507

Corporate Dr West Langhor...

lang:en score:12 filesize: 15.53 M page\_count: 2780 document date: 2025-05-28

Keystone 65 HMO/HMO-POS  
2025 Provider/Pharmacy Directory

Keystone 65 Basic, Essential, Liberty, Preferred,  
and Select HMO/HMO-POS Plans

This directory is current as of June 2025. This directory provides a list of Keystone 65 Basic, Keystone 65 Essential, Keystone 65 Liberty, Keystone 65 Preferred, and Keystone 65 Select recent network providers. This directory is for Bucks, Chester, Delaware, Montgomery, and Philadelphia counties in Pennsylvania.

For more recent information or other questions, Keystone 65 members may call 1-800-445-3965 or TTY users 711 seven days a week, 8 a.m. to 8 p.m. Please note that on weekends and holidays from April 1 through September 30, your call may be toll-free. Or visit [www.ibxmedicare.com/directory](https://www.ibxmedicare.com/directory).

Changes to our pharmacy network may occur during the benefit year. An updated Provider/Pharmacy Directory is located on our website at [www.ibxmedicare.com/directory](https://www.ibxmedicare.com/directory). You may also call our Member Help Team at 1-800-445-3965 (TTY/TDD users should call 711).

You can get this information for free in other formats, such as large print, braille, or audio. Call our toll-free number at 1-800-445-3965 (TTY/TDD users should call 711).

Independence

IBX

Y09H, H3992, KS, 25, 118341, C

[pdf]

Provider and pharmacy directory Keystone 65 HMO POS 2025 Pharmacy Directory Kaiser Smith Joanne DO F Lightfoot Judith A Shenk Suzanne H Hansen Amanda M CRNP Keiser Melissa Mathew Radhika ks hmo ibxmedicare s members guides forms |||

Keystone 65 HMO/HMO-POS 2025 Provider/Pharmacy Directory Keystone 65 Basic, Essential, Liberty, Pref ... ley Rd Langhorne, PA 19047 267 420-2466 LABORATORY

CORPORATION OF AMERICA 930 Town Center Dr, Ste **G30** Langhorne, PA 19047 267 635-4770 BLACKBIRD CLINICAL SERVICES PC 507 Corporate Dr West

Langhor...

lang:en score:10 filesize: 15.19 M page\_count: 2724 document date: 2025-05-28