Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > PeriPage /
- > PeriPage P90 Thermal Tattoo Stencil Printer User Manual

PeriPage P90

PeriPage P90 Thermal Tattoo Stencil Printer User Manual

Model: P90 | Brand: PeriPage

1. Introduction

The PeriPage P90 Thermal Tattoo Stencil Printer is a compact and wireless device designed for creating clear and precise tattoo stencils. Utilizing advanced thermal printing technology, it eliminates the need for ink, offering a clean and efficient solution for tattoo artists and enthusiasts. Its portable design and broad compatibility with various devices make it a versatile tool for on-the-go use.

This manual provides essential information for the safe and effective operation of your PeriPage P90 printer, covering setup, usage, maintenance, and troubleshooting.



Image: The PeriPage P90 printer actively printing a tattoo stencil, with a smartphone and tablet displaying tattoo designs nearby.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage to the device or injury, please observe the following:

- Keep the device away from naked flames or direct heat sources.
- Do not expose the printer to water or excessive moisture.
- Avoid disassembling or attempting to repair the device yourself. Contact customer support for assistance.
- Use only approved power adapters and cables.
- Keep out of reach of children.

3. WHAT'S IN THE BOX

Upon unboxing your PeriPage P90, verify that all the following components are included:

• P90 Wireless Tattoo Transfer Stencil Printer x 1

- Tattoo Transfer Paper x 5 Sheets
- Mac Port x 1 (for Mac connectivity)
- USB-A to USB-C Charging Cable x 1
- User Manual x 1

4. SPECIFICATIONS

Feature	Detail
Model Name	PeriPage P90
Printing Technology	Thermal (Inkless)
Connectivity	Bluetooth, USB
Compatible Devices	Smartphones, Tablets, Laptops, PC (Android, iOS, Windows, MacOS)
Max Black & White Print Resolution	400 dpi
Max Copy Resolution (B&W)	300 dpi
Maximum Media Size	A4
Product Dimensions	1.2 x 10.4 x 1.2 inches (30.5 x 264.2 x 30.5 mm)
Item Weight	1.53 pounds (0.69 kg)
Battery	2000mAh Lithium Ion (rechargeable)
Control Method	Арр

5. SETUP

5.1 Charging the Printer

Before first use, fully charge the PeriPage P90 printer using the provided USB-A to USB-C charging cable. Connect the USB-C end to the printer and the USB-A end to a compatible power source (e.g., computer USB port, wall adapter). The indicator light will show charging status.

5.2 App Installation

The PeriPage P90 operates via a dedicated mobile application. Download the 'PeriPage' app from your device's app store (available for Android and iOS). For PC users, drivers may be required, typically available on the manufacturer's website.

5.3 Connecting the Printer

The printer supports both Bluetooth and USB connections.

Bluetooth Connection (for Smartphones/Tablets):

1. Press and hold the power button on the printer for 2 seconds to turn it on. The indicator light will illuminate.

- 2. Open the PeriPage app on your smartphone or tablet.
- 3. Navigate to the connection settings within the app and search for available Bluetooth devices.
- 4. Select 'PeriPage P90' from the list to pair. Once connected, the app will confirm.

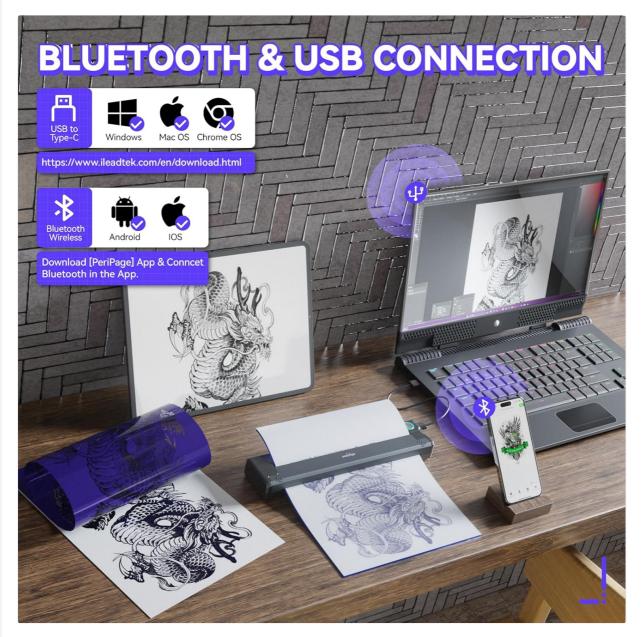


Image: Visual representation of the PeriPage P90 connecting to various devices via Bluetooth and USB.

USB Connection (for PC/Laptops):

- 1. Ensure the printer is powered on.
- 2. Connect the printer to your PC or laptop using the USB-A to USB-C cable.
- 3. Install the necessary drivers for Windows or MacOS, if prompted. These can typically be found on the PeriPage official website.
- 4. Once drivers are installed, the printer should be recognized by your computer.

5.4 Loading Tattoo Transfer Paper

- 1. Prepare the tattoo transfer paper by tearing off the yellow backing paper.
- 2. Remove the protective sheet from the transfer paper.
- 3. Carefully insert the prepared transfer paper into the printer's paper slot, ensuring it is straight and aligned. The printer will automatically feed the paper into position.



Image: A visual guide demonstrating the steps for preparing and loading tattoo transfer paper into the PeriPage P90 printer.

6. OPERATING INSTRUCTIONS

6.1 Printing a Stencil

- 1. Ensure the printer is connected to your device (smartphone, tablet, or PC) and transfer paper is loaded.
- 2. Open the PeriPage app (or printing software on PC).
- 3. Select the 'Tattoo' function within the app.
- 4. Choose the desired tattoo design from your gallery or the app's template library.
- 5. Adjust the size, position, and other print settings of the pattern as needed. The app offers features for beautification and precise adjustments.
- 6. Preview the design to ensure it meets your requirements.
- 7. Click 'Print' to send the design to the printer. The printer will feed the paper and produce the stencil.

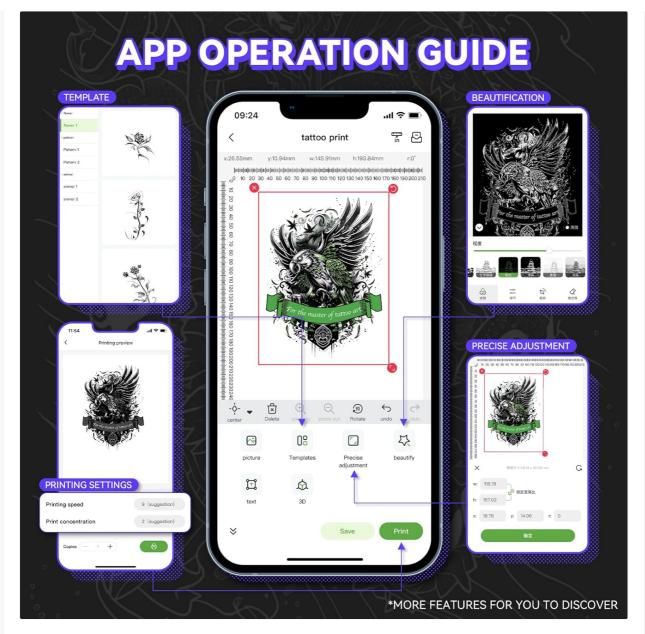


Image: The PeriPage app interface showing options for template selection, image adjustment, and printing settings for tattoo designs.

6.2 Applying the Stencil

After printing, the stencil is ready for application to the skin:

- 1. Clean and prepare the skin area where the tattoo will be applied.
- 2. Apply a thin, even layer of tattoo transfer gel or stencil solution to the prepared skin.
- 3. Carefully place the printed stencil onto the gel-covered skin, pressing firmly and evenly. Avoid shifting the stencil.
- 4. Gently peel off the transfer paper to reveal the transferred tattoo pattern on the skin. Allow it to dry completely before proceeding with tattooing.



Image: A visual guide illustrating the steps for applying tattoo gel, placing the stencil, and revealing the transferred pattern on the skin.

6.3 Official Product Video: How to Use PeriPage P90 Wireless Tattoo Transfer Printer

Your browser does not support the video tag.

Video: A comprehensive guide demonstrating the unboxing, setup, and printing process of the PeriPage P90 Wireless Tattoo Transfer Printer. This video covers turning on the device, loading paper, connecting via Bluetooth, using the app to select and print designs, and applying the stencil to the skin.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your PeriPage P90 printer:

- Cleaning the Print Head: Regularly clean the thermal print head with a soft, lint-free cloth lightly dampened with isopropyl alcohol. Ensure the printer is off and cooled down before cleaning.
- Exterior Cleaning: Wipe the exterior of the printer with a soft, dry cloth. Avoid abrasive cleaners or solvents
- Paper Storage: Store tattoo transfer paper in a cool, dry place away from direct sunlight and heat to prevent degradation.
- Battery Care: For long-term storage, charge the printer to about 50% and store it in a cool, dry environment. Recharge periodically if not used for extended periods.

8. TROUBLESHOOTING

If you encounter issues with your PeriPage P90 printer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Printer does not turn on	Low battery; Power button not pressed correctly	Charge the printer; Press and hold the power button for 2 seconds.
Cannot connect via Bluetooth	Bluetooth off; Printer not in pairing mode; App issue	Ensure Bluetooth is enabled on your device; Restart printer and app; Try pairing again.

Poor print quality (faint, blurry, inconsistent)	Low battery; Incorrect paper loading; Dirty print head; App print settings	Charge printer; Re-load paper correctly; Clean print head; Adjust print concentration/speed in app.
Paper jam	Improper paper loading; Damaged paper	Turn off printer, gently pull out jammed paper; Ensure paper is flat and correctly aligned when loading.
Printer not recognized by PC	Missing/incorrect drivers; Loose USB connection	Install correct drivers from PeriPage website; Check USB cable connection.

9. WARRANTY AND SUPPORT

The PeriPage P90 Thermal Tattoo Stencil Printer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, service, or inquiries regarding your product, please contact PeriPage customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your product model (P90) and purchase details ready.

© 2024 PeriPage. All rights reserved.

Related Documents - P90

problem Orange of the second	PeriPage Wireless Tattoo Transfer Printer User Manual & Guide Official user manual for the PeriPage Wireless Tattoo Transfer Printer (P90). Learn setup, app connection, PC printing, charging, maintenance, and safety. Includes troubleshooting tips and FCC compliance information.
Out	PeriPage Tattoo Transfer Printer User Manual - ALD-P920 User manual for the PeriPage Tattoo Transfer Printer (Model ALD-P920) by Xiamen iLead Tek Co., Ltd. Covers setup, operation, app connectivity, PC printing, charging, maintenance, and safety precautions.
peddyp Out to the state of the	PeriPage Wireless Tattoo Transfer Printer User Manual User manual for the PeriPage Wireless Tattoo Transfer Printer, covering setup, app connection, PC printing, charging, cleaning, and safety notes.
endrige RILL	PeriPage ALD-P810 Mini Thermal Printer Instruction Manual Comprehensive instruction manual for the PeriPage ALD-P810 mini thermal printer. Learn how to set up, connect via app or PC, replace paper, clean the printer head, and understand safety warnings and FCC compliance.
Telephone Manage	PeriPage Portable Printer Instruction Manual - Setup, Operation, and Maintenance Comprehensive instruction manual for the PeriPage portable printer by Xiamen iLead Tek Co., Ltd. Learn how to set up, connect via Bluetooth or computer, replace paper, charge, and clean your device. Includes FCC compliance information.



PeriPage P21 Thermal Printer User Manual

User manual for the PeriPage P21 thermal printer, covering setup, operation, charging, cleaning, and safety information.