

WeurGhy Y6

WeurGhy Smartwatch Y6 User Manual

Model: Y6

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your WeurGhy Smartwatch Y6. Please read this manual thoroughly before using the device to ensure proper function and longevity.

2. PACKAGE CONTENTS

- WeurGhy Smartwatch Y6
- Magnetic Charging Cable
- User Manual

3. DEVICE OVERVIEW

The WeurGhy Smartwatch Y6 features a 1.85-inch HD touch screen, health monitoring capabilities, multiple sports modes, and Bluetooth call functionality. It is designed for compatibility with both Android and iOS smartphones.



Image 3.1: WeurGhy Smartwatch Y6. The watch face displays current time, date, weather, battery level, step count, calorie burn, distance, and heart rate. A secondary image shows the watch's dial pad for making calls.

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge your smartwatch. Connect the magnetic charging cable to the charging points on the back of the watch and plug the USB end into a power adapter (not included) or a computer's USB port. A full charge typically takes approximately 2 hours.

The image is split into two horizontal sections. The top section shows a black smartwatch with a black strap floating in clear blue water, splashing around it. The watch's screen is on, displaying a green call icon, the time 09:30, the date MON MAY 30, a weather icon with 24°, and fitness metrics: 0410 KCAL, 02.25 KM, 8196 steps, and 098 heart rate. To the right of the watch, the text 'IP68 Waterproof' is written in large white font. The bottom section shows the same smartwatch from the back, connected to a black magnetic charging cable. The back of the watch has a circular magnetic coil and some text including 'MADE IN CHINA'. To the right of the watch, the text 'Magnetic Fast Charging & Ultra-long Battery Life' is written in black. Below this text are three specifications: '30 Days Standby Time', '7 Days Battery Life', and '2 Hours Charging Time', each with its respective number in large blue font and the unit in smaller black font.

**IP68
Waterproof**

**Magnetic Fast Charging
& Ultra-long Battery Life**

30 Days
Standby Time

7 Days
Battery Life

2 Hours
Charging Time

Image 4.1: Magnetic Fast Charging. The image shows the smartwatch connected to its magnetic charging cable, highlighting its IP68 waterproof rating and battery specifications.

4.2 App Installation

To unlock all features and synchronize data, download the **GloryFit** app on your smartphone. Scan the QR code provided in the watch's packaging or search for "GloryFit" in your device's app store (Google Play Store for Android, Apple App Store for iOS).

4.3 Bluetooth Pairing

1. Ensure Bluetooth is enabled on your smartphone.
2. Open the GloryFit app and follow the on-screen instructions to add your device.
3. Select your WeurGhy Smartwatch Y6 from the list of available devices.
4. Confirm the pairing request on both your watch and smartphone.
5. For call functionality, you may need to pair the watch a second time via your phone's Bluetooth settings (look for a device named 'Y6_CALL' or similar).

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The smartwatch features a 1.85-inch HD touch screen. Swipe left, right, up, or down to navigate through menus and functions. Tap to select an option or confirm an action.



Image 5.1: 1.85" HD Touch Screen. The image illustrates the vibrant display and the ability to customize watch faces through the GloryFit app.

5.2 Call and Message Functions

After successful Bluetooth pairing, you can manage calls and receive notifications directly on your watch.

- **Making/Answering Calls:** Use the integrated microphone and speaker to make, answer, or reject calls. The watch can store contacts and display call history.
- **Message Reminders:** The watch will vibrate to notify you of incoming text messages and alerts from social media applications (e.g., Facebook, WhatsApp, Instagram, Twitter).

Bluetooth Call and Message Reminders




Image 5.2: Bluetooth Call and Message Reminders. This image demonstrates the watch's capability to handle calls and display app notifications.

5.3 Health Monitoring

The smartwatch is equipped with advanced sensors to monitor various health metrics throughout the day. Data is synchronized with the GloryFit app for detailed analysis.

- **Heart Rate Monitoring:** Real-time heart rate tracking.
- **Blood Oxygen (SpO2) Monitoring:** Measures blood oxygen saturation levels.
- **Sleep Tracking:** Monitors sleep patterns, including deep and light sleep stages, and provides sleep quality analysis.
- **Activity Tracking:** Records steps taken, calories burned, and distance traveled.


24H All-Day Health Index Monitoring

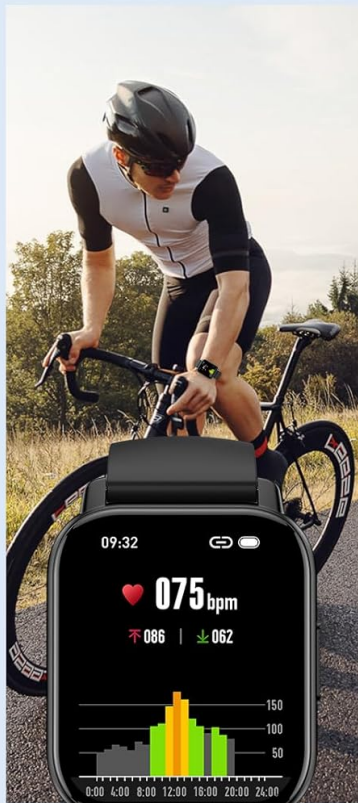

Heart Rate



Sleep

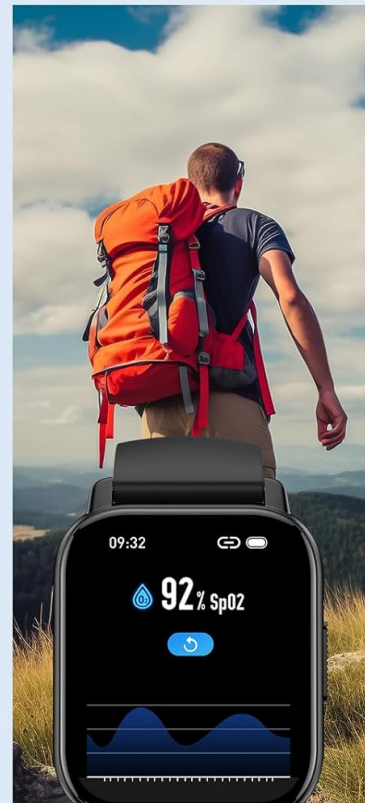

Blood Oxygen

Image 5.3: 24H All-Day Health Index Monitoring. This image highlights the watch's ability to track heart rate, sleep, and blood oxygen levels.

5.4 Sports Modes

The watch supports over 112 sports modes for various outdoor and indoor activities. Select your desired sport to track specific metrics relevant to that activity.

- **Examples:** Running, Cycling, Jumping, Mountain Climbing, Basketball, Football, Yoga, and more.

112+

SPORTS MODES



Activity Tracking



20888Steps



985 Kcal



15.8Km



Image 5.4: 112+ Sports Modes. The image displays the watch interface for selecting different sports activities and shows individuals participating in various sports.

5.5 Additional Functions

The WeurGhy Smartwatch Y6 includes several practical features to enhance daily convenience:

- Stopwatch
- Timer
- Remote Camera Control
- Weather Forecasts
- Music Control
- Breathing Exercise
- Sedentary Reminder
- Find Phone function

6. MAINTENANCE

6.1 Water Resistance

The WeurGhy Smartwatch Y6 is IP68 waterproof, meaning it is resistant to dust and can withstand immersion in water up to 1.5 meters for up to 30 minutes. It is suitable for daily use, such as washing hands or sweating during exercise. However, it is not recommended for hot showers, saunas, or diving, as steam and hot water may compromise the seal.

6.2 Cleaning

Regularly clean your smartwatch and strap to prevent skin irritation and maintain device performance. Use a soft, damp cloth to wipe the screen and strap. Avoid using harsh chemicals or abrasive materials.

6.3 Battery Care

To prolong battery life, avoid fully discharging the watch frequently. Charge the device using the provided magnetic charging cable. Store the watch in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

- **Watch not turning on:** Ensure the watch is fully charged. Connect it to the charger for at least 10 minutes.
- **Cannot pair with phone:** Make sure Bluetooth is enabled on your phone and the watch. Restart both devices and try pairing again through the GloryFit app. Ensure the app has necessary permissions.
- **Inaccurate health data:** Ensure the watch is worn snugly on your wrist, not too tight or too loose. Keep the sensor clean. Note that the watch is not a medical device and data is for reference only.
- **Notifications not received:** Check if the GloryFit app is running in the background and has notification permissions enabled on your phone. Ensure the watch is connected via Bluetooth.
- **Short battery life:** Reduce screen brightness, disable unnecessary notifications, and limit continuous heart rate monitoring if not needed.

8. SPECIFICATIONS

Brand	WeurGhy
Model Number	Y6
Screen Size	1.85 Inches
Battery Capacity	280 mAh
Typical Battery Life	Up to 8 days
Standby Time	Up to 30 days
Charging Time	Approximately 2 hours
Water Resistance	IP68
Connectivity	Bluetooth
Compatibility	Android, iOS
Operating System	Android (compatible)

9. WARRANTY AND SUPPORT

WeurGhy is committed to providing high-quality products and excellent customer service. If you have any questions or encounter issues with your product after purchase, please contact our customer support team. We are dedicated to providing comprehensive after-sales service to ensure your satisfaction. Please refer to your purchase documentation for specific warranty terms and contact information.