

Perixx PERIMICE-513

Perixx PERIMICE-513 Wired Ergonomic Vertical Mouse Instruction Manual

MODEL: PERIMICE-513

Introduction

The Perixx PERIMICE-513 is a wired ergonomic vertical mouse designed to provide a comfortable and efficient computing experience. Its unique vertical design promotes a natural handshake position, which can help reduce forearm strain and the risk of repetitive strain injuries (RSI) during extended use. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your PERIMICE-513 mouse.



Image: The Perixx PERIMICE-513 Wired Ergonomic Vertical Mouse, showcasing its black finish and ergonomic design.

Product Overview

The PERIMICE-513 features six buttons and an adjustable DPI sensor for precise control. Familiarize yourself with the components:



6-BUTTON MOUSE

Image: A diagram illustrating the six buttons of the Perixx PERIMICE-513 mouse, including Left Click, Right Click, Scroll Wheel, DPI Switch, Page Back, and Page Forward buttons.

- **Left Click Button:** Standard primary click function.
- **Right Click Button:** Standard secondary click function.
- **Scroll Wheel:** For vertical scrolling and middle-click functionality.
- **DPI Switch Button:** Adjusts cursor sensitivity (DPI).
- **Page Back Button:** Navigates back in web browsers or file explorers.
- **Page Forward Button:** Navigates forward in web browsers or file explorers.

Setup

The Perixx PERIMICE-513 is designed for simple plug-and-play setup.

1. **Connect the USB Cable:** Plug the USB connector of the mouse into an available USB port on your computer.
2. **Driver Installation:** The mouse is plug-and-play and typically does not require additional drivers for basic functionality on compatible operating systems. Your computer should automatically detect and install the necessary drivers.
3. **Positioning:** Place the mouse on a flat, clean surface. The ergonomic design encourages a natural

handshake grip.



Image: A hand connecting the USB cable of the Perixx PERIMICE-513 mouse to a computer, illustrating the plug-and-play setup.


Compatibility: The PERIMICE-513 is fully compatible with Windows 7, 8, 10, 11, and later versions.

Operating Instructions


This section details the functions of your Perixx PERIMICE-513 mouse.

DPI Adjustment

The DPI (Dots Per Inch) switch button, located on the top of the mouse, allows you to adjust the cursor sensitivity. Press this button to cycle through the available DPI settings: 1000, 1600, 3200, and 6400 DPI. Choose a setting that best suits your task and preference for cursor speed and precision.

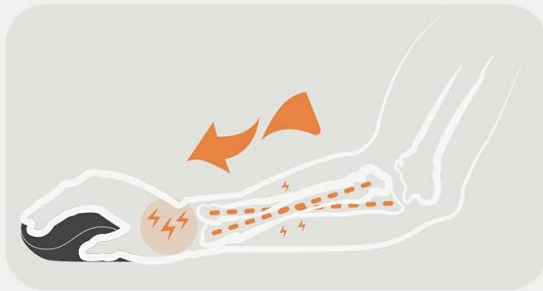

Twisted

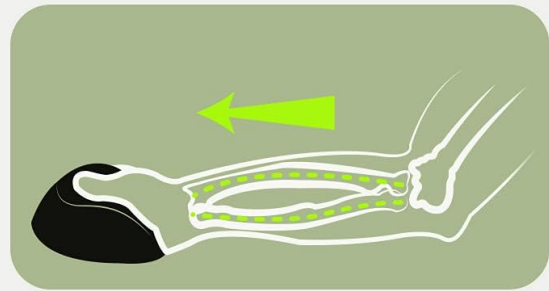

Natural

ERGONOMIC MOUSE

Image: A hand demonstrating the natural, comfortable grip on the Perixx PERIMICE-513 vertical mouse, highlighting its ergonomic design.

Ergonomic Use

The vertical design of the PERIMICE-513 encourages a neutral wrist and forearm posture, similar to a handshake. This natural position helps to alleviate pressure on the wrist and reduce muscle tension, contributing to long-term comfort and preventing strain.

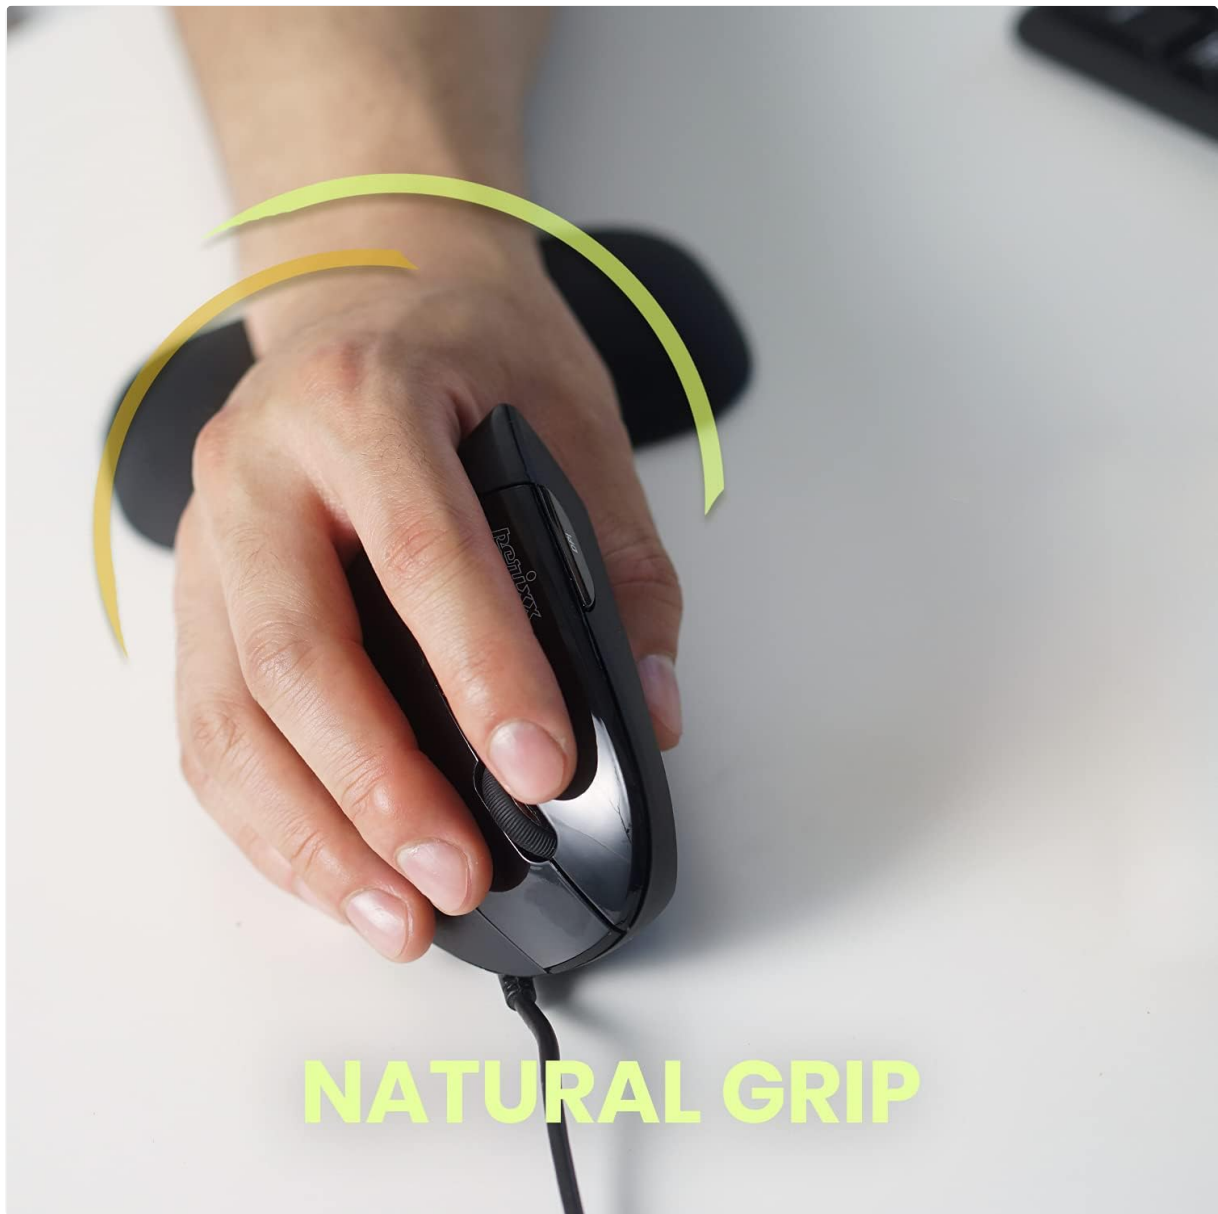


Image: A visual comparison showing a twisted wrist position with a traditional mouse versus a natural, untwisted wrist position achieved with an ergonomic vertical mouse.

Button Functions

- **Left/Right Click:** Perform standard selection and context menu actions.
- **Scroll Wheel:** Scroll documents and web pages vertically. Press down for middle-click functionality.
- **DPI Switch:** Cycle through 1000, 1600, 3200, and 6400 DPI settings.
- **Page Back/Forward:** Conveniently navigate web pages or folders.

Maintenance

Proper care ensures the longevity and optimal performance of your mouse.

- **Cleaning:** Use a soft, slightly damp cloth to clean the surface of the mouse. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the rubber coating and internal components.
- **Optical Sensor:** Keep the optical sensor on the bottom of the mouse clean and free from dust or debris to ensure accurate tracking.
- **Cable Care:** Avoid sharp bends or excessive pulling on the USB cable to prevent damage.

Troubleshooting

If you encounter issues with your Perixx PERIMICE-513 mouse, refer to the following solutions:

- **Mouse Not Responding:**
 - Ensure the USB cable is securely plugged into a working USB port on your computer.
 - Try plugging the mouse into a different USB port.
 - Restart your computer.
- **Erratic Cursor Movement:**
 - Clean the optical sensor on the bottom of the mouse with a soft, dry cloth.
 - Ensure you are using the mouse on a suitable surface. Avoid highly reflective or transparent surfaces.
- **DPI Setting Not Changing:**
 - Press the DPI switch button firmly. The change in DPI may be subtle depending on your current setting and screen resolution.

Specifications

Detailed technical specifications for the Perixx PERIMICE-513 mouse:

Feature	Specification
Product Dimensions	4.92 x 2.44 x 0.1 inches
Item Weight	5.6 ounces
Model Number	12364
Connectivity Technology	USB
Movement Detection Technology	Optical
DPI Settings	1000 / 1600 / 3200 / 6400
Cable Length	5.9 ft (1.8 m)
Compatibility	Windows 7, 8, 10, 11, and later
Special Feature	Ergonomic Design

Product Overview Video







Watch this official product overview video for a visual guide to the Perixx PERIMICE-513 mouse.

Video: An official product overview of the Perixx PERIMICE-513 Ergonomic Vertical Mouse, demonstrating its features and ergonomic benefits.

Warranty and Support

Perixx products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official Perixx website. For further assistance or support, you may visit the [Perixx Store on Amazon](#).

Related Documents - PERIMICE-513

	<p>Perixx PERIMICE-515 Wired Ergonomic Vertical Mouse User Manual</p> <p>User manual and technical specifications for the Perixx PERIMICE-515 Wired Ergonomic Vertical Mouse. Includes product details, safety guidelines, FCC compliance, and restricted substances information.</p>
	<p>Perixx PERIMICE-713 N Wireless Ergonomic Vertical Mouse User Manual</p> <p>User manual for the Perixx PERIMICE-713 N Wireless Ergonomic Vertical Mouse, detailing setup, features, safety guidelines, technical specifications, and compliance information.</p>
	<p>Perixx PERIMICE-713 Wireless Ergonomic Vertical Mouse User Manual</p> <p>User manual and specifications for the Perixx PERIMICE-713 Wireless Ergonomic Vertical Mouse, including setup, safety instructions, and technical details.</p>
	<p>Perixx PERIMICE-513N Wired Ergonomic Vertical Mouse - User Manual, Specs, and Troubleshooting</p> <p>Detailed user manual, technical specifications, safety instructions, and troubleshooting guide for the Perixx PERIMICE-513N Wired Ergonomic Vertical Mouse. Learn about setup, features, and common issues.</p>
	<p>Perixx PERIMICE-608 Ergonomic Vertical Wireless Mouse User Manual and Specifications</p> <p>Detailed user manual and technical specifications for the Perixx PERIMICE-608 ergonomic vertical wireless mouse, covering installation, features, troubleshooting, and compatibility. Learn about its ergonomic design, rechargeable battery, and adjustable DPI settings.</p>
	<p>Perixx PERIMICE-519 Ergonomic Vertical Wired Mouse - User Manual, Specifications & Safety</p> <p>Comprehensive user manual and technical specifications for the Perixx PERIMICE-519 ergonomic vertical wired mouse. Includes setup, safety guidelines, product features, and RoHS compliance details.</p>