

[Manuals.plus](#) /

> [XMHEIRD](#) /

> XMHEIRD AC/DC Adapter for Vintage Epilady ME 800-10 Epilator - User Manual

XMHEIRD XSD-4000450HUSD20240823-3935

XMHEIRD AC/DC Adapter User Manual

Model: XSD-4000450HUSD20240823-3935


INTRODUCTION

This manual provides essential information for the safe and effective use of your XMHEIRD AC/DC Adapter, model XSD-4000450HUSD20240823-3935. This adapter is specifically designed for use with the Vintage Epilady ME 800-10 Coil Epilator. Please read this manual thoroughly before installation and operation, and retain it for future reference.


DETAILS OF THE PRODUCT



American Plug

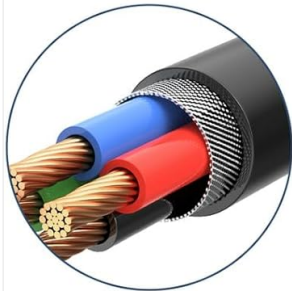

Thick Copper Core

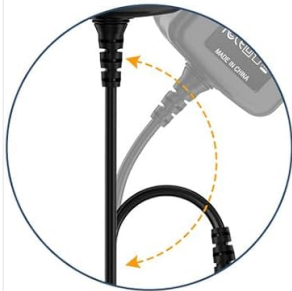

The Flexibility of the power cord



Figure 1: XMHEIRD AC/DC Adapter. This image displays the adapter's compact design and its specification label, indicating input and output details.

SETUP INSTRUCTIONS

Follow these steps to properly set up your AC/DC adapter:

- 1. Verify Compatibility:** Ensure your device is a Vintage Epilady ME 800-10 Coil Epilator. This adapter is designed for this specific model.
- 2. Inspect the Adapter:** Before use, visually inspect the adapter and its cord for any signs of damage, such as cuts, frayed wires, or bent prongs. Do not use if damaged.
- 3. Connect to Power Outlet:** Plug the adapter into a standard AC wall outlet (AC100V-240V, 50/60Hz). Ensure the connection is firm.
- 4. Connect to Device:** Insert the adapter's output connector securely into the power input port of your Vintage Epilady ME 800-10 Epilator.



Figure 2: Adapter connected to a wall outlet. This image illustrates the adapter securely plugged into a standard wall socket, ready for use.

OPERATING INSTRUCTIONS

The XMHEIRD AC/DC Adapter is designed for simple plug-and-play operation. Once properly connected, it will provide power to your Vintage Epilady ME 800-10 Epilator.

- **Power On:** After connecting the adapter to both the wall outlet and your epilator, your device should receive power. Refer to your epilator's manual for specific power-on procedures.
- **Safety Features:** This adapter is equipped with multiple safety protections to ensure reliable operation:
 - **Over-Temperature Protection (OTP):** Prevents overheating.
 - **Over-Voltage Protection (OVP):** Safeguards against excessive voltage.
 - **Over-Current Protection (OCP):** Protects against current overloads.
 - **Short Circuit Protection (SCP):** Prevents damage from short circuits.
- **Disconnection:** To disconnect, first power off your epilator, then unplug the adapter from the wall outlet, and finally disconnect it from your device.



Figure 3: Built-in Safety Electronics. This diagram illustrates the four key protection features integrated into the adapter for safe operation.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Keep the adapter clean and free from dust. Use a dry, soft cloth to wipe the surface. Do not use liquid cleaners.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid extreme temperatures and high humidity.
- **Cord Care:** Do not bend, twist, or pull the power cord excessively. Avoid placing heavy objects on the cord. Regularly inspect the cord for any signs of wear or damage.
- **Ventilation:** Ensure the adapter has adequate ventilation during operation. Do not cover it or place it in an enclosed space that could restrict airflow.

TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not receiving power	<ul style="list-style-type: none"> • Adapter not fully plugged into outlet. • Adapter not fully connected to device. • Faulty wall outlet. • Damaged adapter or cord. 	<ul style="list-style-type: none"> • Ensure adapter is firmly plugged into the wall outlet. • Verify the adapter's connector is securely inserted into the device's power port. • Test the wall outlet with another appliance. • Inspect the adapter and cord for damage. If damaged, discontinue use and replace.
Adapter feels excessively hot	<ul style="list-style-type: none"> • Poor ventilation. • Overload or internal fault. 	<ul style="list-style-type: none"> • Ensure the adapter is not covered and has sufficient airflow. • Disconnect the adapter immediately. If the issue persists after cooling and reconnecting, discontinue use.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model Number:** XSD-4000450HUSD20240823-3935
- **Input:** AC100V-240V, 50/60Hz
- **Output:** 4.5V AC/DC 2A (as indicated on product label)
- **Product Dimensions:** 4 x 2 x 0.5 inches
- **Item Weight:** 3 ounces
- **Connector Type:** Auxiliary
- **Compatible Devices:** Vintage Epilady ME 800-10 Coil Epilator
- **Safety Features:** Over-Temperature Protection (OTP), Over-Voltage Protection (OVP), Over-Current Protection (OCP), Short Circuit Protection (SCP), V-0 grade flame retardant materials.
- **Manufacturer:** ShenZhen Moveforest Electric Appliance Industry Co.,LTD

STABLE VOLTAGE SAFE & WORRY-FREE



Figure 4: Adapter Dimensions. This image provides a visual representation of the adapter's physical measurements.

WARRANTY AND SUPPORT

Your XMHEIRD AC/DC Adapter comes with the following:

- **Return Policy:** 30 Days Hassle-free Return.
- **Replacement Exchange:** 12 Months Replacement Exchange.

For further assistance or warranty claims, please contact your retailer or the manufacturer, ShenZhen Moveforest Electric Appliance Industry Co.,LTD, through the provided contact channels at the point of purchase.