

Human Touch 200-REVEAL-001

Human Touch Reveal Foot & Calf Massager Ottoman

MODEL: 200-REVEAL-001

User Instruction Manual

Introduction

The Human Touch Reveal Ottoman Massager is designed to provide a comprehensive relaxation experience for your feet and calves. This innovative device seamlessly transforms from a stylish ottoman into a powerful massager, offering air compression massage, soothing heat, and targeted reflexology. It is engineered to revitalize tired feet, improve circulation, reduce swelling, and relieve soreness and fatigue, enhancing your overall well-being.

Safety Information

Important Safety Instructions:

- Always unplug the massager before use, cleaning, or storage.
- Do not use the massager while sleeping.
- Avoid using the massager on open wounds, irritated skin, or swollen areas.
- Keep the massager away from water and do not submerge it in any liquid.
- Clean the unit with a damp cloth only; do not use harsh chemicals or abrasive cleaners.
- Allow the massager to cool down completely before storing it.
- Always follow all instructions provided with the product to ensure safe operation.
- Consult a physician before using this product if you have any medical conditions, are pregnant, or have a pacemaker.

Setup

The Human Touch Reveal Ottoman Massager requires minimal setup. Follow these steps:

1. **Unpack:** Carefully remove the massager from its packaging. Retain all packaging materials for future storage or transport.
2. **Placement:** Place the massager on a stable, level surface near a power outlet. Ensure there is enough space around

the unit for comfortable use and transformation.

3. **Power Connection:** Plug the power cord into a standard electrical outlet.
4. **Transformation:** To transform from an ottoman to a massager, gently pull the front section forward and down to reveal the foot and calf massage wells.



Image: Human Touch Reveal Ottoman Massager in its deployed, ready-to-use state, showcasing the foot and calf massage wells.

Operating Instructions

The Reveal Ottoman Massager offers various settings for a customized experience. The control panel is conveniently located on the top surface when the massager is deployed.

1. **Power On/Off:** Press the **Power button** (red circle) to turn the unit on or off.
2. **Select Auto-Massage Program:** Choose from three pre-designed auto-massage programs by pressing the **Program button** (play icon). Each press cycles through a different program tailored for specific needs.
3. **Adjust Intensity:** Modify the intensity of the air compression massage by pressing the **Intensity button** (three

vertical bars). There are three adjustable intensity levels.

4. **Activate Underfoot Reflexology:** Engage the specialized underfoot massage rollers by pressing the **Reflexology button** (foot icon). This provides targeted therapy to the soles of your feet.
5. **Apply Heat:** Turn on the soothing heat function by pressing the **Heat button** (three wavy lines). Heat enhances relaxation and muscle tension relief.
6. **Adjust Tilt Angle:** The massager features two tilt angles for optimal comfort. Adjust the angle to suit your preference for maximum relaxation and pain relief.



Image: Close-up view of the control panel on the Human Touch Reveal Ottoman Massager, showing buttons for power, program, intensity, reflexology, and heat.



Image: A user's feet are shown comfortably placed inside the massage wells of the Human Touch Reveal Ottoman Massager, ready for operation.

Your browser does not support the video tag.

Video: An overview of the Human Touch Reveal Ottoman Foot and Calf Massager, demonstrating its features and how it transforms from an ottoman to a massager.

Maintenance

Proper maintenance ensures the longevity and hygiene of your Human Touch Reveal Ottoman Massager.

- **Cleaning the Sleeve Insert:** The massager features a convenient, removable sleeve insert that can be machine-washed. Remove the inserts from the foot wells and follow the washing instructions on the label. Allow them to air dry completely before reinserting.
- **Exterior Cleaning:** Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners, waxes, or solvents.

- **Storage:** When not in use, transform the massager back into its ottoman form for compact storage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, discontinue use and contact customer support.

Troubleshooting

If you encounter any issues with your Human Touch Reveal Ottoman Massager, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Massager does not turn on.	Power cord is not securely plugged in. No power to the outlet.	Ensure the power cord is fully inserted into the outlet and the massager. Test the outlet with another device.
Massage intensity feels weak.	Intensity setting is too low.	Increase the intensity level using the Intensity button on the control panel.
Heat function is not working.	Heat function is not activated.	Press the Heat button to activate the heat function. Allow a few minutes for the heat to build up.
Unusual noise during operation.	Normal operating sound. Obstruction in the massage wells.	Some operational noise is normal. Check for any foreign objects in the foot wells. If the noise is excessive or unusual, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Human Touch Customer Support for assistance.

Specifications

Specification	Detail
Model Number	200-REVEAL-001
Item Weight	26 pounds
Product Dimensions	18 x 21 x 19 inches
Power Source	Corded Electric
Material	Faux Leather
Massage Features	Underfoot Reflexology, Air Compression, Heat

Specification	Detail
Programs	3 Auto-Massage Programs
Intensity Levels	3 Adjustable Intensity Levels

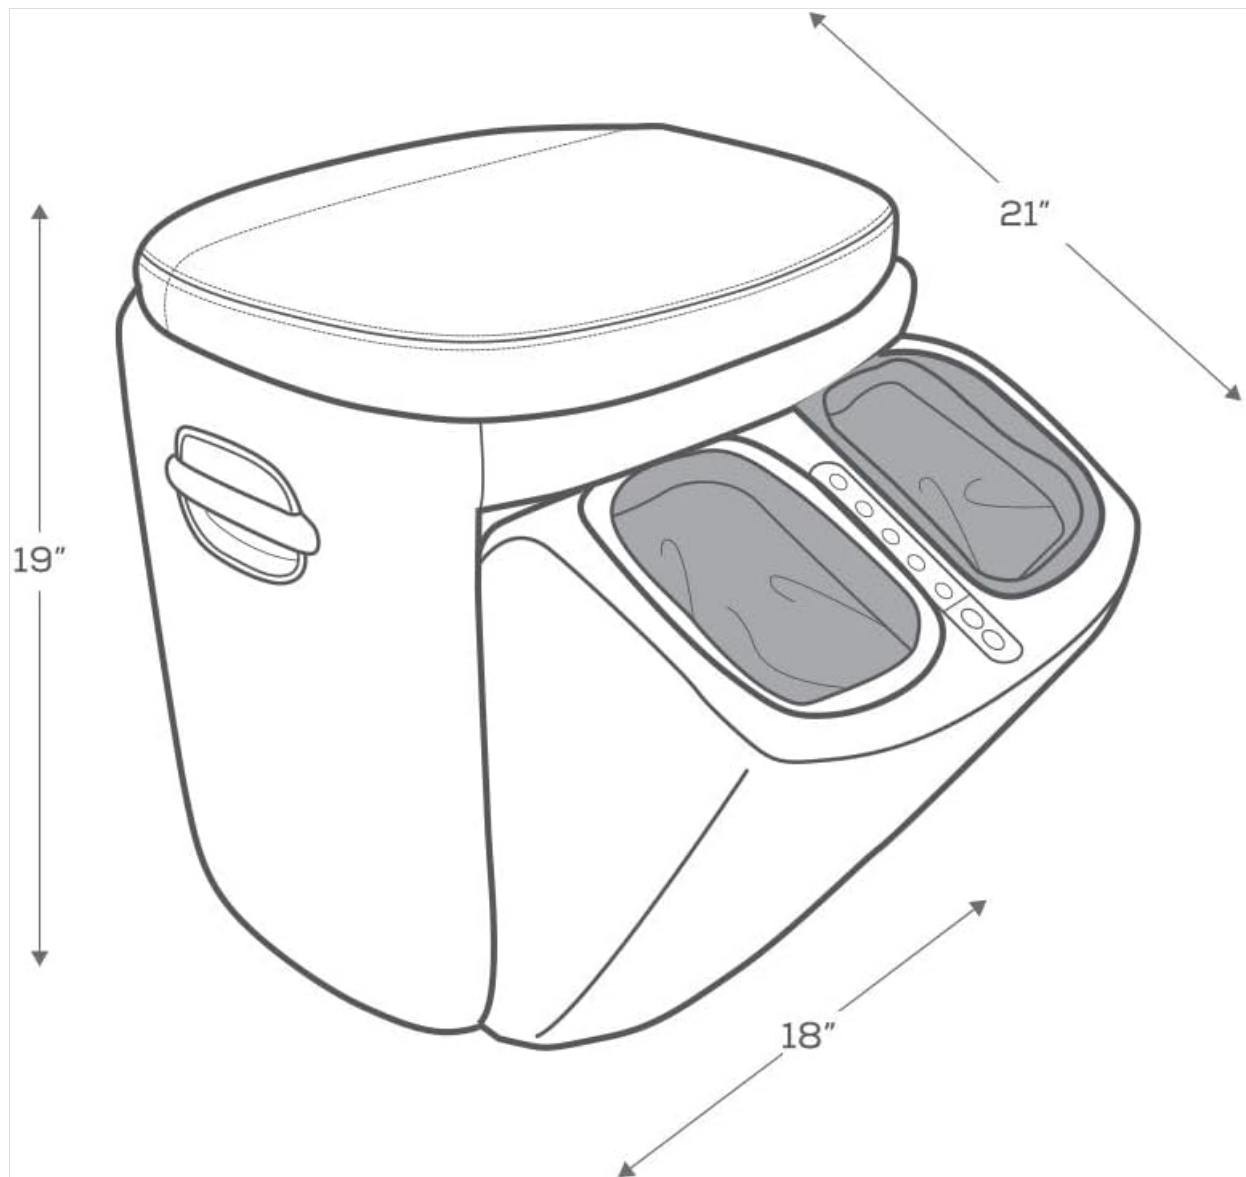


Image: A line drawing illustrating the dimensions of the Human Touch Reveal Ottoman Massager (18" x 21" x 19").

Warranty and Support

1-Year Limited Warranty:

The Human Touch Reveal Foot & Calf Massager Ottoman is backed by a 1-Year Limited Warranty. This warranty covers defects in materials and workmanship for a full year from the date of purchase. Our commitment to quality ensures your investment is protected.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact Human Touch Customer Support. Refer to the contact information provided in your product packaging or visit the official Human Touch website for the most up-to-date support details.



[\[pdf\]](#) Dimension Guide

Reveal Ottoman Massager SS July3024200REVEAL001 by Human Touch Cream The Ultimate Back

Storefrmbshvqhclqimages webfronts cache frmbshvqhclq |||

TRANSFORM REST The Reveal Ottoman Massager provides the ultimate relaxation experience. Immerse your ... y massage to the sole and heel. Endorsed by MODEL: Human Touch Reveal Ottoman Massager PART NUMBER: **200-REVEAL-001** 1-YEAR LIMITED WARRANTY humantouch.com ...

lang:en score:18 filesize: 698.29 K page_count: 2 document date: 2018-10-31



[\[pdf\]](#) Dimension Guide Borchure

Brochure Human Touch Reveal Ottoman v 1719608317 cdn shopify s files 1 0549 1562 9252 |||

TRANSFORM REST The Reveal Ottoman Massager provides the ultimate relaxation experience. Immerse your ... y massage to the sole and heel. Endorsed by MODEL: Human Touch Reveal Ottoman Massager PART NUMBER: **200-REVEAL-001** 1-YEAR LIMITED WARRANTY humantouch.com ...

lang:en score:18 filesize: 428.8 K page_count: 2 document date: 2024-04-17