

SwanKiss ES X3

SwanKiss ES X3 UV-C Toothbrush Sanitizer and Holder

Model: ES X3 | **Brand:** SwanKiss

PRODUCT OVERVIEW

The SwanKiss ES X3 is a portable UV-C toothbrush sanitizer and holder designed to maintain the cleanliness of your toothbrush. It utilizes UV-C technology to sanitize toothbrush heads and features a smart automatic sensor for operation. Its compact design and magnetic mounting option make it suitable for both home and travel use. The device is rechargeable via USB-C and includes a warm air heating function for drying when plugged in.

Enhanced Dual-band UV Disinfection

Authoritative certification with a 99.9% sterilization rate



Image: The SwanKiss ES X3 UV-C Toothbrush Sanitizer and Holder in white.

KEY FEATURES

- **UV-C Technology:** Employs UV-C light to sanitize toothbrush heads, aiming to reduce contaminants.
- **Smart Automatic Sensor:** Initiates a 3-minute sanitization cycle automatically when the cover is closed. The sanitization process pauses if the cover is opened during operation.
- **Warm Air Drying:** Features a warm air heating design for thorough toothbrush drying. This function requires the device to be plugged in to operate.
- **USB Rechargeable:** Equipped with a 300mAh battery and a Type-C USB port for charging. A full charge provides up to 30 days of use for the sanitization function.
- **Magnetic Mounting:** Designed for easy mounting to surfaces like bathroom mirrors or walls using smart magnet technology, eliminating the need for drilling.
- **Universal Compatibility:** Includes adjustable silicone clips to accommodate various toothbrush types, including electric and manual toothbrushes.

Protects Oral Health Clean And Clear

90% of oral problems are related to the bacteria on toothbrush



Image: Illustration of 360-degree UV-C disinfection inside the device.

Authoritative Certification 99.99% Sterilization Rate

Effective against E. coli, Staphylococcus aureus, and more.

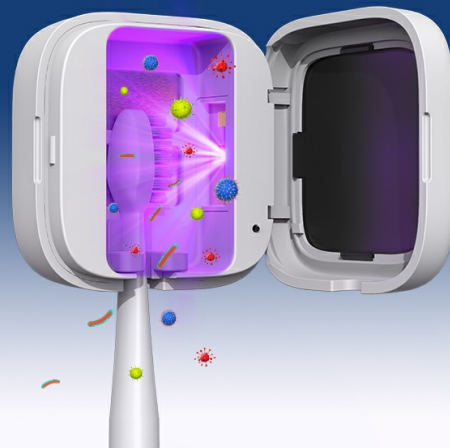


Image: Graphic indicating 65°C constant temperature for drying.

Full Charge Once, Long Battery Life

300mAh battery lasts 30 days,
With fast 1-hour TYPE-C charging

300mAh	30 DAYS	1H
Battery	Extended Battery Life	Charging

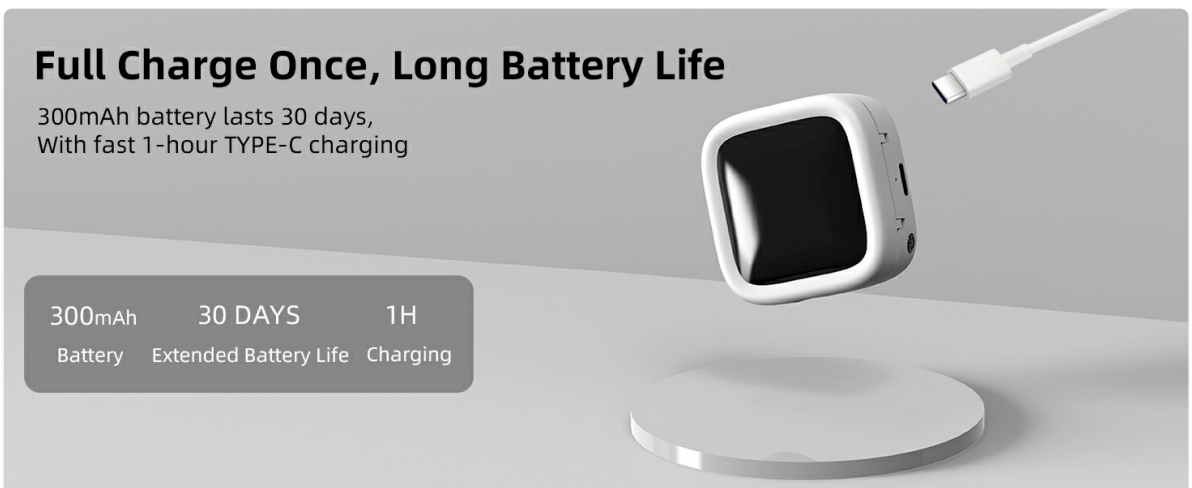


Image: Diagram showing adjustable hook for various brush heads.

Built-In Magnetic Material

Easily attaches to iron surfaces such as fridge, microwave, computer, and more.



Fridge



Computer



Microwave



Iron plate

*Accessories includes 2 iron plates for wall mounting

Image: Hand holding the compact device, highlighting its portability.

SETUP

Initial Charging

Before first use, fully charge the device for approximately 1 hour using the provided Type-C USB cable. A full charge can last up to 30 days for the sanitization function.

Suitable for Home or Travel Use

Small Size Mount Anywhere No More space Worries



Handbag



Pocket



Suitcase



Image: The device being charged via USB-C cable.

Magnetic Wall Mounting

The SwanKiss ES X3 can be easily mounted to a wall or mirror without drilling. Follow these steps:

1. Clean the desired installation area thoroughly.
2. Peel off the adhesive backing from the included iron plate.
3. Stick the iron plate firmly to the wall and wait for 12 hours to ensure strong adhesion.
4. Remove the protective film from the iron plate and attach the device magnetically.
5. Hang your toothbrush in the holder.
6. The device can be easily detached and carried for travel as needed.

No Drilling No Wall Damage



1. Clean the installation area.



2. Peel off the adhesive backing of the iron plate.



3. Stick to the wall and wait for 12 hours.



4. Remove the protective film from the iron plate and attach the device.



5. Hang the toothbrush.



6. Easily detach and carry whenever needed.

Image: Visual guide for magnetic wall mounting without drilling.

Video: Magnetic Mounting and Usage Overview

Your browser does not support the video tag.

Video: This video demonstrates the magnetic mounting process and provides an overview of the product's features and usage.

OPERATING INSTRUCTIONS

Sanitization Cycle

The SwanKiss ES X3 features a smart automatic sensor. To initiate a sanitization cycle:

1. Place your toothbrush head into the designated slot within the device.
2. Close the cover securely. The device will automatically begin a 3-minute UV-C sanitization cycle.
3. If the cover is opened during the cycle, the sanitization process will automatically stop to ensure user safety. Close the cover again to resume.



Image: Toothbrush head positioned inside the sanitizer with UV light active.

Warm Air Drying Function

For optimal drying, the warm air heating function can be activated:

1. Ensure the device is plugged into a power source using the USB-C cable.
2. The warm air drying function will operate while the device is connected to power, helping to keep the toothbrush dry and inhibit bacterial growth.

65° Constant Temperature

Keep away from moisture, inhibiting
bacterial growth.



*Require power for drying function

Image: Graphic representing 65°C constant temperature for drying.

Video: Automatic Sanitization Demonstration

Your browser does not support the video tag.

Video: This video illustrates the automatic sanitization process when a toothbrush is inserted and the cover is closed.

MAINTENANCE

To ensure the longevity and effectiveness of your SwanKiss ES X3, regular cleaning is recommended.

- **Cleaning the Interior:** The device features a detachable rubber seal for easy cleaning of the interior. Gently remove the seal, clean the internal surfaces with a damp cloth, and ensure it is dry before reattaching.
- **Exterior Cleaning:** Wipe the exterior of the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents.



Image: A close-up view of the device showing the detachable rubber seal for cleaning.

TROUBLESHOOTING

- **Device Not Activating:** If the UV light does not turn on when the cover is closed, ensure the device is sufficiently charged. If the issue persists, try opening and closing the cover firmly to ensure the sensor is engaged.
- **Reduced Effectiveness:** If you notice a decrease in performance, ensure the device is regularly cleaned as per the maintenance instructions. Accumulated residue can affect UV light exposure and drying efficiency.
- **Drying Function Not Working:** Confirm that the device is plugged into a power source for the warm air drying function to operate.

SPECIFICATIONS

Feature	Detail
Model Number	ES X3
Product Dimensions	2.16 x 0.9 x 2.16 inches
Item Weight	3.52 ounces
Battery	1 Lithium Ion battery (included), 300mAh
Charging Port	Type-C USB
Sanitization Cycle Duration	3 minutes (automatic)

WARRANTY AND SUPPORT

For any concerns, questions, or after-sale support regarding your SwanKiss ES X3 UV-C Toothbrush Sanitizer and Holder, please contact SwanKiss customer service. We aim to respond within 24 hours to assist you.

Refer to the product packaging or the official SwanKiss website for specific warranty details and contact information.