

ACEMIRO MC-D3032

ACEMIRO MC-D3032 Lighted Medicine Cabinet Mirror User Manual

Model: MC-D3032

Brand: ACEMIRO

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides instructions for the safe installation, operation, and maintenance of your ACEMIRO Lighted Medicine Cabinet Mirror. Please read all instructions carefully before installation and use.

Important Safety Instructions

- **Electrical Safety:** Always unplug the cabinet before cleaning or installing.
- **Environmental Conditions:** Do not install in areas with high humidity or direct water contact.
- **Cleaning:** Avoid using harsh chemicals for cleaning.
- **Installation:** Always use the provided mounting hardware and follow the instructions carefully to prevent accidents. Consult a professional if you are unsure about any aspect of installation or use.

2. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	ACEMIRO
Recommended Uses	Medicine storage
Special Features	Illuminated, Digital Time & Temperature Display, Lighting Memory Function, Dimmable, Defogger, 3-Color Temperature Adjustable Light, Built-in Electrical Outlet, USB Ports

Feature	Detail
Door Style	Double
Weight Limit (per shelf)	11 Pounds
Included Components	Mirror, Shelves
Finish Type	Polished
Number of Shelves	2
Base Type	Wall Mount
Installation Type	Wall Mount, Recessed
Top Material Type	Aluminum
Frame Material	Aluminum
Number of Compartments	2
Customizable	No
Number of Levels	2
Product Dimensions	5 x 30 x 32 inches (Depth x Width x Height)
Item Weight	69.1 pounds

3. SETUP AND INSTALLATION

3.1 Unpacking and Inspection

Carefully remove all components from the packaging. Inspect for any damage. Retain packaging for future transport if needed.

3.2 Installation Options: Surface Mount vs. Recessed

This medicine cabinet supports both surface mount and recessed installation methods. Choose the method suitable for your bathroom design.

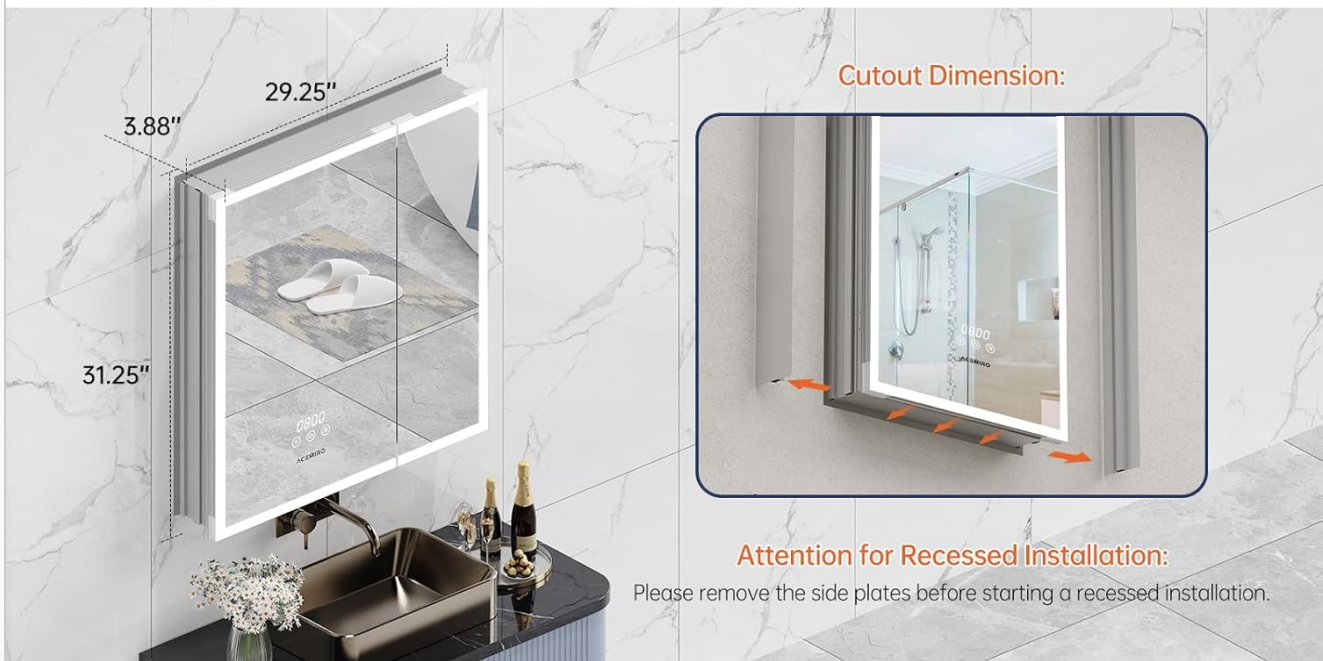
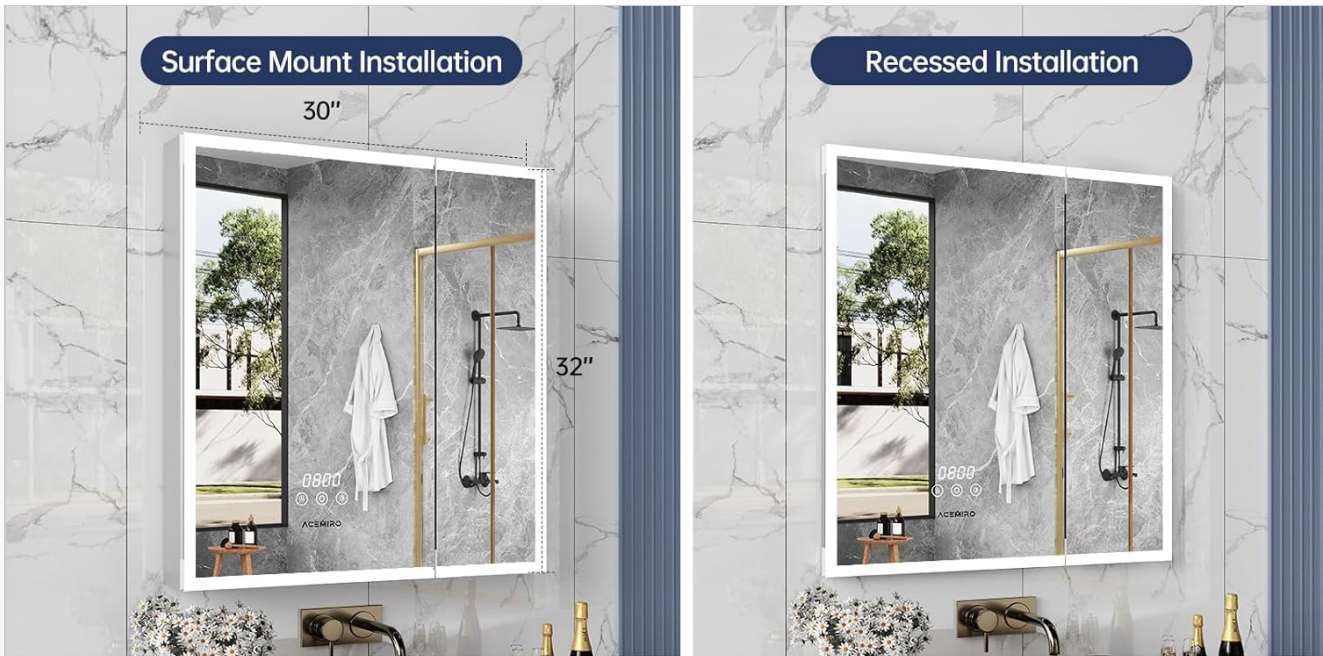


Image: Comparison of Surface Mount and Recessed Installation. The image displays the overall dimensions for surface mount (30" width, 32" height) and provides a visual for recessed installation, noting the need to remove side plates. Cutout dimensions are also indicated.

3.3 Recessed Installation Precaution

Attention for Recessed Installation: Please remove the side plates before starting a recessed installation.

3.4 Cutout Dimension Reference (for Recessed Installation)

Cutout Dimension Reference

Overall Size(inch)	Width(inch)	Height(inch)	Depth(inch)
20x30	19.25	29.25	3.875
24x32	23.25	31.25	3.875
30x32	29.25	31.25	3.875
36x30	35.25	29.25	3.875
60x32	59.25	31.25	3.875

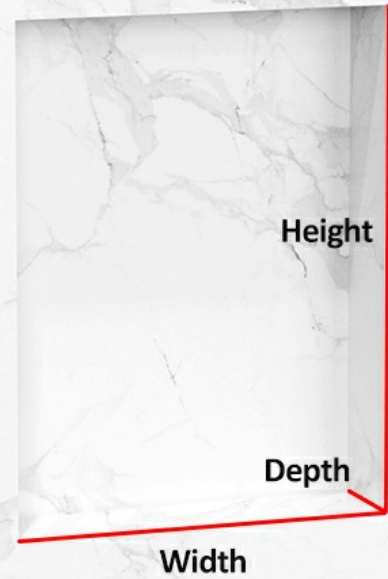
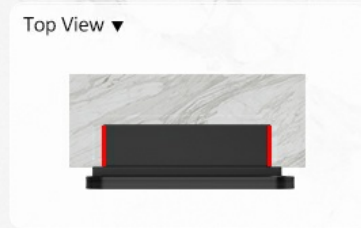


Image: Cutout Dimension Reference. This image provides a table listing recommended cutout dimensions (width, height, depth) for different overall cabinet sizes, including 30x32 inches. A diagram illustrates how width, height, and depth are measured for the cutout.

Recommended Cutout Dimensions for Recessed Installation

Overall Size (inch)	Width (inch)	Height (inch)	Depth (inch)
20x30	19.25	29.25	3.875
24x32	23.25	31.25	3.875
30x32	29.25	31.25	3.875
36x30	35.25	29.25	3.875
60x32	59.25	31.25	3.875

3.5 Wiring

The cabinet is designed for hardwired installation. Ensure power is turned off at the circuit breaker before beginning any wiring. Consult a qualified electrician if you are not comfortable with electrical work.

4. OPERATION

The ACEMIRO Lighted Medicine Cabinet Mirror features intuitive touch controls for various functions.

Smart & Functional Display Screen



Image: Smart & Functional Display Screen. This image illustrates the touch controls on the mirror for activating the defogger, turning the light on/off and adjusting brightness, and selecting color temperature. It also provides detailed instructions for setting the clock and temperature display.

4.1 Touch Button Functions

- **Defogger:** Short press the defogger icon to turn the defogger on or off. The defogger operates for 2 minutes of heating up and then auto-shuts off after 1 hour.
- **Light Control:**
 - Short press the light icon to turn the light ON/OFF.
 - Long press the light icon to adjust the brightness (stepless dimming from 10% to 100%). The mirror features a memory function to save your last brightness setting.
- **Color Temperature Adjustment:** Short press the color temperature icon to cycle through three color temperatures: 3000K (Warm Light), 4000K (Natural Light), and 6000K (White Light).

Brightness Adjustment - Stepless Dimming

Long press to adjust brightness for your preference



Image: 3-Color Temperature Options. This image displays the mirror's lighting in three distinct color temperatures: 3000K Warm Light, 4000K Natural Light, and 6000K White Light, demonstrating the adjustable lighting feature.



Image: Brightness Adjustment - Stepless Dimming. This image illustrates the stepless dimming capability of the mirror's light, showing the brightness level changing from 10% to 50% to 100% via a long press on the light button.

4.2 Clock and Temperature Display Setting

1. Long press the clock icon for 3 seconds to enter the clock setting mode.
2. Short press the clock icon to select your desired scale display (Hour-Minute, Fahrenheit, Celsius) in a cycle.

3. Long press the clock icon again to save the setting and exit.
4. While in setting mode, short press the hour/minute display digits to decrease the value.
5. Short press the defogger icon to increase the hour/minute display digits.

4.3 Internal Power Outlets and USB Ports

The cabinet includes built-in electrical outlets and USB ports for convenient charging and powering of small devices inside the cabinet.



Image: Built-in USB Ports & Outlets. This close-up image shows the integrated electrical outlets and USB charging ports located inside the medicine cabinet, designed for convenient power access.

4.4 Adjustable Shelves

The tempered glass shelves are adjustable to customize your storage space. Carefully lift and reposition the shelves to your desired height.



Image: Adjustable Glass Shelves. This image demonstrates the adjustability of the tempered glass shelves within the cabinet, indicating that they can be moved up or down to customize storage.

4.5 Soft-Closing Hinges

The cabinet doors are equipped with DTC soft-closing buffer hinges, ensuring quiet and gentle closing.



Image: DTC Soft-close Hinges. A detailed view of the DTC soft-close hinges, highlighting their mechanism for gentle door closure.

5. MAINTENANCE

5.1 Cleaning the Mirror and Cabinet

- Always unplug the cabinet from the power source before cleaning.
- Use a soft, damp cloth with a mild, non-abrasive cleaner for the mirror surface.
- For the cabinet exterior and interior, wipe with a soft, damp cloth.
- Avoid using abrasive cleaners, ammonia-based products, or harsh chemicals, as these can damage the mirror coating or cabinet finish.
- Ensure no water enters electrical components.

5.2 General Care

- Regularly check all mounting hardware to ensure it remains secure.
- Avoid placing excessively heavy items on the shelves.
- Do not expose the cabinet to extreme temperature changes or direct sunlight for prolonged periods.

6. TROUBLESHOOTING

If you encounter issues with your medicine cabinet, please refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; faulty LED driver.	Check the circuit breaker and wall switch. Ensure all wiring connections are secure. If the issue persists, contact customer support.
Defogger is not working.	Defogger not activated; power issue.	Short press the defogger icon to activate. Verify power supply to the unit.
Clock/Temperature display is incorrect or not visible.	Incorrect setting; power interruption.	Reset the clock and temperature display following the instructions in Section 4.2. Ensure continuous power supply.
Mirror surface is scratched or damaged.	Improper cleaning agents; physical impact.	Use only recommended cleaning methods. Avoid abrasive materials. Physical damage is typically not covered under warranty.
Doors do not close softly.	Hinges require adjustment or are damaged.	Inspect hinges for any obstructions or damage. If necessary, contact customer support for replacement parts or guidance.

7. WARRANTY AND CUSTOMER SUPPORT

7.1 Warranty Information

This ACEMIRO product is covered by a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized modifications.



Image: ACEMIRO Customer Service. This image highlights the customer support features, including 24/7 online assistance, a hassle-free returnless solution, and a 2-year warranty.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact ACEMIRO customer support. Our team is available to provide 24/7 online assistant support.

Please have your model number (MC-D3032) and purchase date ready when contacting support.

For more information, visit the official ACEMIRO store: [ACEMIRO Store](#)