

ANFIER W12S

ANFIER W12S Translator Device User Manual

Model: W12S

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ANFIER W12S Translator Device. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The ANFIER W12S is a versatile language translator device designed to facilitate seamless communication across various languages and accents. It features a 3.7-inch ultra-large HD screen for enhanced clarity and is compact and lightweight for portability.

3.7" Ultra-HD screen

Easy-to-read text
User-friendly for people of all ages



Image: The ANFIER W12S Translator Device, showcasing its 3.7-inch ultra-large HD screen for clear text display.

3. GETTING STARTED (SETUP)

3.1 Unboxing and Initial Inspection

Upon opening the package, ensure all components are present:

- ANFIER W12S Translator Device
- Data Cable (USB-C)
- Instruction Manual
- Lanyard
- Protective Case

3.2 Charging the Device

The device is equipped with a 1500mAh Lithium Ion rechargeable battery. For first use, fully charge the device using the provided USB-C data cable and a compatible power adapter.

Long Battery Life



Image: The ANFIER W12S device highlighting its 1500mAh battery, offering up to 8 hours of continuous translation and 7 days of standby time.

3.3 Initial Device Configuration

After powering on the device, follow the on-screen prompts to set up:

1. **Wi-Fi Connection:** Navigate to the WLAN settings and connect to a 2.4GHz Wi-Fi network. A stable internet connection is required for online translation features.
2. **Date & Time:** Set the correct date and time, or enable automatic time synchronization.

3.4 Offline Language Package Download

To enable offline translation, you must download the desired language packages while connected to the internet.

- Go to 'Offline package management' in the device settings.
- Select the languages you wish to download for offline use. The device supports 16 major languages for offline translation.

Offline Voice Translation Between 16 Languages



English



Spanish



Simplified Chinese



Traditional Chinese



Japanese



Arabic



Portuguese



Russian



French



German



Korean



Thai



Hindi



Vietnamese



Italian



Indonesian

Image: The ANFIER W12S displaying the range of 16 languages available for offline voice translation, including English, Spanish, Simplified Chinese, Traditional Chinese, Japanese, Arabic, Portuguese, Russian, French, German, Korean, Thai, Hindi, Vietnamese, Italian, and Indonesian.

4. OPERATING INSTRUCTIONS

4.1 Two-Way Conversation Translation

The device supports rapid two-way translation. For online use, it supports 144 languages and accents with 98% accuracy and a response time under 0.5 seconds. For offline use, it supports 16 major languages.

1. Select your source and target languages on the screen.
2. Press and hold the corresponding button (A or B) to speak in your language.
3. Release the button, and the device will translate and speak the text in the target language.

Your browser does not support the video tag.

Video: Introduction to FancyDove Translator, demonstrating initial setup, two-way conversation translation, real-time long translation, offline use, smart recording, image text recognition, text input, language learning, and group translation features.

4.2 Real-Time Long Translation Mode

This mode is ideal for speeches, lectures, or conferences, providing continuous translation of longer dialogues.

- Access the 'Realtime translation' mode from the main menu.
- The device will continuously listen and translate spoken content, displaying it on the screen.

4.3 Smart Recording (AI Transcription and Translation)

Record conversations and have them transcribed and translated into text. This feature is useful for reviewing discussions or capturing important information.

- Select 'Smart recording' from the main menu.
- Start recording, and the device will transcribe and translate the audio into text.
- You can replay or delete recorded conversations.

4.4 Image Text Recognition and Translation

Use the device's camera to translate text from images, such as signs, menus, or documents.

- Select 'Photo translation' from the main menu.
- Point the camera at the text you wish to translate.
- Capture the image, and the device will recognize the text and provide a translation.

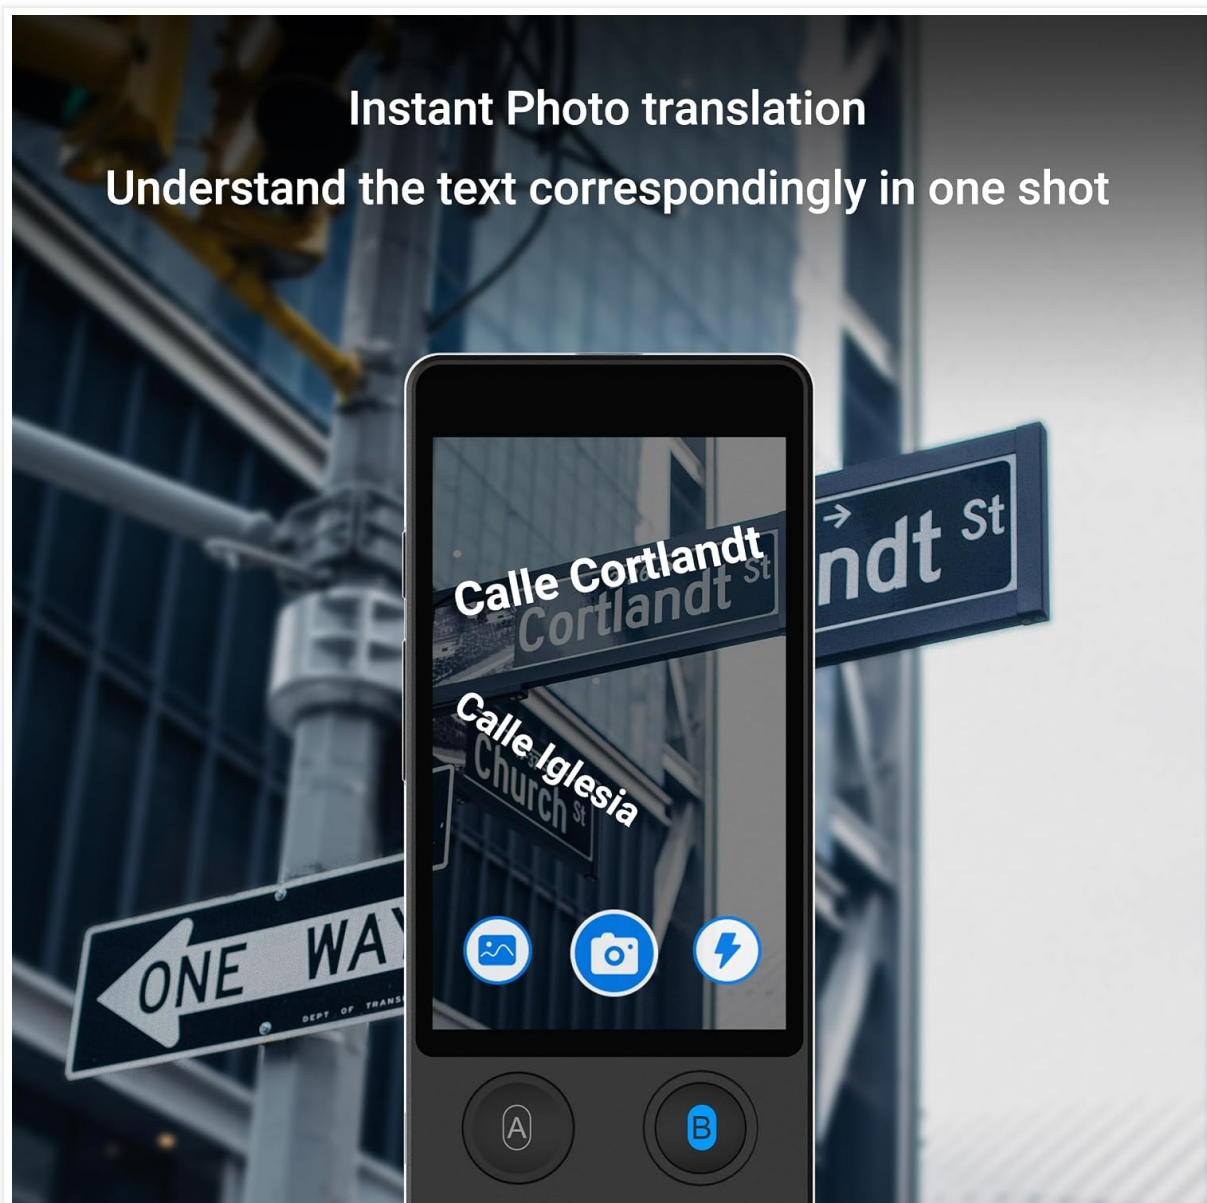


Image: The ANFIER W12S demonstrating its instant photo translation capability, translating text from street signs in one shot.

4.5 Text Input Translation

For situations where speaking is not ideal, you can manually input text for translation.

- Select 'Input translation' from the main menu.
- Type your text, and the device will translate it into the selected target language.

4.6 Language Learning and Accent Correction

Improve your pronunciation and language skills with the language learning feature.

- Access 'Language learning' from the main menu.
- Speak phrases, and the device will provide feedback on your pronunciation and accent.

4.7 ChatGPT AI Assistant

The device includes a ChatGPT AI Assistant for various queries and interactions. Note that a subscription may be required to access all features of the AI assistant.

- Select 'AI XiaoBei' or 'ChatGPT' from the main menu.
- Interact with the AI assistant for information, advice, or creative content.

Your browser does not support the video tag.

Video: Review of the AI Translator, highlighting the ChatGPT AI Assistant and its various roles.

4.8 Group Translation / Phone Translation

Facilitate multi-person conversations or use your phone as an additional translator in a group setting.

- **Group Translation:** Create a group session where multiple devices can translate simultaneously, allowing each participant to speak and read in their own language.
- **Phone Translation:** Connect your phone to the device to extend translation capabilities, supporting up to 500 devices for large meetings or educational settings.

4.9 Diverse Broadcasting Voice Switch

Customize the translation output by switching between male and female voices for certain languages.

- Go to 'Settings' and then 'Voice broadcast'.
- Select your preferred voice (male or female). Note that some languages may not support both voice options.

Support Male and Female Voices Switch



Male voice



Female voice

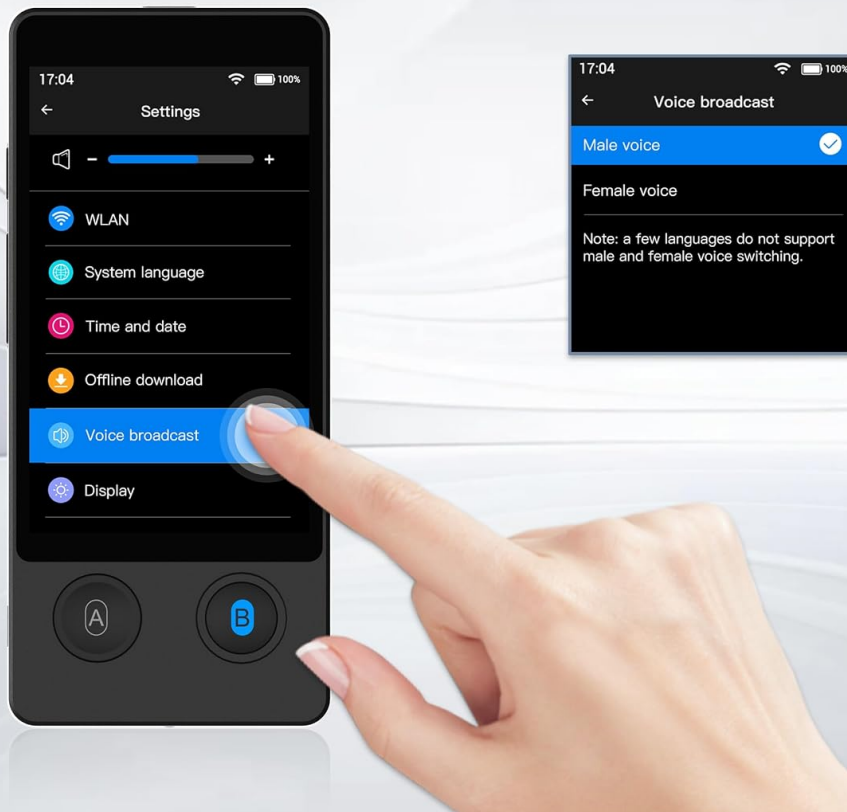


Image: The ANFIER W12S settings menu, illustrating the option to switch between male and female voices for broadcast translations.

5. MAINTENANCE

To ensure the longevity and optimal performance of your ANFIER W12S Translator Device, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in its protective case when not in use to prevent scratches and damage. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly, even if not in constant use.

6. TROUBLESHOOTING

If you encounter issues with your ANFIER W12S, refer to the following common solutions:

- **Device Not Powering On:** Ensure the device is fully charged. Connect it to the charger and wait a

few minutes before attempting to power it on again.

- **Network Connection Failed:** Verify your Wi-Fi connection. Ensure you are connected to a stable 2.4GHz network. Try restarting your Wi-Fi router or the device.
- **Offline Translation Not Working:** Confirm that the necessary language packages have been downloaded. Go to 'Offline package management' in settings to check and download languages.
- **Inaccurate Translation:** Ensure clear speech and proper pronunciation. Check that the correct source and target languages are selected. For online translation, a strong internet connection is crucial for optimal accuracy.
- **Audio Issues:** Check the volume settings. Ensure the speaker is not obstructed.

7. SPECIFICATIONS

Feature	Detail
Brand	ANFIER
Model	W12S-BLK
Online Translation	144 Languages and Accents (98% accuracy, <0.5s response)
Offline Translation	16 Major Languages
Battery Capacity	1500mAh Lithium Ion
Battery Life	Up to 8 hours continuous use, 7 days standby
Screen Size	3.7-inch Ultra-large HD
Weight	Approx. 100g
Connectivity	Wi-Fi (2.4GHz)
Charging Port	USB-C

8. SUPPORT

For any inquiries, technical assistance, or support, please contact ANFIER customer service. Refer to the product packaging or the official ANFIER website for contact details.