

## Wooask M6

# Wooask M6 Translator Earbuds User Manual

Model: M6

## INTRODUCTION

---

The Wooask M6 Translator Earbuds are designed to facilitate real-time, bidirectional language translation. These earbuds offer both offline and online translation capabilities, making them suitable for various communication scenarios, including travel, business, and daily interactions. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.

## PACKAGE CONTENTS

---

- Wooask M6 Translator Earbuds (Left and Right)
- Charging Case
- USB-A to USB-C Charging Cable
- Multiple Sizes of Ear Tips (Small, Medium, Large)
- User Manual (this document)

## SETUP

---

### 1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging case and a compatible USB power source. The indicator light on the case will show charging status. A full charge typically takes approximately 90 minutes.

### 2. App Download and Installation

To utilize the full translation features, download the "WasTrans" application on your smartphone. The app is available on both the Apple App Store for iOS devices and Google Play Store for Android devices.

### 3. Bluetooth Pairing

1. Ensure your smartphone's Bluetooth is enabled.

2. Open the charging case. The earbuds will automatically enter pairing mode.
3. Open the "WasTrans" app and follow the on-screen instructions to connect the M6 earbuds. The app will guide you through the Bluetooth connection process.
4. Once connected, the app will display a confirmation.

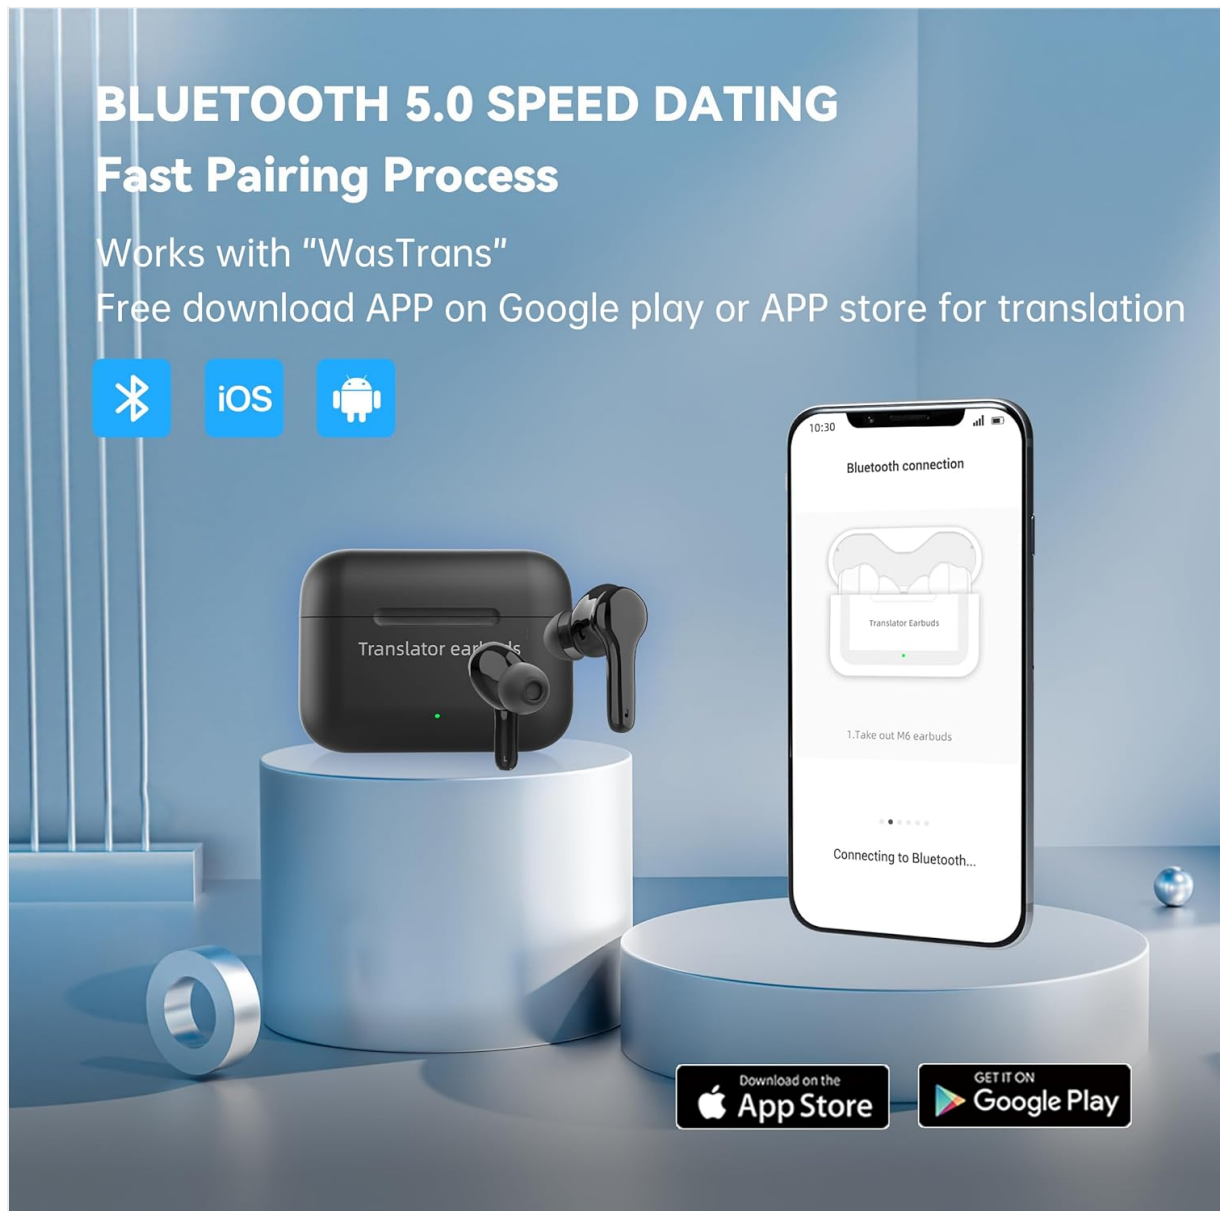


Image: The Wooask M6 Translator Earbuds and charging case next to a smartphone displaying the Bluetooth connection screen for the "WasTrans" app, illustrating the fast pairing process.

## OPERATING MODES

---

The Wooask M6 Translator Earbuds offer multiple modes to suit different communication needs:

### 1. Touch Mode

In Touch Mode, both participants wear an earbud. To speak, touch and hold the earbud. Release to translate. This mode is ideal for direct, extended conversations where both parties are actively participating.

### 2. Speaker Mode

Speaker Mode is suitable when only one person wears the earbuds. The earbud wearer speaks, and the translation is played through the smartphone's speaker for the other person. The other person can speak into the smartphone, and the translation is heard by the earbud wearer. This mode is useful for quick interactions or when

sharing with a group.

### 3. Free-Talk Mode

Free-Talk Mode allows for more natural conversation flow. Both individuals can speak freely without needing to touch the earbuds. The system automatically detects and translates speech. This hands-free mode is convenient for casual conversations.

## Fluent Translations Across Different Situations



Image: Visual representation of the three operating modes: Touch Mode (person touching earbud), Free Talk Mode (two people conversing naturally), and Speaker Mode (one person with earbud, another using a phone).

## KEY FEATURES

### Offline Translation

The M6 earbuds support offline translation for 8 languages: Chinese, English, Japanese, Korean, Russian, German, French, and Spanish. This feature allows for translation without an internet connection, ideal for travel in remote areas.

# Offline Translation in 8 Languages

No Internet Required

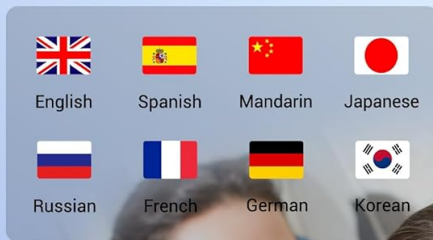


Image: A visual display of the flags and names of the 8 languages available for offline translation: English, Spanish, Mandarin, Japanese, Russian, French, German, and Korean.

## Online Translation

When connected to the internet via the "WasTrans" app, the earbuds provide online translation for 144 languages and 70 different accents. This extensive coverage ensures effective communication across diverse linguistic backgrounds.

# 74 LANGUAGES+70 ACCENTS

## With 4 Leading Translation Engine

Translation for superb high coverage regions  
with up to 98% accuracy



Google

Microsoft

ChatGPT

NUANCE

Image: A world map with connection points, indicating the broad linguistic support of 74 languages and 70 accents for online translation.

### High Accuracy and Low Latency

The M6 earbuds boast up to 98% translation accuracy and a low latency of 0.5 seconds, powered by a quad-core processor and advanced AI translation technology. This ensures smooth and precise conversations.

# Cutting-Edge Technology for Precise Translation

Powered by a Quad-Core Processor



High Accuracy  
Up to 98%

Fast Response  
in 0.5S

Image: An illustration of an earbud with an integrated AI chip, emphasizing high accuracy (up to 98%) and fast response time (0.5 seconds) for precise translation.

## Three-in-One Functionality

Beyond translation, the M6 earbuds deliver high-fidelity stereo sound for music playback and clear audio for phone calls. Environmental Noise Cancellation (ENC) enhances audio quality during calls and listening.

## BATTERY LIFE AND CHARGING

---

The Wooask M6 Translator Earbuds are designed for extended use:

- **Continuous Translation:** Up to 5 hours on a single charge.
- **Total Battery Life with Charging Case:** Up to 19 hours.
- **Full Charge Time:** Approximately 90 minutes for both earbuds and case.
- **Charging Port:** USB Type-C.

# EXTREMELY LONG BATTERY LIFE



**5** hours

Continuous Translation



**19** hours

Battery Life With Charging Case



**90** Mins

Fully charged over Type C port



Image: The Wooask M6 charging case with indicators for continuous translation time (5 hours), total battery life with case (19 hours), and full charge time (90 minutes via Type-C).

## ERGONOMICS AND FIT

---

The M6 earbuds feature an ergonomic design for comfortable and secure wear. They are IPX4 sweat-proof, making them suitable for various activities. Memory foam ear tips are included in three sizes (Small, Medium, Large) to ensure a personalized and snug fit for different ear canal sizes.

# IN-CANAL DESIGN FITS-ALL EARBUDS

Three sets of rubber tips to accommodate small, medium, and large ear canal sizes



Image: A diagram showing the in-canal design of the earbud and three different sizes of ear tips (S, M, L) to accommodate various ear canal sizes for optimal fit and comfort.

## SPECIFICATIONS

Feature	Detail
Model Number	WOOASK-M6
Package Dimensions	4.84 x 4.13 x 1.65 inches
Item Weight	6.4 ounces
Batteries	3 Lithium Ion batteries (included)
Offline Languages	8 (Chinese, English, Japanese, Korean, Russian, German, French, Spanish)
Online Languages/Accents	144 languages, 70 accents
Translation Accuracy	Up to 98%
Latency	0.5 seconds

Feature	Detail
Water Resistance	IPX4 (sweat-proof)
Charging Port	USB Type-C

## TROUBLESHOOTING

---

- **Earbuds not pairing:** Ensure Bluetooth is enabled on your device and the earbuds are charged. Restart the "WasTrans" app and try pairing again.
- **Inaccurate translations:** Ensure clear speech and minimal background noise. Verify that the correct source and target languages are selected in the app. Update the app to the latest version.
- **App permission concerns:** The "WasTrans" app requires certain permissions to function correctly (e.g., microphone access for translation). Review app permissions in your phone's settings and grant necessary access. If you have concerns about specific permissions, contact Wooask support for clarification.
- **Poor audio quality:** Check earbud fit and try different ear tip sizes. Ensure earbuds are clean and free of debris.
- **Earbuds not charging:** Verify the USB-C cable is securely connected to both the charging case and power source. Ensure the charging contacts on the earbuds and inside the case are clean.

## MAINTENANCE

---

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use abrasive materials or liquids.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and maintain battery life.
- **Battery Care:** Avoid fully discharging the batteries frequently. Charge the device regularly, even if not in constant use, to prolong battery lifespan.

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your purchase or visit the official Wooask website. If you encounter any issues not covered in this manual or require further assistance, please contact Wooask customer support through their official channels.