

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Purell](#) /

> [PURELL ES6 Automatic Hand Sanitizer Dispenser, Model 6424-01: User Manual](#)

Purell 6424-01

PURELL ES6 Automatic Hand Sanitizer Dispenser (Model 6424-01) User Manual

Comprehensive instructions for installation, operation, and maintenance.

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your PURELL ES6 Automatic Hand Sanitizer Dispenser, Model 6424-01. Please read this manual thoroughly before installation and use to ensure optimal performance and longevity of the product.





Figure 1: PURELL ES6 Automatic Hand Sanitizer Dispenser, Graphite.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x PURELL ES6 Automatic Hand Sanitizer Dispenser (Graphite)
- 1 x Adhesive Mounting Tape
- 4 x C-cell Batteries

Note: PURELL ES6 Hand Sanitizer Refills are sold separately.

Monitor product levels with just one look



Figure 2: Dispenser and compatible refill (sold separately).

3. SETUP AND INSTALLATION

3.1 Battery Installation

1. Open the dispenser cover.
2. Insert the 4 C-cell batteries into the battery compartment, ensuring correct polarity (+/-).
3. Close the dispenser cover securely.

3.2 Mounting the Dispenser

The dispenser can be mounted using the included adhesive tape or by screwing it directly into a wall (screws not included).

Adhesive Mounting:

1. Clean the desired wall surface thoroughly to ensure it is dry and free of dust or grease.
2. Peel the backing from the adhesive mounting tape and firmly press it onto the back of the dispenser.
3. Position the dispenser on the wall and press firmly for 30 seconds to ensure a strong bond.

Screw Mounting (Hardware not included):

1. Mark the desired mounting location on the wall.
2. Use appropriate screws and wall anchors (if necessary) to secure the dispenser's mounting plate to the wall.

3.3 Refill Installation

The PURELL ES6 dispenser is designed for use with PURELL ES6 Advanced Hand Sanitizer refills (SKUs 6451-02, 6453-02, or 6463-02).

1. Ensure the dispenser cover is open.
2. Align the ES6 refill bottle with the dispenser's internal mechanism. The refill features a factory-sealed nozzle to prevent contamination.
3. Push the refill firmly into place until it clicks, ensuring a secure connection.
4. Close the dispenser cover.

PURELL® ES6 Touch-Free Hand Sanitizer Dispenser Dimensions



Figure 3: Matching the ES6 refill to the dispenser.





Figure 4: Factory-sealed nozzle for hygienic dispensing.

4. OPERATION

The PURELL ES6 dispenser is a touch-free unit designed for automatic dispensing.

1. Place your hand directly under the dispenser's sensor.
2. The dispenser will automatically dispense a measured amount of hand sanitizer into your palm.
3. Rub your hands together thoroughly until dry.

The green LED indicator on the dispenser will illuminate during operation, confirming activation.

5. MAINTENANCE

5.1 Cleaning

- Wipe the exterior of the dispenser with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- The included drip tray helps keep the area clean and can be removed for washing.

5.2 Refill Monitoring and Replacement

The transparent design of the refill bottle allows for easy monitoring of sanitizer levels without opening the dispenser.

Factory-sealed nozzle helps eliminate contamination



Figure 5: At-A-Glance™ design for easy refill monitoring.

When the refill is empty, replace it by following the "Refill Installation" steps in Section 3.3.

5.3 Battery Replacement

When the dispenser's performance diminishes or the green LED no longer illuminates, it may be time to replace the batteries. Follow the "Battery Installation" steps in Section 3.1.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser does not activate or dispense.	<ul style="list-style-type: none"> Low or dead batteries. Incorrect battery installation. Refill not properly seated. Sensor obstructed. Dispenser is locked (optional feature). 	<ul style="list-style-type: none"> Replace with new C-cell batteries. Ensure batteries are inserted with correct polarity. Press refill firmly until it clicks into place. Clear any obstructions from the sensor area. Check if the optional locking feature is engaged and unlock if necessary.
Sanitizer leaks from dispenser.	<ul style="list-style-type: none"> Refill not properly seated. Incorrect refill type used. 	<ul style="list-style-type: none"> Ensure refill is firmly clicked into place. Use only PURELL ES6 compatible refills.

7. SPECIFICATIONS

Feature	Detail
Model Number	6424-01
Color	Graphite
Material	Durable ABS Plastic (recycling code number 7)
Dimensions (H x W x D)	14.39" x 5.51" x 3.88"
Item Weight	1.97 pounds
Batteries	4 C-cell batteries (included)
Compatible Refills	PURELL ES6 Advanced Hand Sanitizer Refills (SKUs 6451-02, 6453-02, 6463-02)



6453-02

Other refills available:
6451-02, 6463-02

Refills Sold
Separately

Figure 6: PURELL ES6 Dispenser dimensions.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The PURELL ES6 Automatic Hand Sanitizer Dispenser comes with a **Guaranteed Reliability** warranty. For specific terms and conditions, please refer to the official PURELL website or contact customer service.

Match the Refill to the Dispenser

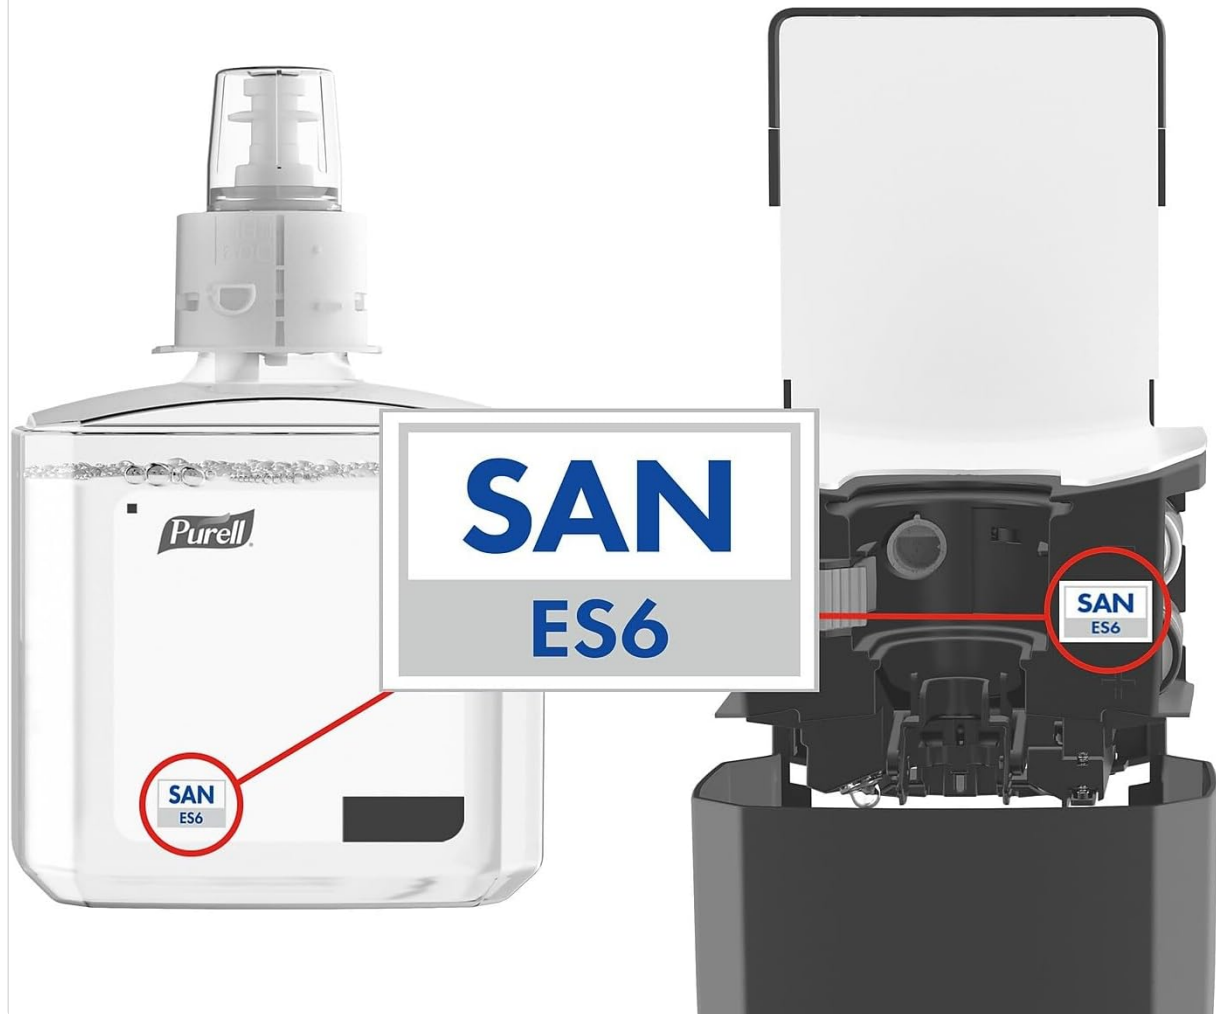


Figure 7: PURELL Dispenser Reliability Guarantee.

8.2 Customer Support

For further assistance, technical support, or inquiries regarding PURELL products, please visit the official PURELL website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.