



[Manuals.plus](#) /

› [Nouhaus](#) /

› Nouhaus Orbit Heated Massage Chair User Manual

## Nouhaus Orbit

# Nouhaus Orbit Heated Massage Chair User Manual

Model: Orbit

## INTRODUCTION

---

Welcome to the Nouhaus Orbit Heated Massage Chair. This manual provides essential information for the safe and effective use of your new massage chair. The Orbit is designed to offer a comprehensive full-body massage experience with zero-gravity reclining, advanced 3D massage technology, and an integrated dual sound system. Please read this manual thoroughly before operation and retain it for future reference.



Figure 1: Nouhaus Orbit Heated Massage Chair (Elder White)

## SAFETY INFORMATION

---

To ensure safe operation and prevent injury or damage, please adhere to the following guidelines:

- Do not exceed the maximum weight recommendation of 400 pounds (181 kg).
- Use the chair only for its intended purpose of relaxation.
- Keep children and pets away from the chair during operation.
- Ensure the power cord is not damaged or pinched.
- Do not attempt to disassemble or repair the chair yourself. Contact customer support for assistance.
- Avoid using the chair in excessively humid environments.

## SETUP

---

The Nouhaus Orbit massage chair requires minimal assembly. Follow these steps to set up your chair:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for potential future transport or returns.
2. **Placement:** Position the chair on a hard, level floor, ensuring adequate space around it for reclining and operation.
3. **Assembly:** Follow the detailed assembly instructions provided in the separate assembly guide. This typically involves attaching the backrest and connecting any necessary cables.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the power switch on the chair is in the 'Off' position before plugging in.
5. **Initial Check:** Before first use, inspect all connections and ensure the chair is stable.



Figure 2: Chair Dimensions (45.6" H x 41.7" D x 28.7" W)

## OPERATING INSTRUCTIONS

---

The Nouhaus Orbit offers a variety of features for a personalized massage experience.

### Power On/Off

- Locate the power button on the side control panel or remote. Press once to power on, and again to power off.

### Massage Modes

The chair features an advanced 3D stereoscopic massage module with 14 automatic, user-specific massage modes. You can switch between 2D and 3D modes.

- **Automatic Modes:** Select from 14 pre-programmed massage routines via the remote control or the Nouhaus IoT App.
- **2D/3D Modes:** Adjust the massage intensity and depth by switching between 2D and 3D massage settings.
- **One-Touch Automatic Mode:** Initiate a quick, pre-set massage with a single button press.



Figure 3: Key Features and Massage Modes

## Zero-Gravity Function

The zero-gravity function smoothly adjusts the chair's recline angle between 120° and 145°, optimizing body posture for a deeper massage experience.

- Use the dedicated zero-gravity button on the remote or app to activate and adjust the recline.

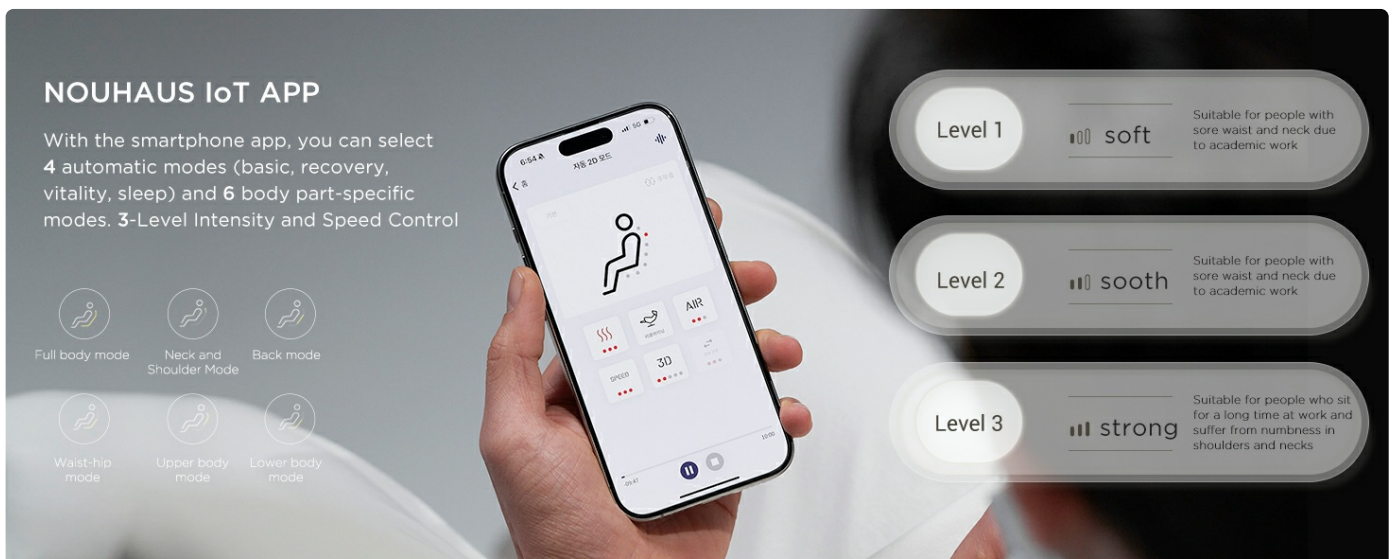


Figure 4: Zero-Gravitational Reclining

## 3-Level Heat Mode

Enjoy targeted heat therapy with three adjustable temperature levels (35°C, 40°C, 45°C) across six spots: the back, hips, and legs.

- Activate and adjust the heat settings using the remote control or the Nouhaus IoT App.



Figure 5: 3-Level Heat Mode and Pelvic Air Cells

## Bluetooth Speaker System

The Orbit features a 2+1-way Bluetooth speaker system, expertly tuned for a superior audio experience. Connect your devices to enjoy your favorite content.

- **Pairing:** Enable Bluetooth on your device and select "Nouhaus Orbit" from the available devices to pair.
- **Audio Control:** Adjust volume and playback directly from your connected device or the chair's controls.



Figure 6: 2+1 Way Premium Sound System

## Nouhaus IoT App Control

Control your massage chair conveniently using the Nouhaus IoT App, available for download on the App Store and Google Play.


- **Download:** Search for "Nouhaus IoT" in your device's app store.
- **Connection:** Follow in-app instructions to connect your chair.
- **Features:** Select from 4 automatic modes (Basic, Recovery, Vitality, Sleep) and 6 body part-specific modes. Adjust 3-level intensity and speed.

## Reclining massage chair ORBIT

Advanced technology created after 3 years of research at our own R&D center, so that your rest can be premium.



TSC Function /  
Sound Vaccine

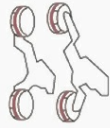

Upgraded 3D  
heated massage module



reddot award 2022  
winner

Red Dot Award-winning  
sophisticated design



14 massage modes  
NOUHAUS APP control



Luxurious detailed  
natural cowhide seat



145° reclining with  
electric dual motors

Figure 7: Nouhaus IoT App Interface

## Official Product Videos

Video 1: Overview of the Nouhaus Orbit Heated Massage Chair features and design. This video demonstrates the chair's general functionality and aesthetic.

Video 2: Demonstration of the Orbit's sound system and its integration with the massage experience. This video highlights the audio quality and how it enhances relaxation.

Video 3: Answering common questions about the Orbit, potentially covering app usage, specific features, or operational tips. This video provides practical insights for users.

## MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Nouhaus Orbit massage chair.

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the leather or fabric.
- **Storage:** When not in use for extended periods, store the chair in a cool, dry place away from direct sunlight.
- **Inspection:** Periodically check the power cord and all connections for any signs of wear or damage.

## TROUBLESHOOTING

If you encounter any issues with your Nouhaus Orbit massage chair, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Chair does not power on	Power cord not properly connected; Power switch off; No power from outlet	Ensure power cord is securely plugged in; Turn power switch to 'On'; Check outlet with another device or test circuit breaker
Massage function not working	Incorrect mode selected; Safety feature activated	Select a massage mode via remote or app; Ensure no obstructions are present; Restart the chair

Problem	Possible Cause	Solution
Bluetooth speaker not connecting	Bluetooth not enabled on device; Chair not in pairing mode; Interference	Enable Bluetooth on your device; Ensure chair is discoverable; Move closer to the chair or restart both devices
Heat function not working	Heat mode not activated; Low temperature setting	Activate heat mode via remote or app; Increase temperature setting

If the problem persists after attempting these solutions, please contact Nouhaus customer support.

## SPECIFICATIONS

---

Detailed specifications for the Nouhaus Orbit Heated Massage Chair:

Feature	Detail
Brand	Nouhaus
Model Name	Nouhaus Orbit
Color	Elder White
Material	Leather, Suede
Product Dimensions (D x W x H)	45"D x 25"W x 35"H (114.3cm D x 63.5cm W x 88.9cm H)
Net Weight	176 lbs (80 kg)
Gross Weight	209 lbs (95 kg)
Working Voltage	100-240V, 50-60Hz
Power Consumption	200W
Maximum Weight Recommendation	400 Pounds (181 kg)
Massage Module	3D Stereoscopic
Massage Modes	14 Automatic, 2D/3D options
Heat Function	3-Level (35°C, 40°C, 45°C) on back, hips, legs
Reclining Positions	Zero-Gravity (120° to 145°)
Sound System	2+1-way Bluetooth Speaker
Control	Remote Control, Nouhaus IoT App
Required Assembly	Yes
UPC	850064178425

## Product Details

product Name	Massage Chair ORBIT
Model Name	ORBIT
Size of the chair	28.7×41.7×45.6in (73×106×116cm)
Net Weight	176lbs (80kg)
Gross Weight	209lbs (95kg)
Working Voltage	100–240V, 50–60Hz
Power consumption	200W



Figure 8: Product Details and Specifications

## WARRANTY AND SUPPORT

Nouhaus is committed to providing high-quality products and customer satisfaction.

- **Warranty:** The Nouhaus Orbit Heated Massage Chair typically comes with a 3-Year Protection Plan. Please refer to your purchase documentation for specific warranty terms and conditions.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact Nouhaus Inc. directly. You can find their contact information on their official website or through your purchase platform.