

HMALARARC-WHITE

Hy C8 PRO Multifunctional AI Bluetooth Smart Glasses

Model: HMALARARC-WHITE | Brand: Generic

INTRODUCTION

Thank you for choosing the Hy C8 PRO Multifunctional AI Bluetooth Smart Glasses. These innovative smart glasses combine the functionality of eyewear with advanced AI features, including voice conversation, music playback, call management, and intelligent assistance. Designed for seamless integration into your daily life, they offer a unique blend of style, technology, and convenience. Please read this manual thoroughly before using your new smart glasses to ensure proper operation and to maximize your user experience.



Image: The Hy C8 PRO Smart Glasses, shown with their retail packaging, a charging cable, and a small instruction leaflet. The glasses feature a clear frame with white temples, indicating their smart functionality.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the glasses to strong impacts.
- Keep the device away from water and liquids. If it gets wet, power it off immediately and allow it to dry completely before use.
- Do not attempt to disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Use only the provided charging cable and a compatible power adapter.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.
- Be aware of your surroundings when using the glasses, especially in traffic or hazardous situations.

PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact customer support.

- 1 x Hy C8 PRO Smart Glasses
- 1 x Charging Cable
- 1 x User Manual (this document)

PRODUCT OVERVIEW

The Hy C8 PRO Smart Glasses are designed with integrated audio and AI capabilities within the frame. Key components include:

- **Frame:** Houses the electronic components.
- **Lenses:** Standard lenses, can be replaced with prescription lenses by an optician.
- **Temples (Arms):** Contain the speakers, microphones, and touch control areas.
- **Charging Port:** Located on one of the temples for power input.
- **Indicator Light:** Provides status information (e.g., charging, pairing).

AI SUPER BRAIN VARIOUS AI INTELLIGENT FUNCTIONS



Image: Two pairs of Hy C8 PRO Smart Glasses, one viewed from the front and slightly above, and another from the side, highlighting their

SETUP

1. Charging the Glasses

Before first use, fully charge your Hy C8 PRO Smart Glasses.

1. Connect the provided charging cable to the charging port on the glasses.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (e.g., red for charging, blue/green for fully charged).
4. Charging time is approximately 1 hour for a full charge.

2. Bluetooth Pairing

To use the smart features, you must pair the glasses with your smartphone or other Bluetooth-enabled device.

1. Ensure the glasses are charged and powered on.
2. Activate Bluetooth on your smartphone.
3. Search for available devices. The glasses should appear as "Hy C8 PRO" or similar.
4. Select the glasses from the list to pair. A voice prompt or indicator light change will confirm successful pairing.
5. Transmission distance is up to 10 meters.

3. App Installation (Recommended)

For full functionality, including AI Voice Dialogue and AI Assistant, it is recommended to install the companion application on your smartphone. Refer to the small instruction leaflet included in the package for QR code or app store links.

OPERATING INSTRUCTIONS

Basic Controls (Touch Gestures)

The glasses feature intuitive touch controls on the temples. Specific gestures may vary slightly based on the app, but common functions include:

- **Tap:** Play/Pause music, Answer/End call.
- **Double Tap:** Next track, Reject call.
- **Swipe:** Adjust volume, activate voice assistant.
- **Long Press:** Power On/Off, enter pairing mode.

AI Voice Dialogue

Engage in real-time voice conversations with the AI. This feature utilizes advanced speech recognition and semantic understanding to provide accurate and natural voice responses.

1. Open the companion app and navigate to the "AI Voice Dialogue" page.
2. Speak your query or statement into the glasses' microphone.
3. The AI will process your input and respond audibly through the glasses.

AI VOICE DIALOGUE

On the "AI Voice Intelligent Dialogue" page, users can enter the system through voice inputReal time conversation. The system utilizes advanced speech recognition technology to accurately identify users'Voice content and analyze users' intentions and needs through intelligent semantic understanding. Subsequently, The system will provide accurate and natural voice responses, allowing for smooth dialogue with users Flow.

Do you think there are aliens in the world?

There is currently no conclusive evidence to prove the existence of aliens in the world, But from a scientific perspective, the possibility of extraterrestrial existence is Cannot be excluded.

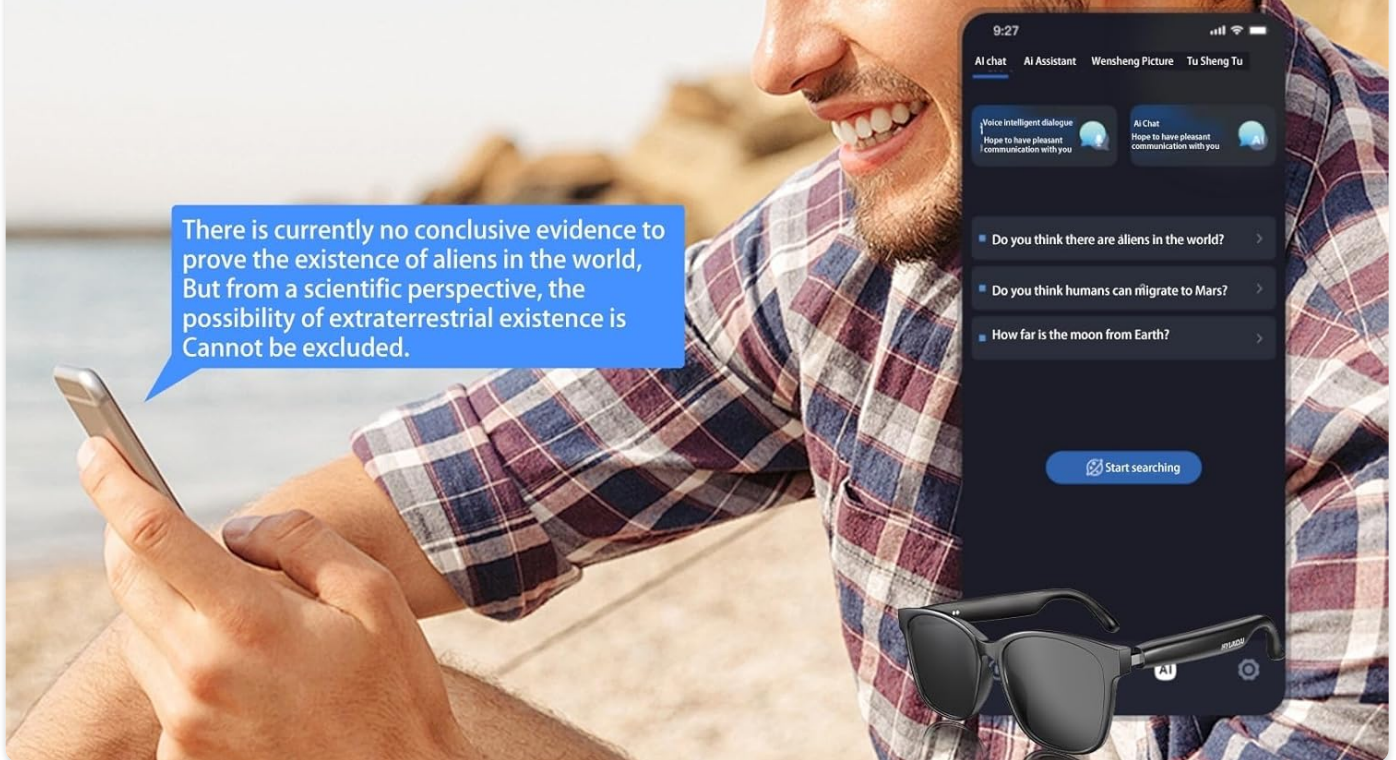


Image: A user interacting with the AI Voice Dialogue feature on the Hy C8 PRO Smart Glasses, with a smartphone screen displaying a conversation interface, demonstrating the AI's ability to answer questions.

AI Assistant

The AI Assistant provides access to over 200 built-in applications for various tasks, including creation, office work, learning, and more. It integrates natural language processing, machine learning, and deep learning for personalized and intelligent services.

1. Access the AI Assistant through the companion app.
2. Select the desired function (e.g., "Copywriting expert," "Excel formula editing material").
3. Follow the prompts within the app to utilize the specific AI function.

AI ASSISTANT

AI Assistant "with over 200 built-in applications, including creation, office, learning, law, and more More than 10 scenes. Work and study anytime, anywhere to improve work efficiency. For example: copywriting

Rewriting, EXCEL formula editing, for daily work

copywriting generation, etc. They are all convenient

Efficient tools for production. Combining functions together makes it more convenient for users to use and improves efficiency

Use efficiency. It integrates natural language processing, machine learning, deep learning, and other advanced technologies

The intelligent service platform for advanced technology aims to provide users with personalized and intelligent services

Service experience.

In addition, click on the function you want to use and follow Nebula's prompts to provide specific instructions

Just ask. You can view the used applications in the "Used" interface.

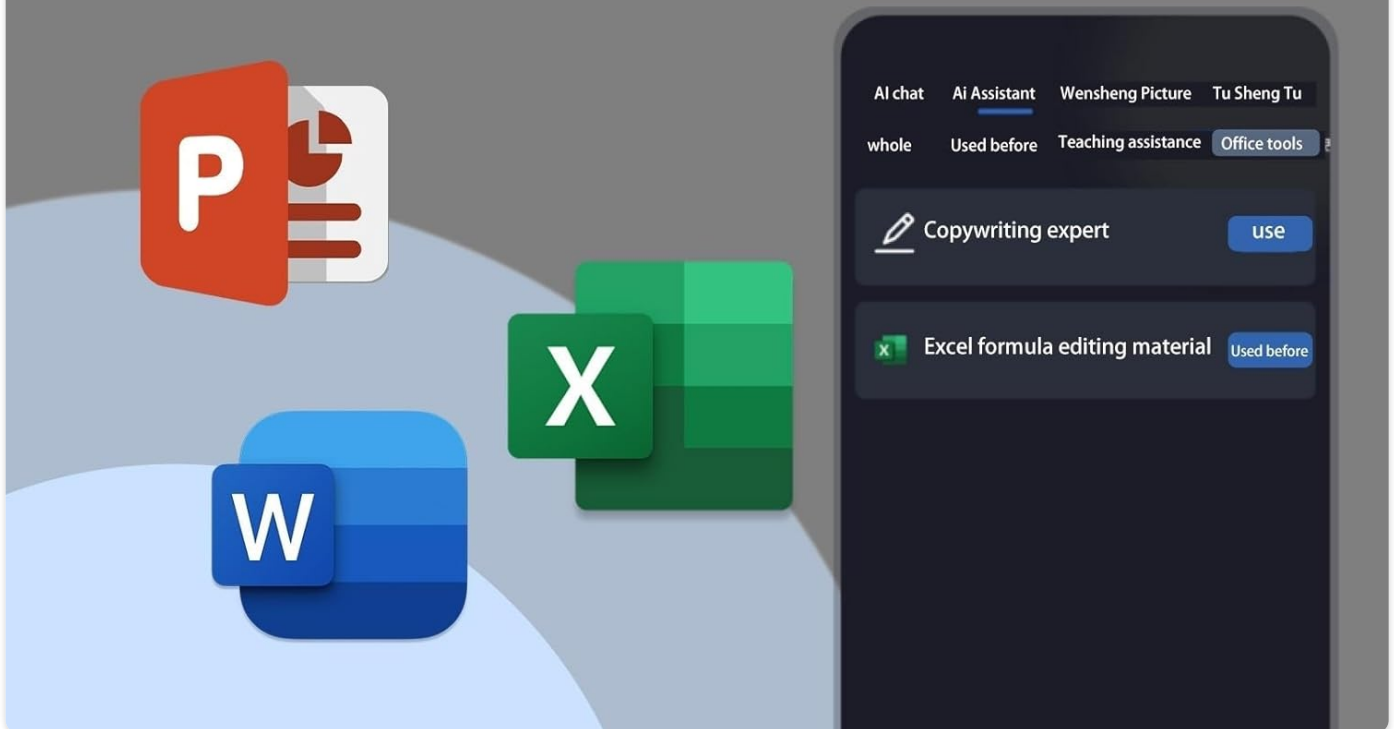


Image: A visual representation of the AI Assistant feature, showing various application icons (like Word, Excel, PowerPoint) and an interface for selecting AI functions such as "Copywriting expert" and "Excel formula editing material."

Recording Function

The glasses support instant recording upon startup, even without network access. This is useful for capturing meeting notes or interviews.

- To start recording, ensure the glasses are powered on.
- You can initiate and manage recordings via the companion application on your smartphone.
- Recordings are stored securely and can be reviewed later.

On site meeting recorded upon startup

Instant recording upon startup, support for network free operation, and intelligent encryption protocol to safeguard information security, Media interviews and small meetings can be accurately recorded without wearing headphones, and the phone can be turned on and activated

You can start live recording on the APP.



Image: A depiction of the on-site meeting recording feature, showing individuals in a meeting setting with the smart glasses in the foreground, and a phone screen displaying a recording interface with English and Chinese language options.

Language Translation

The Hy C8 PRO Smart Glasses support translation for up to 75 languages, facilitating efficient communication across language barriers.

- Access the translation feature through the companion app.
- Select the source and target languages.
- Speak into the microphone, and the translated audio will be played through the glasses.

WHENEVER AND WHEREVER POSSIBLE EFFICIENT COMMUNICATION



Image: The smart glasses positioned in front of a smartphone displaying a communication interface, illustrating the capability for efficient communication and real-time translation, with text showing a conversation in different languages.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the lenses and frame. Do not use abrasive cleaners or solvents.
- **Storage:** Store the glasses in a protective case when not in use to prevent scratches and damage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Glasses not powering on	Low battery; Device malfunction.	Charge the glasses fully. If problem persists, contact support.
Cannot pair via Bluetooth	Bluetooth off; Glasses not in pairing mode; Device too far.	Ensure Bluetooth is on. Put glasses in pairing mode (long press power). Move device closer.
No audio from glasses	Volume too low; Not connected; App issue.	Increase volume. Reconnect Bluetooth. Check app settings.
AI features not working	App not installed/updated; No internet connection (for some features).	Install/update the companion app. Ensure stable internet connection for AI features.

SPECIFICATIONS

Feature	Detail
Model	HMALARARC-WHITE
Bluetooth Version	5.4
Transmission Distance	10m
Speaker Size	10mm
Battery Capacity	55mAh*2
Charging Time	Approx. 1 hour
Talk/Music Time	Approx. 5-6 hours (up to 9 hours continuous playtime)
Weight	0.15kg (approx. 5.29 oz) / 1.76 ounces (product spec)
Dimensions	148*150mm (glasses size) / Package: 1.18 x 0.79 x 0.39 inches
Supported Languages	75 Languages (for translation)
AI Features	AI Voice Conversation, AI Assistant (200+ apps), AI Music, AI Chat, Recording, Translation

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the manufacturer's official website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact customer service for assistance.



