

COSLUS USB A to Figure-8

COSLUS USB-A to Figure-8 Water Flosser Charger Instruction Manual

Model: USB A to Figure-8

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your COSLUS USB-A to Figure-8 Water Flosser Charger. Please read these instructions carefully before use and retain them for future reference.

The COSLUS charger is designed to provide a reliable and efficient power source for compatible water flossers, ensuring optimal performance and longevity of your device.

2. SAFETY INFORMATION

- **Power Source:** Ensure the USB power adapter (not included) used with this charger meets local safety standards and provides a stable 5V output.
- **Compatibility:** Only use this charger with water flossers that feature a compatible figure-8 (8-pin) charging port. Using it with incompatible devices may cause damage.
- **Environment:** Do not expose the charger to water or excessive moisture. Use in a dry environment.
- **Damage:** Inspect the cable for any signs of damage before each use. Do not use if the cable is frayed, bent, or otherwise compromised.
- **Children:** Keep the charger out of reach of children.
- **Disassembly:** Do not attempt to disassemble or modify the charger. This will void any warranty and may pose a safety risk.

3. COMPATIBILITY

This COSLUS USB-A to Figure-8 charging cable is specifically designed for water flossers equipped with an 8-pin figure-8 charging port. It is compatible with the following COSLUS models and many other brands:

- **COSLUS Models:** C20 (F5020E), E40 (WFP14), C30 (FC5360), C31 (F5023)
- **Other Compatible Brands/Models:** Nicwell F5025, Oralfree F5025, Aquasonic, HANGSUN HOC460P-US, Nicefeel FC1599, Tovendor, Zerhunt (ensure figure-8 port)

Important Note: Please verify that your water flosser has an 8-pin figure-8 charging port before using this cable. If you are unsure about compatibility, contact COSLUS support for assistance.

Universal Compatibility

Original charging cable, compatible with most
Figure-8 charging water flossers




 Note: Only compatible with USB-A to Figure-8 charging port water flossers. Please verify for compatibility

Figure 1: Universal Compatibility - The COSLUS charger is compatible with various water flossers featuring a figure-8 charging port.

4. SETUP AND CONNECTION

To begin charging your water flosser, follow these steps:

1. **Connect to Power Source:** Insert the USB-A end of the charging cable into a compatible USB power adapter (e.g., wall charger, computer USB port, car charger, power bank).
2. **Connect to Water Flosser:** Insert the figure-8 (8-pin) end of the charging cable firmly into the charging port of your water flosser.
3. **Verify Connection:** Ensure both ends of the cable are securely connected. The water flosser's charging indicator light should illuminate, indicating that charging has begun.

Original Charging Cord

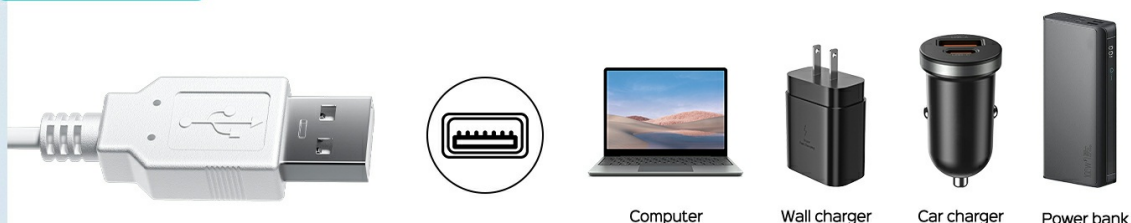
Faster charging, no damage



Figure 2: Charging Connection - Connect the figure-8 end to your water flosser and the USB-A end to a power source.

For COSLUS C20 (F5020E)	For COSLUS C30 (FC5360)	For COSLUS E40 (WFP14)	For COSLUS C50	For Nicefeel FC1599	For Aquasonic	For HANGSUN HOC460P-US	For Oralfree
----------------------------	----------------------------	---------------------------	-------------------	------------------------	------------------	---------------------------	-----------------

USB Port



⚠ Note: Only compatible with USB-A to Figure-8 charging port water flossers. Please verify for compatibility

Figure 3: USB Port Compatibility - The charger can be used with various USB-A power sources.

5. OPERATING INSTRUCTIONS

Once connected, the COSLUS charger will initiate charging. This original charging cord is designed for

efficient power delivery, resulting in approximately 50% faster charging speeds compared to non-original chargers.

- **Charging Indication:** Refer to your water flosser's user manual for specific charging indicator behaviors (e.g., blinking light, solid light, color change).
- **Full Charge:** Disconnect the charger once your water flosser indicates a full charge to preserve battery health.
- **Safety Features:** The charger incorporates protection against over-voltage, over-charge, and overheating to safeguard your water flosser's battery.

6. MAINTENANCE

Proper care of your charging cable will ensure its longevity and reliable performance:

- **Cleaning:** Wipe the cable with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the cable in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable.
- **Handling:** Always grasp the plug ends when connecting or disconnecting the cable. Avoid pulling directly on the cable itself to prevent damage to the internal wires and connectors.
- **Durability:** The cable features a reinforced design to withstand over 5,000 bends, but excessive or sharp bending should still be avoided.

5× More Durable & Safety

Premium materials avoiding device from over-voltage, over-charge, over-heat

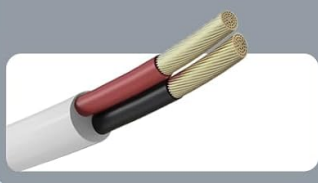
COSLUS Original

Top-rated precision materials



Others

Simple copper-clad aluminum



Reinforced Durability:

After 2,500+ bend tests, it remains undamaged and fully functional

Figure 4: Enhanced Durability - The cable is constructed with precision materials and a reinforced design for increased lifespan.

7. SPECIFICATIONS

Feature	Detail
Model Number	USB A to Figure-8
Brand	COSLUS
Connector Type (Input)	USB Type A
Connector Type (Output)	Figure-8 (8-pin)
Cable Type	USB Charging Cable
Product Dimensions	Approximately 47.24 x 0.39 x 0.59 inches (120 x 1 x 1.5 cm)
Weight	Approximately 0.63 ounces (18 grams)

Special Features

Portable, Safety Protection (Over-voltage, Over-charge, Overheating),
Widely Compatible

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
Water flosser not charging.	<ul style="list-style-type: none">◦ Ensure both ends of the cable are securely connected.◦ Verify the USB power source is functional (try a different USB port or adapter).◦ Confirm your water flosser has a compatible figure-8 (8-pin) charging port.◦ Check the cable for visible damage. Do not use if damaged.
Slow charging.	<ul style="list-style-type: none">◦ Ensure you are using a suitable USB power adapter (e.g., 5V/1A or higher). Lower power adapters may charge slower.◦ Avoid charging through unpowered USB hubs.
Cable feels warm during charging.	A slight warmth is normal during charging. If the cable becomes excessively hot, disconnect it immediately and contact support.

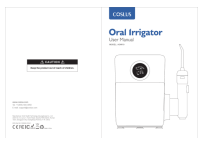

9. WARRANTY AND SUPPORT



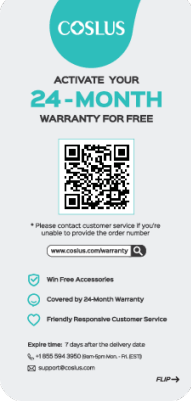

For warranty information or technical support, please refer to the documentation provided with your original COSLUS water flosser or visit the official COSLUS website. You may also contact COSLUS customer service directly for assistance with this charging cable.

COSLUS Official Website: [COSLUS Store on Amazon](#)

© 2025 COSLUS. All rights reserved.

Related Documents - USB A to Figure-8

	COSLUS AOW10 Oral Irrigator User Manual - Features, Setup, and Usage Guide Comprehensive user manual for the COSLUS AOW10 Oral Irrigator. Learn about product features, setup instructions, operating procedures, tip usage, maintenance, and troubleshooting for optimal oral hygiene.
	COSLUS C30 Oral Irrigator User Manual User manual for the COSLUS C30 Oral Irrigator, detailing product description, specifications, operation steps, cleaning, maintenance, and troubleshooting.

 <p>ACTIVATE YOUR 24 MONTH WARRANTY FOR FREE</p> <p>Scan the QR code or visit www.coslus.com/warranty</p> <p>You'll also get benefits including the following:</p> <ul style="list-style-type: none"> Covered by 24-Month Warranty Friendly Responsive Customer Service Be First to Know About Latest Updates <p>Expires Within 7 Days After the Delivery Date ☎ +1 855 584 3550 (toll-free) ✉ support@coslus.com</p>	<p>Coslus Water Dental Flosser: Activate Your Free 24-Month Warranty and Quick Start Guide</p> <p>Activate your free 24-month warranty for your Coslus water dental flosser. Includes a quick start guide with instructions on operation, charging, and features like the UVC sterilamp.</p>
 <p>24 MONTH WARRANTY FOR FREE</p> <p>Scan the QR code or visit www.coslus.com/warranty</p> <p>You'll also get benefits including the following:</p> <ul style="list-style-type: none"> Covered by 24-Month Warranty Friendly Responsive Customer Service Be First to Know About Latest Updates <p>Expires Within 7 Days After the Delivery Date ☎ +1 855 584 3550 (toll-free) ✉ support@coslus.com</p>	<p>Coslus Water Dental Flosser Quick Guide & Warranty Activation</p> <p>Activate your 24-month free warranty for the Coslus Water Dental Flosser. This quick guide provides instructions on charging, mode selection, and usage for optimal oral hygiene.</p>
 <p>ACTIVATE YOUR 24-MONTH WARRANTY FOR FREE</p> <p>Scan the QR code or visit www.coslus.com/warranty</p> <p>* Please contact customer service if you're unable to provide the order number</p> <p>You'll also get benefits including the following:</p> <ul style="list-style-type: none"> With Free Accessories Covered by 24-Month Warranty Friendly Responsive Customer Service <p>Expires Within 7 Days After the Delivery Date ☎ +1 855 584 3550 (toll-free) ✉ support@coslus.com</p>	<p>Coslus C30 Water Flosser Quick Guide and Warranty Activation</p> <p>A quick guide for activating your 24-month warranty with Coslus and operating the C30 Water Flosser. Includes instructions on installation, usage, and mode selection.</p>
 <p>3000 Oral Irrigator F5020E</p> <p>Includes: User Manual, Quick Start Guide, Warranty Card</p>	<p>COSLUS F5020E Oral Irrigator User Manual</p> <p>This user manual provides instructions for the COSLUS F5020E Oral Irrigator, covering product overview, charging, operation, cleaning, maintenance, troubleshooting, and disposal.</p>