

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZIHNIC](#) /

› [ZIHNIC AI Translation Earphones S11A User Manual](#)

ZIHNIC s11a

ZIHNIC AI Translation Earphones S11A User Manual

Model: S11A

1. INTRODUCTION

Thank you for choosing the ZIHNIC AI Translation Earphones S11A. These earphones are designed to provide seamless communication across language barriers with real-time translation capabilities. This manual will guide you through the setup, operation, and maintenance of your device to ensure optimal performance.

2. PRODUCT OVERVIEW

2.1 Package Contents

- ZIHNIC AI Translation Earphones S11A
- Charging Cable
- User Manual

2.2 Key Features

- **3 Smart Translation Modes:** Supports real-time translation in up to 138 languages.
- **IPX5 Waterproof Rating:** Resistant to sweat and rain, suitable for various environments.
- **Intuitive Touch Control:** Manage music, calls, and voice assistant with simple taps.
- **Bluetooth Wireless Freedom:** Stable and quick pairing with compatible devices.
- **Comfortable Open-Ear Design:** Flexible earhooks ensure a secure and comfortable fit for extended wear.
- **HiFi Stereo Sound:** Delivers clear audio quality for music and calls.
- **HD Noise-Canceling Calls:** Enhances call clarity by reducing background noise.



Image: ZIHNIC AI Translation Earphones S11A and charging case. The earphones are shown with text indicating translation capabilities.

360-DEGREE SURROUND SOUND QUALITY



Image: Diagram illustrating HiFi Stereo Sound and Voice Assistant features of the earphones.

Long Battery Life



Image: Diagram highlighting 360-degree surround sound quality, HD Noise-canceling Calls, Open Ear Design, IPX5 Water Resistance, and Convenient Touch Control.

3. SETUP

3.1 Charging the Earphones

Before first use, fully charge the earphones and their charging case. Connect the provided charging cable to the charging case and a USB power source. The indicator lights on the case will show the charging status.

3.2 Wearing the Earphones

For optimal comfort and sound quality, ensure the earphones are worn correctly.

1. Take out the earbud from the charging case.
2. Hang the end of the earbud on the ear bone.
3. Turn the earbud and slide it behind the ear.
4. Adjust the ear hook to fit your ears securely.

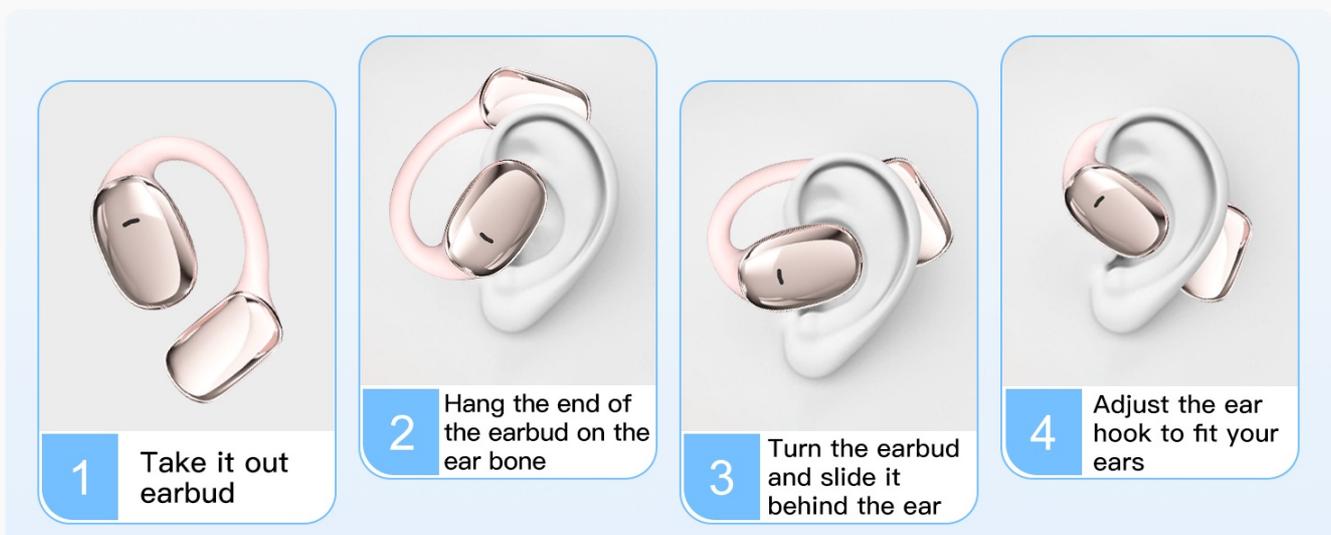


Image: Step-by-step guide on how to wear the earphones for a secure and comfortable fit.

3.3 Bluetooth Pairing

1. Open the charging case; the earphones will automatically enter pairing mode.

2. On your smartphone or device, enable Bluetooth and search for available devices.
3. Select "ZIHNIC S11A" from the list to connect.
4. Once connected, you will hear an audio prompt, and the indicator light on the earphones will change.

3.4 App Installation for Translation

To utilize the full translation features, you will need to download and install the dedicated ZIHNIC translation application on your smartphone. Refer to the QR code provided in the product packaging or search for the official ZIHNIC translation app in your device's app store. Follow the in-app instructions for setup and language selection.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The ZIHNIC S11A earphones feature intuitive touch controls on each earbud. Specific functions may vary slightly based on the connected device and app settings.

- **Play/Pause Music:** Single tap on either earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Activate Voice Assistant:** Triple tap either earbud.
- **Adjust Volume:** Typically controlled via your connected device. Some apps may offer in-app volume control.

4.2 Translation Modes

The earphones support multiple translation modes through the dedicated ZIHNIC translation app:

1. **Face-to-Face Translation:** Ideal for direct conversations. One person speaks, and the earphones provide real-time translation to the other person.
2. **AI Automatic Translation:** For continuous conversations, the earphones automatically detect pauses in speech and provide translations.
3. **AI Chat Mode:** Use the app to type or speak, and the earphones will translate and output the audio.

To initiate translation, open the ZIHNIC translation app, select the desired mode and languages, then follow the on-screen prompts. A simple tap on the earbud may activate the translation function within the app.

Face-to-Face Translation Traducción cara a cara




Encantado de conocerte.
espero que tengas un buen dia


Encantado de conocerte.
espero que tengas un buen dia

Image: Illustration of face-to-face translation using the earphones, showing translated text on screen.

AI automatic translation Traducción automática con IA

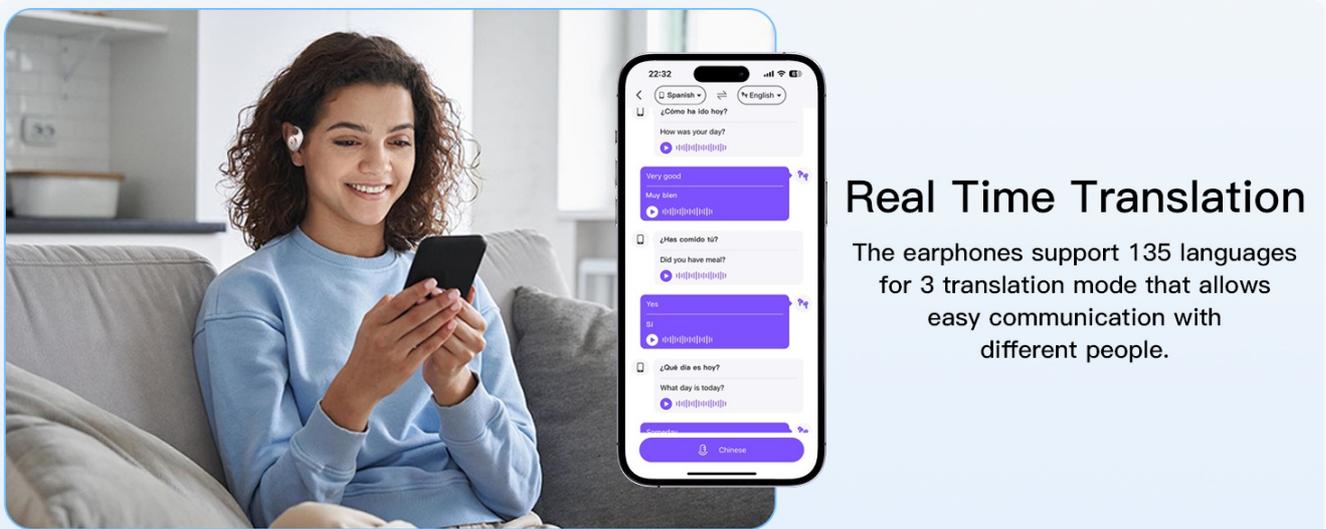


Image: Depiction of automatic AI translation in a business setting, with the app interface visible.

AI Chat Chat de IA



Image: User interacting with an AI chat application on a smartphone, with the earphones providing translation.



Real Time Translation

The earphones support 135 languages for 3 translation mode that allows easy communication with different people.

Image: A woman using the earphones with a smartphone showing real-time translation in a chat interface.

5. MAINTENANCE

5.1 Cleaning

- Gently wipe the earphones and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts are clean and free of debris.

5.2 Storage

- Store the earphones in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures, direct sunlight, or high humidity.

5.3 Water Resistance

The earphones have an IPX5 waterproof rating, meaning they are resistant to sweat and light splashes of water. They are not designed for submersion in water or use during swimming. Ensure the earphones are dry before placing them back in the charging case to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your ZIHNIC AI Translation Earphones S11A, please refer to the following common solutions:


Problem	Possible Solution
Earphones not pairing/connecting	<ul style="list-style-type: none">• Ensure earphones are charged.• Turn off and on Bluetooth on your device.• Forget the device in your Bluetooth settings and try pairing again.• Ensure earphones are in pairing mode (indicator light flashing).
No sound or poor audio quality	<ul style="list-style-type: none">• Check volume levels on both earphones and connected device.• Ensure earphones are properly seated in your ears.• Reconnect Bluetooth.• Clean any debris from the earphone speakers.
Translation not working	<ul style="list-style-type: none">• Ensure the ZIHNIC translation app is installed and updated.• Verify that the earphones are connected to the app.• Check internet connection for the app (required for translation).• Confirm correct source and target languages are selected in the app.• Speak clearly and at a moderate pace.

Problem	Possible Solution
Earphones not charging or holding charge	<ul style="list-style-type: none"> • Ensure the charging cable is securely connected to both the case and power source. • Clean the charging contacts on both the earphones and the case. • Try a different charging cable or power adapter. • Ensure the charging case itself has power.
Touch controls unresponsive	<ul style="list-style-type: none"> • Ensure your fingers are clean and dry. • Restart the earphones by placing them in the case and taking them out again. • Reconnect Bluetooth to your device.

7. SPECIFICATIONS

- **Model:** S11A
- **Item Weight:** 1.76 ounces (approx. 50 grams)
- **Package Dimensions:** 4.92 x 3.82 x 1.54 inches
- **Battery Type:** Lithium Polymer (included)
- **Waterproof Rating:** IPX5
- **Translation Languages:** Up to 138 languages
- **Connectivity:** Bluetooth Wireless

HiFi Stereo Sound

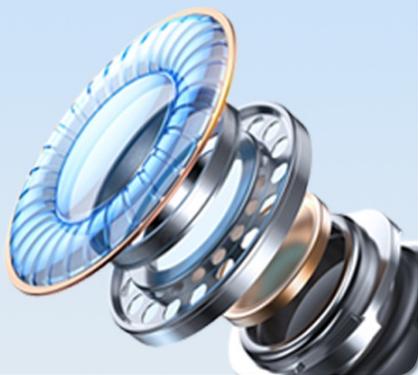

Voice Assistant



HiFi Stereo Sound



Image: Illustration indicating long battery life, with a 450mAh battery capacity likely referring to the charging case.

8. WARRANTY INFORMATION

ZIHNIC products are covered by a limited warranty. Please refer to the warranty card included in your product packaging or visit the official ZIHNIC website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your ZIHNIC AI Translation Earphones S11A, please contact ZIHNIC customer service through the following channels:

- **Official Website:** Visit the ZIHNIC official website for FAQs, support resources, and contact forms.
- **Email Support:** Refer to your product packaging or the official website for the customer support email address.