

HoMedics FB-54

HoMedics Bubble Bliss® Deluxe Footbath

INSTRUCTION MANUAL

Brand: HoMedics | Model: FB-54

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Avoid immersing feet in water for extended periods to prevent burns.
- Always test water temperature before use.
- Do not operate the device while asleep or under the influence of drugs or alcohol.
- Keep electrical cords away from water to prevent shock.
- Always unplug the device when not in use or when changing the water.
- Do not use with any salts, oils, or additives unless specifically recommended by HoMedics, as this may damage the unit.
- This appliance is intended for household use only.

PRODUCT OVERVIEW

The HoMedics Bubble Bliss® Deluxe Footbath is designed to provide a relaxing and invigorating foot spa experience at home. It features:

- **Invigorating Bubble Massage:** Soothing bubbles relax tired feet.
- **Heat Maintenance:** Helps keep the water warm for extended comfort. *Note: This unit does not heat cold water; it maintains the temperature of pre-heated water.*
- **Customizable Comfort:** Includes 3 interchangeable massage attachments for varied sensations.
- **Mess-Free Design:** Integrated splash guard prevents spills.
- **Easy Controls:** Toe-touch controls allow for convenient adjustments.
- **Foot Care Essentials:** Comes with a pumice stone for smoothing skin and moisturizing heel socks

for softening cracked heels.



Image: The HoMedics Bubble Bliss Deluxe Footbath in pink, shown with the included pumice stone, three interchangeable massage attachments, and a pair of pink moisturizing heel socks. A pair of feet are shown wearing the socks.

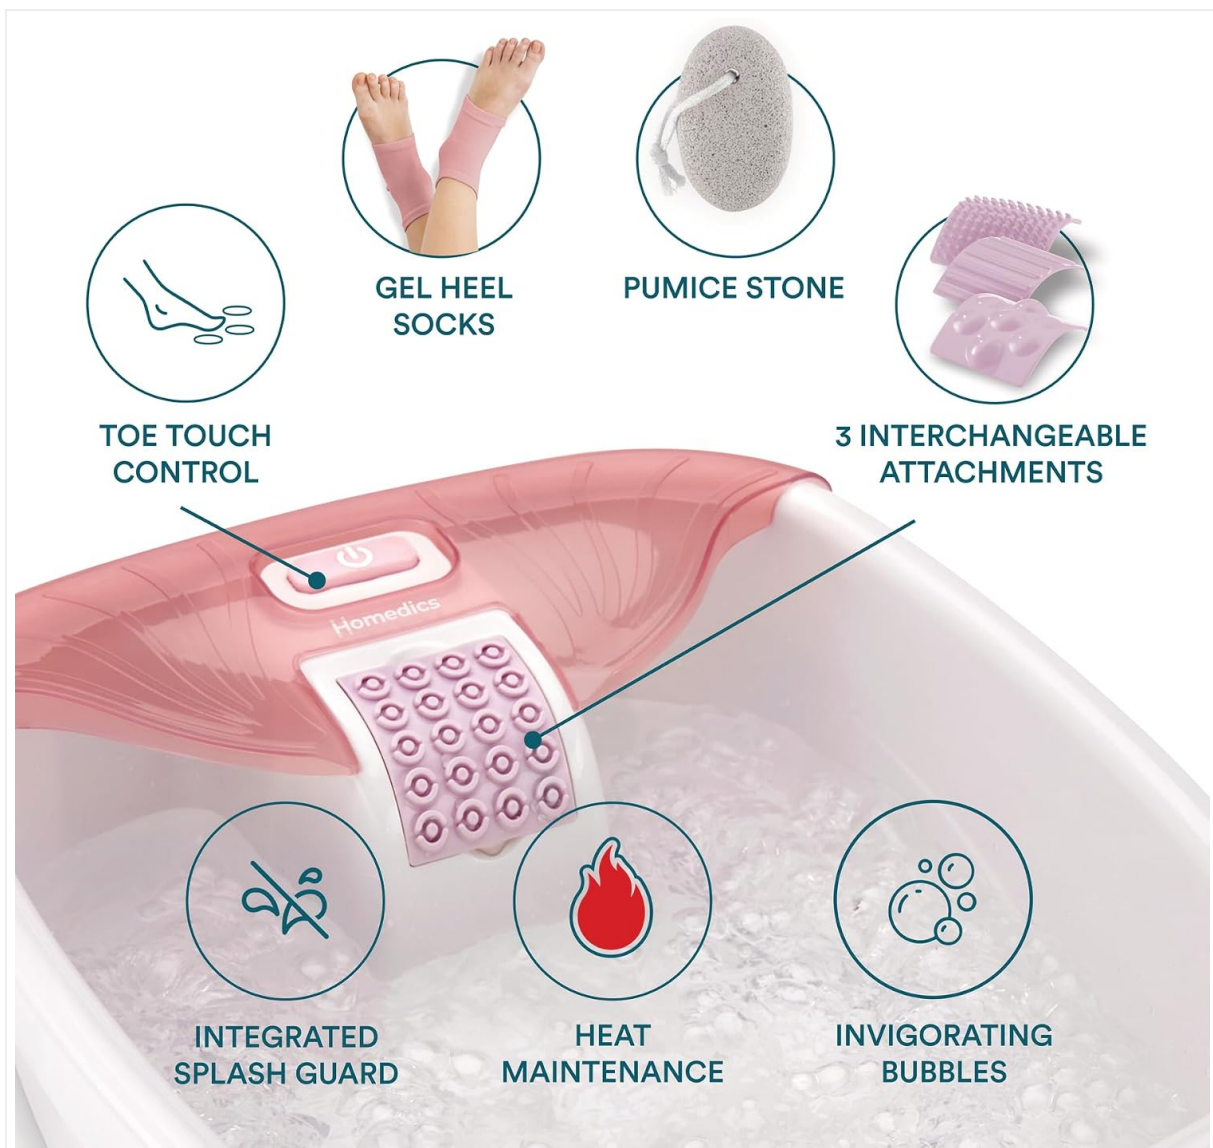


Image: A detailed diagram highlighting key features of the footbath: Toe Touch Control, Integrated Splash Guard, Heat Maintenance, Invigorating Bubbles, 3 Interchangeable Attachments, Gel Heel Socks, and Pumice Stone.

PACKAGE CONTENTS

Your HoMedics Bubble Bliss® Deluxe Footbath Gift Set includes:

- (1) HoMedics Bubble Bliss® Deluxe Footbath (Model: FB-54)
- (1) Pumice Stone
- (1) Pair of Moisturizing Heel Socks
- (3) Interchangeable Massage Attachments
- (1) Instruction Book (this manual)

SETUP

1. Ensure the footbath is unplugged before filling with water.
2. Place the footbath on a flat, stable surface.
3. Fill the footbath with warm water to the indicated fill line. Do not overfill.
4. Plug the footbath into a standard electrical outlet.

5. For customized massage, select one of the three interchangeable attachments and place it onto the central massage node.



bubble bliss[®] **DELUXE FOOTBATH** **GIFT SET**

Image: A woman seated comfortably in an armchair, with her feet submerged in the HoMedics Bubble Bliss Deluxe Footbath, demonstrating typical usage.

OPERATING INSTRUCTIONS

1. After setup, place your feet comfortably into the footbath.
2. Press the power button (toe-touch control) located on the top of the unit to activate the invigorating bubbles and heat maintenance feature.
3. Relax and enjoy the soothing massage. You can gently move your feet over the textured bottom or the central massage node for enhanced sensation.
4. To change massage attachments, unplug the unit, remove your feet, and carefully swap the attachment. Re-plug and resume use.
5. When finished, press the power button again to turn off the unit.
6. Unplug the footbath from the electrical outlet.

3 INTERCHANGEABLE ATTACHMENTS

relaxation begins at home



Image: A hand demonstrating how to change one of the three interchangeable massage attachments on the central node of the footbath.



INVIGORATING BUBBLES rejuvenate tired feet

Image: A close-up view of a finger pressing the power button on the HoMedics footbath, illustrating the toe-touch control feature.

Using the Included Accessories:

- **Pumice Stone:** After soaking your feet, gently rub the pumice stone over rough or calloused areas to smooth the skin. Rinse the stone after each use.
- **Moisturizing Heel Socks:** For best results, wear the gel heel socks for 15-30 minutes after your footbath session to help soften and moisturize dry or cracked heels.

step into softness



**WEAR GEL SOCKS
15-30 MINUTES
AFTER FOOTBATH
TO HELP SOFTEN
SKIN**

Image: A pair of feet wearing the pink moisturizing gel heel socks, illustrating their use for softening skin after a footbath.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your footbath.

1. After Each Use:

- Unplug the unit and empty the water.
- Rinse the footbath thoroughly with clean water.
- Wipe down the interior and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or brushes.

2. Deep Cleaning (Periodically):

- If mineral deposits or residue build up, a solution of white vinegar and water can be used. Fill the footbath with a mixture (e.g., 1 part white vinegar to 3 parts water) and let it sit for 15-30 minutes.
- Drain the solution and rinse thoroughly with clean water.

3. Storage:

- Ensure the unit is completely dry before storing.
- Store in a cool, dry place, away from direct sunlight.
- Do not hang the unit by the power cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure unit is securely plugged into a working outlet. Test outlet with another appliance. If problem persists, contact customer support.
Bubbles are weak or absent.	Water level too high/low; air vents blocked; mineral buildup.	Adjust water level to the indicated line. Check for any obstructions in the air vents. Perform a deep clean with vinegar solution.
Water does not stay warm.	Unit is designed for heat maintenance, not heating cold water.	Start with warm water. The unit will help maintain its temperature, but it will not heat cold water.
Excessive splashing.	Water level too high; vigorous foot movement.	Ensure water is filled only to the maximum fill line. Reduce vigorous movement of feet.

SPECIFICATIONS

- **Model Number:** FB-54
- **Product Dimensions:** 17.1 x 14.14 x 6.98 inches
- **Item Weight:** 4.21 Pounds
- **Power Source:** Battery Powered
- **Color:** Pink
- **Manufacturer:** Homedics

extra large tub size



Image: A diagram showing the dimensions of the HoMedics footbath: 18 inches long, 14.75 inches wide, and 7.75 inches high.

WARRANTY AND SUPPORT

This HoMedics Bubble Bliss® Deluxe Footbath comes with a **2-Year Limited Warranty**.

For warranty claims, technical support, or further assistance, please contact HoMedics Customer Service. Refer to the contact information provided on the product packaging or visit the official HoMedics website.

Online Resources: [Visit the HoMedics Store on Amazon](#)