



[Manuals.plus](#) /

› [Meplzian](#) /

› Meplzian LED Lighted Medicine Cabinet with Sockets & USB (Model LED Medicine Cabinet-2) User Manual

Meplzian LED Medicine Cabinet-2

Meplzian LED Lighted Medicine Cabinet with Sockets & USB

Model: LED Medicine Cabinet-2

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient installation, operation, and maintenance of your Meplzian LED Lighted Medicine Cabinet. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INFORMATION

- Always follow the assembly instructions carefully.
- Do not exceed the maximum load capacity of 33 lbs (15 kg) for the cabinet.
- Be cautious of potential pinch points during installation and operation of the doors.
- Keep electrical components away from direct water exposure.
- Always unplug the cabinet from the power source when not in use or during cleaning/maintenance.
- Ensure proper grounding for all electrical connections.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Medicine Cabinet (x1)
- Glass Shelves (x3)
- Hardware Accessories (screws, anchors, shelf clips, hinges)
- Instruction Manual (x1)

4. SETUP AND INSTALLATION

This medicine cabinet is designed for wall-mounted installation. Assembly is required. It is recommended to have two people for installation due to the weight and size of the unit.

4.1 Dimensions

The overall dimensions of the cabinet are approximately 5.2"D x 31.5"W x 23.6"H. Please ensure your bathroom

wall space is adequate before installation.

Dimensions of Metal Arched Medicine Cabinet

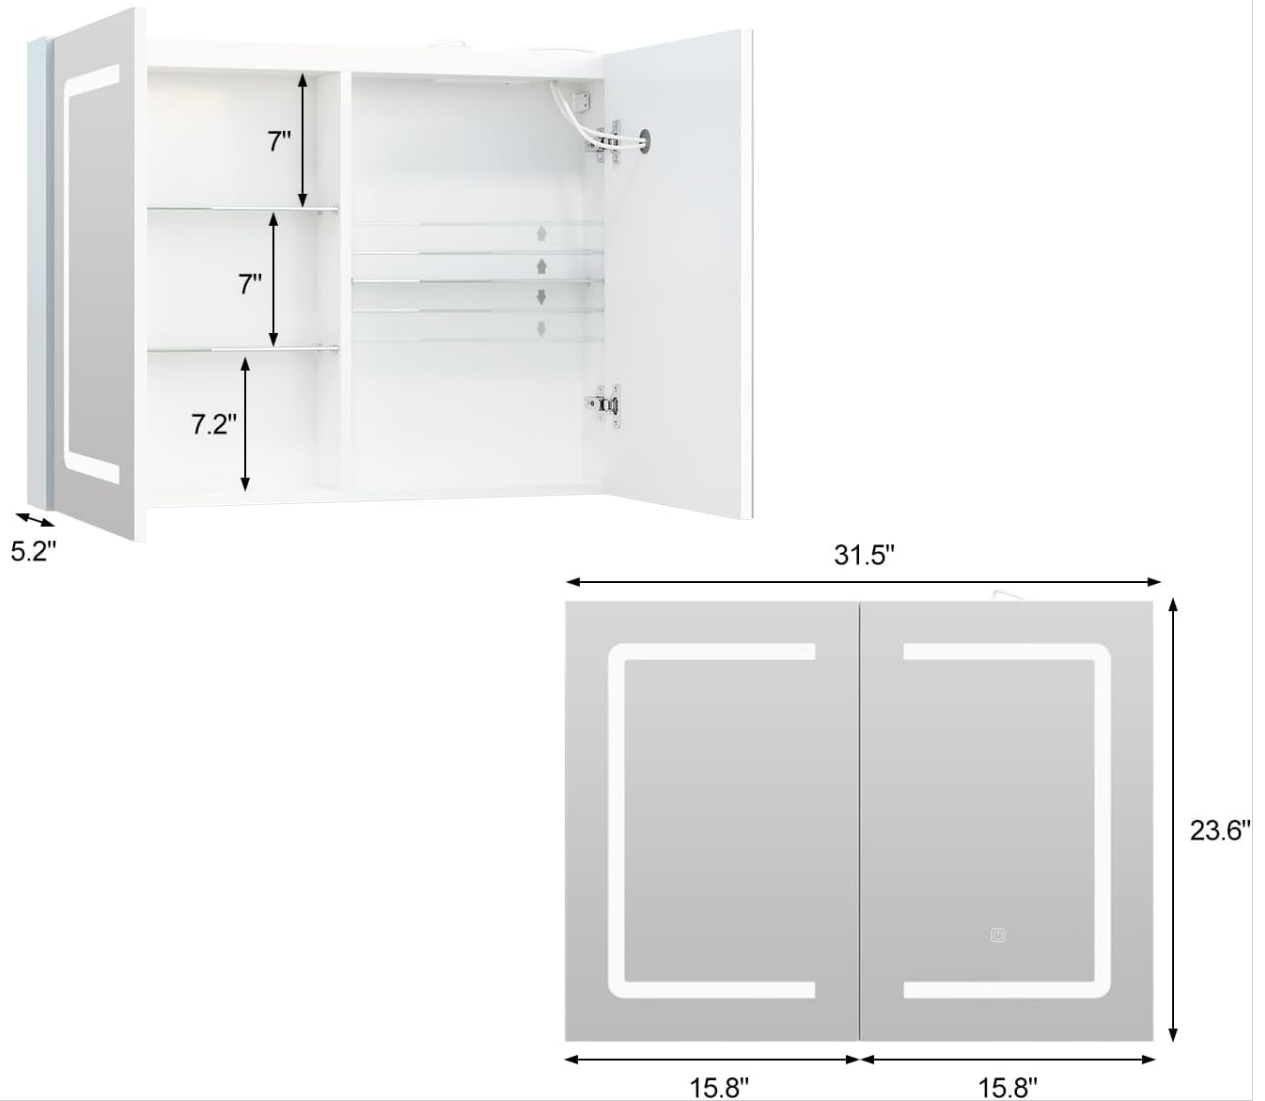


Figure 1: Product Dimensions and Internal Layout

4.2 Assembly Steps

Follow the detailed instructions provided in the included manual for assembling the cabinet frame and attaching the doors. Ensure all screws are tightened securely, but do not overtighten to avoid damaging the MDF material.

Assembly Required



Figure 2: Assembly Diagram

4.3 Wall Mounting

The cabinet is designed for wall mounting. It is highly recommended to mount the cabinet directly into wall studs for maximum stability, especially given its weight (19.56 lbs) and capacity. The mounting points are typically spaced 16 inches apart to align with standard stud spacing.



Figure 3: Wall Mounting Instructions

Video 1: Detailed installation guide for the lighted medicine cabinet, including electrical outlet and USB charging setup.

4.4 Shelf Installation

The cabinet includes 3 adjustable glass shelves, dividing the interior into 5 separate spaces. Install the glass shelves using the provided shelf clips. It is advisable to install the shelves before attaching the mirror doors to allow for easier placement and adjustment.

5. OPERATING INSTRUCTIONS

5.1 LED Lighting Control

The cabinet features an adjustable LED light system. Use the touch controls on the mirror surface to cycle through 3 color modes (Warm Light 3000K, Natural Light 4500K, Cold Light 6500K) and adjust brightness from 5% to 100%.



Figure 4: LED Color Temperature and Dimmer Controls

5.2 Integrated Power Outlets

The cabinet includes a built-in USB charging port and a standard electrical outlet, providing convenient power for shavers, electric toothbrushes, and other small bathroom appliances. Ensure the cabinet is properly plugged into a wall outlet for these features to function.

Built-in Power Strip

Easy to power your everyday bathroom appliances



Figure 5: Built-in Power Strip with USB and Electrical Outlet

Video 2: Overview of the medicine cabinet's features, including the LED lighting and internal storage.

6. MAINTENANCE

To ensure the longevity and appearance of your medicine cabinet, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth with a mild, non-abrasive cleaner to wipe down the mirror and cabinet surfaces. Avoid harsh chemicals or abrasive materials that could damage the finish or mirror.
- **Moisture Protection:** The cabinet is crafted from MDF board with a moisture-proof backplane. While designed for bathroom conditions, avoid excessive water exposure. Wipe away any splashes immediately.
- **Electrical Components:** Ensure all electrical connections remain dry. Do not spray water directly onto the power outlets or LED components.
- **Hinges:** Periodically check the door hinges for tightness and smooth operation. Adjust if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your medicine cabinet, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
LED lights do not turn on.	No power, loose connection, faulty touch sensor.	Check if the cabinet is plugged in. Ensure the wall outlet has power. Press the touch sensor firmly. If issues persist, contact customer support.
Power outlets/USB ports not working.	Cabinet not powered, internal wiring issue.	Verify the cabinet is plugged in and receiving power. Test the wall outlet with another device. If still not working, contact customer support.
Doors do not close smoothly or are misaligned.	Hinges need adjustment, obstruction.	Check for any obstructions. Adjust the hinges as per the assembly instructions to correct alignment.
Mirror fogs up after showering.	High humidity, no anti-fog feature.	This model does not feature a built-in defogger. Turning on the LED lights prior to showering may help reduce fogging in the illuminated areas due to slight heat generation. Ensure proper bathroom ventilation.

8. SPECIFICATIONS

Feature	Detail
Brand	Mepplzian
Model Name	LED Medicine Cabinet-2
Color	White
Size	32x24 inch (2 Doors-White)
Product Dimensions	5.2"D x 31.5"W x 23.6"H
Item Weight	19.56 Pounds
Weight Limit	33 Pounds
Material	Wood (FSC-certified frame), Glass (shelves)
Finish Type	Painted
Mounting Type	Wall Mount
Special Feature	Illuminated LED (3 color modes, adjustable brightness), Built-in Sockets & USB
Number of Shelves	3
Number of Compartments	5
Assembly Required	Yes

9. WARRANTY AND SUPPORT

Meplzian is committed to providing high-quality products and customer service. While specific warranty details are not provided in this document, the manufacturer aims to resolve any issues promptly.

For product support, troubleshooting assistance, or inquiries regarding your medicine cabinet, please visit the official Meplzian store on Amazon or contact their customer service directly. You can find more information at the [Meplzian Store](#).