Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- HBEZON /
- > HBEZON Medicine Cabinet with LED Lights and Mirror User Manual

HBEZON 4832

HBEZON Medicine Cabinet User Manual

Model: 4832

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your HBEZON Medicine Cabinet with LED Lights and Mirror. This product features a 48 x 32 inch design, suitable for both surface and recessed mounting, and includes a defogger, memory function, 3-color lighting modes, integrated outlet and USB ports, dimming capability, and adjustable storage shelves. Please read this manual thoroughly before installation and use to ensure proper function and safety.

SAFETY INFORMATION

WARNING: Electrical installation should be performed by a qualified electrician. Ensure power is disconnected at the circuit breaker before any installation or maintenance.

- Do not expose the cabinet to excessive moisture or direct water spray.
- · Handle glass components with care to prevent breakage.
- Ensure the mounting surface is structurally sound and can support the weight of the cabinet.
- · Keep children away from the installation area.
- Do not attempt to repair or modify the electrical components yourself. Contact qualified personnel.

PRODUCT OVERVIEW

The HBEZON Medicine Cabinet is designed to enhance your bathroom with both functionality and modern aesthetics. Key features include:

- LED Lighting: Integrated LED strips with 3 color modes (warm, natural, cold white) and dimmable brightness.
- Defogger: Built-in anti-fog function for clear reflections.
- Memory Function: Remembers your last light setting.
- Power Outlets & USB Ports: Convenient charging for devices inside the cabinet.
- Adjustable Shelves: Tempered glass shelves for flexible storage.
- Soft-Close Hinges: DTC rustproof hinges for quiet and smooth door operation.

• Mounting Options: Can be surface-mounted or recessed into the wall.



Image: Front view of the HBEZON Medicine Cabinet, highlighting its illuminated mirror and modern appearance.



SETUP AND INSTALLATION

The HBEZON Medicine Cabinet offers both surface and recessed mounting options. Ensure you have the necessary tools and assistance before beginning installation.

Dimensions and Cutout (for Recessed Mounting)

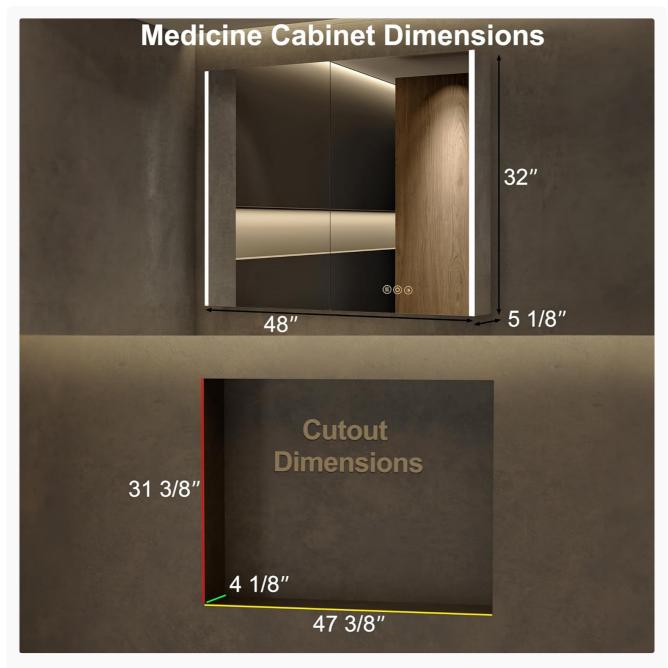


Image: Detailed dimensions for the cabinet and the required wall cutout for recessed installation.

Mounting Options




General Installation Steps:

- 1. **Preparation:** Turn off power at the main circuit breaker. Identify the desired mounting location and ensure it is free of pipes or electrical wires.
- 2. **Marking:** Mark the mounting points on the wall according to the cabinet's dimensions and mounting hardware.
- 3. **Mounting Hardware:** Install the provided mounting hardware securely into the wall. For recessed mounting, create the appropriate cutout in the wall.
- 4. **Wiring:** Connect the cabinet's electrical wiring to your home's electrical system. This step should be performed by a qualified electrician. Ensure all connections are secure and insulated.
- 5. **Mounting the Cabinet:** Carefully lift and secure the cabinet onto the installed mounting hardware. Ensure it is level and firmly attached.
- 6. Adjust Shelves: Place the adjustable glass shelves inside the cabinet at your desired heights.
- 7. **Power On:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

LED Lighting Control



- Image: Demonstrates how to change the LED light color temperature using the touch control.
- Power On/Off: Short press the power icon on the mirror to turn the lights on or off.
- Color Temperature Adjustment: Short press the light icon to cycle through the three color modes: Warm (3000K), Natural (4000K), and Cold White (6000K).
- **Brightness Dimmer:** Long press the light icon to adjust the brightness from 0% to 100%. Release when the desired brightness is reached.
- **Memory Function:** The cabinet will remember your last light setting (color mode and brightness) when turned off and on again.

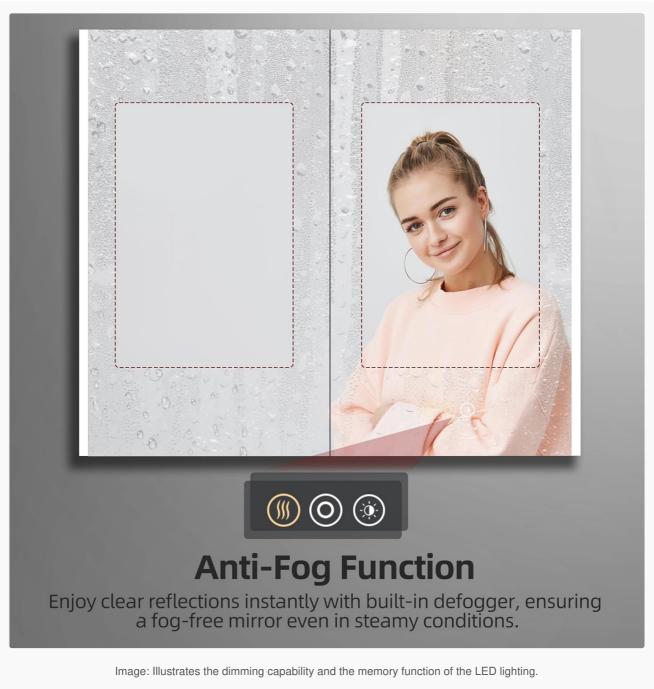


Anti-Fog Function



Image: Shows the effectiveness of the anti-fog function, keeping the mirror clear in steamy conditions.

- Activate Defogger: Short press the defogger icon (looks like steam) on the mirror to activate the anti-fog function.
- **Deactivate Defogger:** Press the defogger icon again to turn it off. It is recommended to turn off the defogger when not needed for energy efficiency.

Using Electrical Outlets and USB Ports

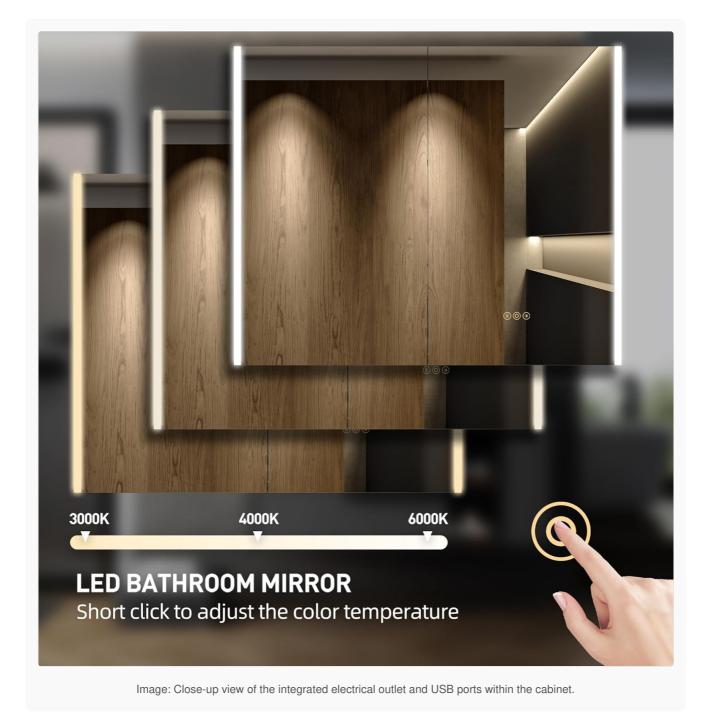

- The internal electrical outlets and USB ports are active when the cabinet is connected to power.
- Use these ports to conveniently charge small electronic devices like electric toothbrushes, shavers, or smartphones.
- Do not overload the outlets. Refer to the specifications for maximum power output.

MAINTENANCE

- Cleaning the Mirror: Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into electrical components.
- Cleaning the Cabinet Interior: Wipe down interior surfaces and shelves with a damp cloth and mild detergent. Dry thoroughly.
- **Hinge Care:** The DTC soft-close hinges are designed for durability. Avoid applying excessive force when opening or closing the doors. No special lubrication is typically required.
- **Electrical Components:** Ensure the cabinet is disconnected from power before cleaning near electrical outlets or wiring. Do not use wet cloths directly on electrical components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	No power supply; loose wiring; faulty touch sensor.	Check circuit breaker. Ensure all electrical connections are secure. Contact customer support if issue persists.
Anti-fog function not working.	Defogger not activated; power issue.	Ensure the defogger icon is pressed. Check power supply.
Outlets/USB ports not working.	No power supply; internal wiring issue.	Verify main power to the cabinet. Avoid overloading.
Doors do not close smoothly.	Hinges misaligned or damaged.	Check hinge alignment. If damaged, contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail	
Brand	HBEZON	
Model Name	AURA (Model 4832)	
Product Dimensions	5"D x 48"W x 32"H	
Color	Silver	
Mounting Type	Wall Mount or Recessed Mount	
Special Features	Smart Touch Control, Lighting Memory Function, Dimmable, 3 Color Lighting Modes, Defogger, Space-saving, Soft-close Hinges, Electrical Outlet & USB Port, Adjustable Shelves	
Number of Shelves	3 (Adjustable Tempered Glass)	
Frame Material	Aluminum	
Weight Limit	60 Pounds	
Item Weight	51 Pounds	
Included Components	Medicine cabinet with mirror, Mounting Hardware, Shelves	

WARRANTY AND SUPPORT


For warranty information or technical support, please refer to the documentation included with your purchase or contact HBEZON customer service. You can also visit the official HBEZON store on Amazon for more details and contact options.

HBEZON Store: https://www.amazon.com/stores/HBEZON/page/8EF5340D-4FAE-42F2-92D1-7037F531B1CC **User Manual (PDF):**

https://manuals.plus/m/4cf1acaebfca3c9bdf07a18cfd87af63f19a9e62aa17364159a58723dd512d7d

© 2025 HBEZON. All rights reserved.

Related Documents - 4832

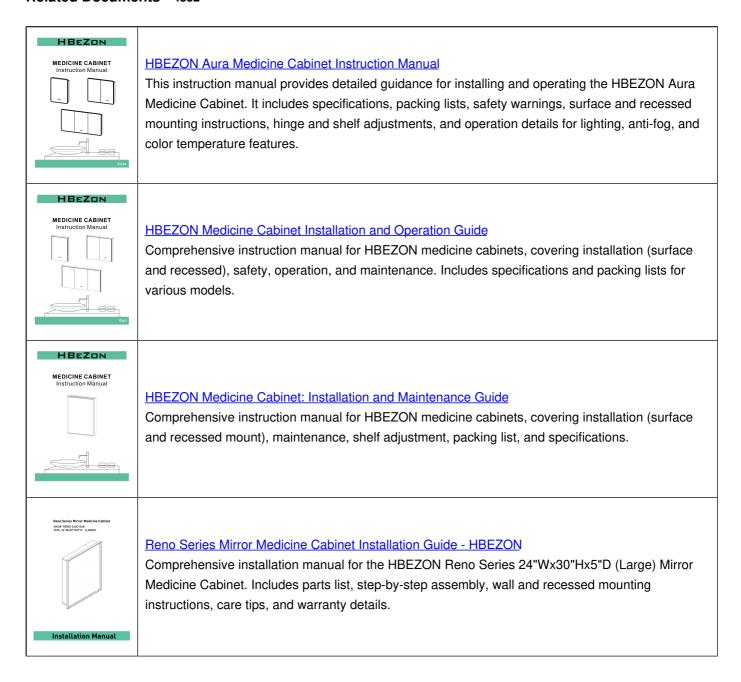



Tara Series Mirror Medicine Cabinet Installation Manual - HBEZON TARA-1624-WN

Comprehensive installation manual for the HBEZON Tara Series Mirror Medicine Cabinet (SKU: TARA-1624-WN). Features step-by-step assembly instructions, parts list, hardware guide, wall and recessed mounting procedures, care and maintenance tips, and warranty information.

Installation Manual

HBEZON

Reno Series Mirror Medicine Cab SKU#: RENO-1626-DAK SIZE: 16"Ws24"Hs5"D (SMALL)



HBEZON Reno Series RENO-1624-OAK Mirror Medicine Cabinet Installation Manual

This document provides detailed installation and assembly instructions for the HBEZON Reno Series Mirror Medicine Cabinet (Model RENO-1624-OAK). It includes an exploded diagram, parts list, step-by-step assembly guidance, wall and recessed mounting options, care instructions, and warranty information.

Installation Manual