



Manuals.plus /

- › GGM Gastro /
- › GGM Gastro UDP99-N Support Stand User Manual

GGM Gastro UDP99-N

GGM Gastro UDP99-N Support Stand User Manual

Model: UDP99-N | Brand: GGM Gastro

INTRODUCTION

This user manual provides essential information for the safe and effective use of your GGM Gastro UDP99-N Support Stand. Designed specifically for GGM Gastro pizza ovens PDP99, PDP99D, and PDP99TC, this high-quality stainless steel stand ensures stability and compliance with hygiene and safety directives. Please read this manual thoroughly before assembly and operation.

PRODUCT FEATURES

- **Compatibility:** Specifically designed for GGM Gastro pizza ovens PDP99, PDP99D, and PDP99TC.
- **Material:** Constructed entirely from high-quality stainless steel, ensuring durability and hygiene.
- **Stability:** Features screws for enhanced stability, providing a secure base for your oven.
- **Compliance:** Manufactured in Europe, adhering to European hygiene and safety directives, and CE compliant.
- **Food Safety:** Material is labeled and conforms to European food standards.

SETUP AND ASSEMBLY

The GGM Gastro UDP99-N Support Stand requires assembly. Follow these steps carefully to ensure proper setup and stability.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present according to the packing list (not provided, but implied).
2. **Identify Parts:** Lay out all stainless steel frame pieces, shelves, and fasteners (screws, bolts).
3. **Assemble Frame:** Begin by attaching the vertical support legs to the top frame section using the provided screws. Ensure all connections are secure but do not fully tighten yet.
4. **Install Lower Shelf:** Position the lower shelf onto the designated supports on the vertical legs. Secure it with the remaining fasteners.
5. **Final Tightening:** Once all components are in place and the stand is upright, systematically tighten all screws and bolts. Ensure the stand is level and stable.

6. **Placement:** Position the assembled stand on a flat, stable, and non-combustible surface in your kitchen or designated area. Ensure adequate clearance around the stand for ventilation and access.
7. **Oven Placement:** Carefully lift and place the compatible GGM Gastro pizza oven (PDP99, PDP99D, or PDP99TC) onto the top surface of the support stand. Ensure it is centered and stable.



Figure 1: The fully assembled GGM Gastro UDP99-N Support Stand, ready for use with a compatible pizza oven. This image shows the robust stainless steel construction and the lower storage shelf.

USAGE GUIDELINES

The GGM Gastro UDP99-N Support Stand is designed to provide a stable and ergonomic base for your GGM Gastro pizza oven. Proper usage ensures safety and extends the lifespan of both the stand and the oven.

- **Intended Use:** This stand is exclusively designed for GGM Gastro pizza ovens models PDP99, PDP99D, and PDP99TC. Do not use it for other appliances or purposes.
- **Load Capacity:** Ensure that the weight of the pizza oven and any items placed on the lower shelf do not exceed the stand's structural capacity. While specific load capacity is not provided, the robust stainless steel construction is designed for the specified ovens.
- **Stability Check:** Before each use, verify that the stand is stable and level. If any wobbling occurs, check all fasteners and adjust as necessary.
- **Ventilation:** Ensure the stand is placed in an area with adequate ventilation, especially when the pizza oven is in operation, to prevent heat buildup.
- **Safety Clearance:** Maintain appropriate distances from walls, flammable materials, and other equipment as

recommended by the pizza oven's manual.

MAINTENANCE

Regular cleaning and maintenance will preserve the appearance and functionality of your GGM Gastro UDP99-N Support Stand.

- **Daily Cleaning:** Wipe down all stainless steel surfaces with a soft cloth dampened with warm water and a mild, non-abrasive detergent.
- **Stubborn Stains:** For more stubborn stains, use a specialized stainless steel cleaner, following the product's instructions. Always wipe in the direction of the grain.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or steel wool, as these can scratch the stainless steel surface.
- **Rinsing and Drying:** After cleaning, rinse thoroughly with clean water and dry immediately with a clean, soft cloth to prevent water spots and streaks.
- **Inspection:** Periodically inspect all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

TROUBLESHOOTING

This section addresses common issues you might encounter with your support stand.

- **Stand is Wobbly:**
 - Ensure the stand is placed on a completely flat and level surface.
 - Check all assembly screws and bolts. Tighten any loose fasteners.
 - Verify that the legs are properly seated and not bent.
- **Scratches on Stainless Steel:**
 - Minor scratches are often superficial. For deeper scratches, professional repair may be required.
 - Prevent future scratches by avoiding abrasive cleaning materials and sharp objects.
- **Discoloration/Stains on Stainless Steel:**
 - Ensure proper and immediate drying after cleaning to prevent water spots.
 - Use appropriate stainless steel cleaners for stubborn stains or discoloration caused by heat.

SPECIFICATIONS

GGM Gastro UDP99-N Support Stand

Attribute	Detail
Brand	GGM Gastro
Model Name	UDP99-N
Approximate Assembled Dimensions (H x D x W)	880mm x 1130mm x 1340mm
Material	High-quality Stainless Steel (Material code: 34651)
Compatibility	GGM Gastro Pizza Ovens PDP99, PDP99D, PDP99TC
ASIN	B0F1LDPR7N
European Compliance	CE Compliant, adheres to European hygiene and safety directives, and food standards.

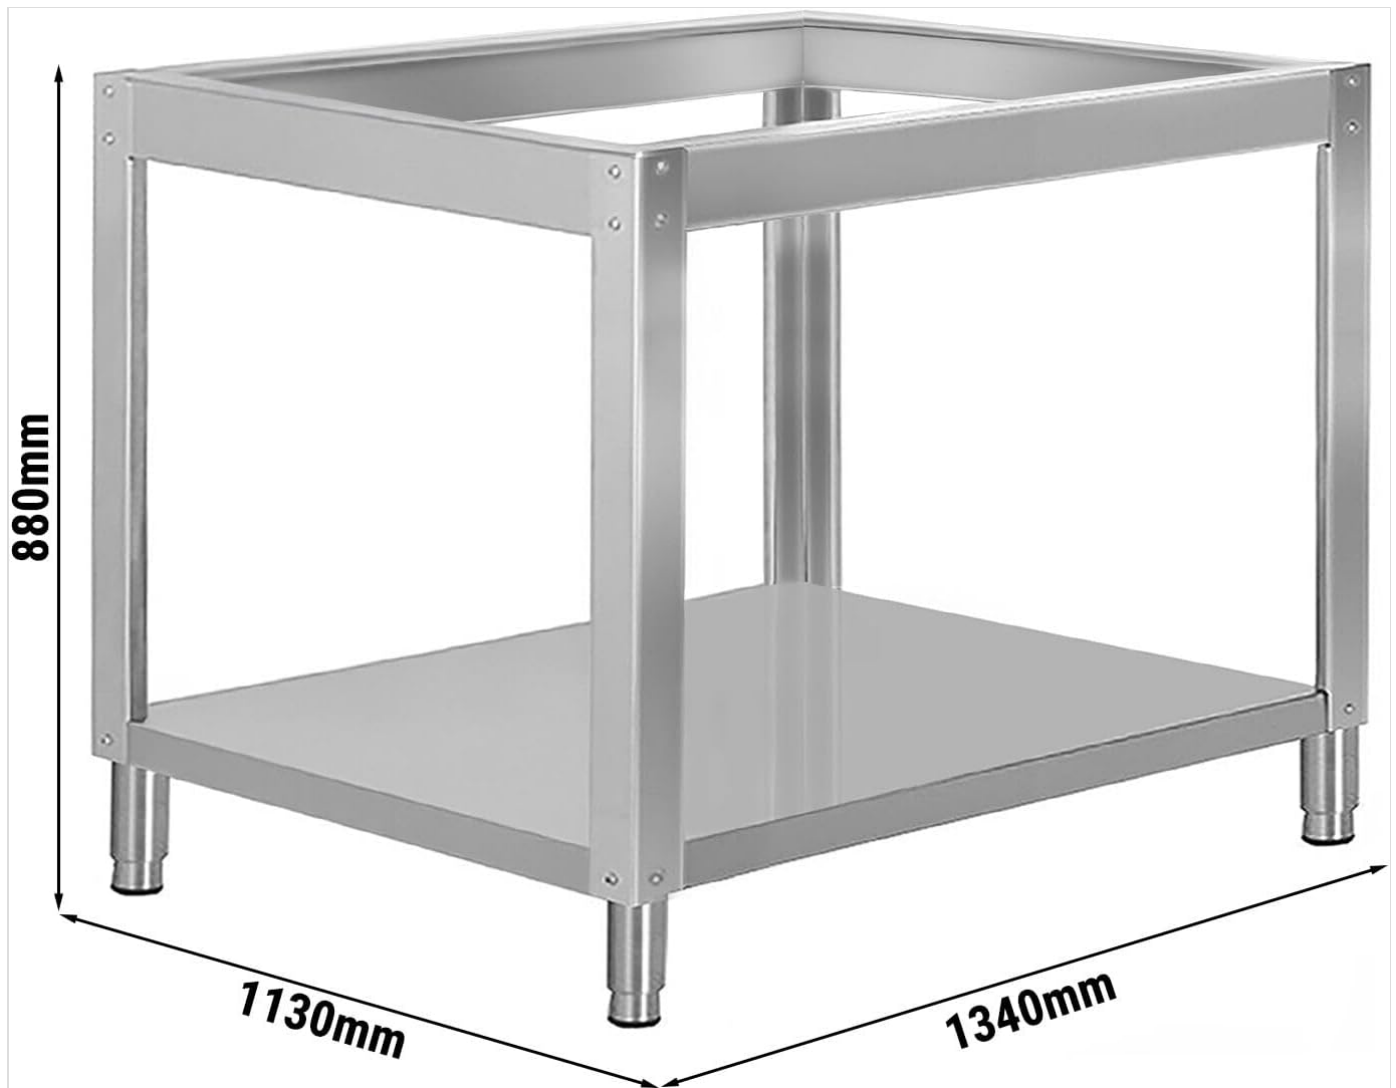


Figure 2: The GGM Gastro UDP99-N Support Stand illustrating its approximate assembled dimensions: 880mm height, 1130mm depth, and 1340mm width. Note that other product dimensions listed in some specifications might refer to packaging or specific components.

WARRANTY AND SUPPORT

For warranty information and technical support regarding your GGM Gastro UDP99-N Support Stand, please contact the

manufacturer or the authorized seller directly.

- **Manufacturer Contact:** Refer to the packaging or the official GGM Gastro website for contact details.
- **Seller Support:** If purchased through a retailer, contact their customer service for assistance.
- **Product Registration:** Consider registering your product with GGM Gastro, if applicable, to receive updates and facilitate warranty claims.

Always provide your model number (UDP99-N) and ASIN (B0F1LDPR7N) when seeking support.

