

[Manuals.plus](#) /

› [ZYDIE](#) /

› ZYDIE AI Translation Earbuds User Manual

ZYDIE M96

ZYDIE AI Translation Earbuds User Manual

Model: M96 | Brand: ZYDIE

1. INTRODUCTION

The ZYDIE AI Translation Earbuds (Model M96) are innovative 3-in-1 headphones designed to facilitate seamless communication across language barriers, provide high-fidelity audio for music, and enable clear phone calls. Featuring real-time AI translation across 144 languages with 98% accuracy, these earbuds are an essential tool for travel, business, and learning. Their ergonomic design ensures comfort for extended wear, while long battery life keeps you connected.



Figure 1: ZYDIIIE AI Translation Earbuds and Charging Case.

2. WHAT'S IN THE BOX

Upon unboxing your ZYDIIIE AI Translation Earbuds, please ensure all the following items are present:

- 2 x ZYDIIIE AI Translation Earbuds
- 1 x Portable Charging Case
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)

Three-in-One Earbuds



Translate



Music



Phone Calls

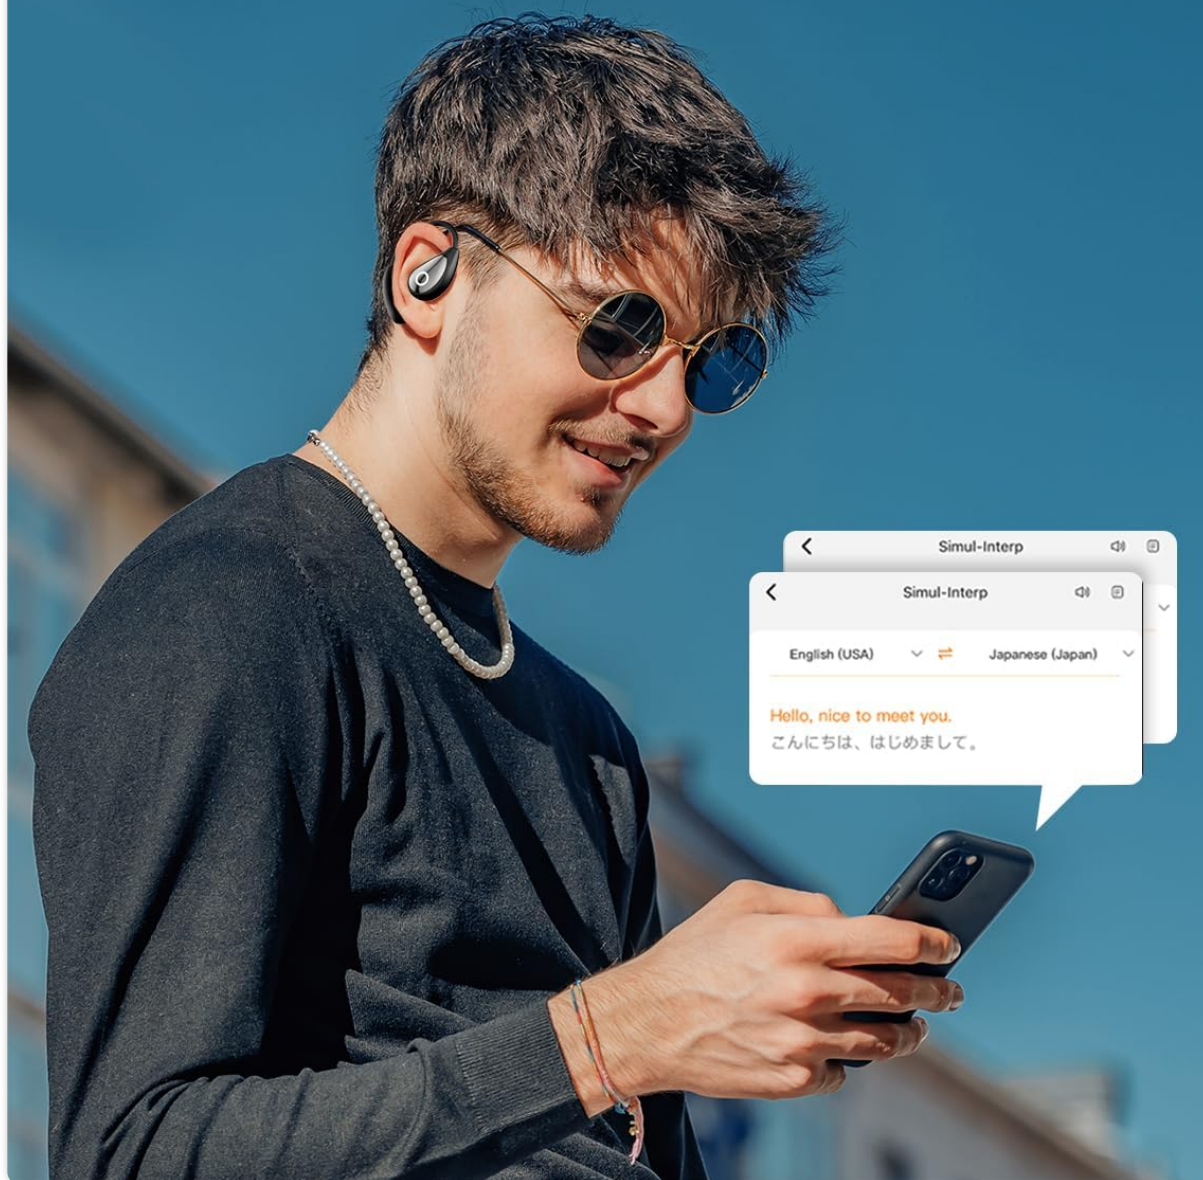


Figure 2: Package Contents of ZYDIEE AI Translation Earbuds.

3. SETUP GUIDE

Follow these steps to set up your ZYDIEE AI Translation Earbuds and connect them to your smartphone:

1. **Download the Wearfit Pro APP:** Scan the QR code provided in the user manual or search for "Wearfit Pro" on Google Play Store (for Android) or Apple App Store (for iOS) and download the application.
2. **Register an Account:** Open the Wearfit Pro APP and register a new account or log in if you already have one.
3. **Enable Bluetooth:** Turn on Bluetooth on your smartphone.

4. **Pair the Earbuds:** Open the charging case. The earbuds will automatically enter pairing mode. In the Wearfit Pro APP, navigate to the device connection section and select "Smart earphones". The app will scan for available devices. Select "M96" from the list to connect. Confirm pairing on your phone if prompted.
5. **Select Translation Mode:** Once connected, you can choose the desired translation mode within the app to begin using your earbuds.

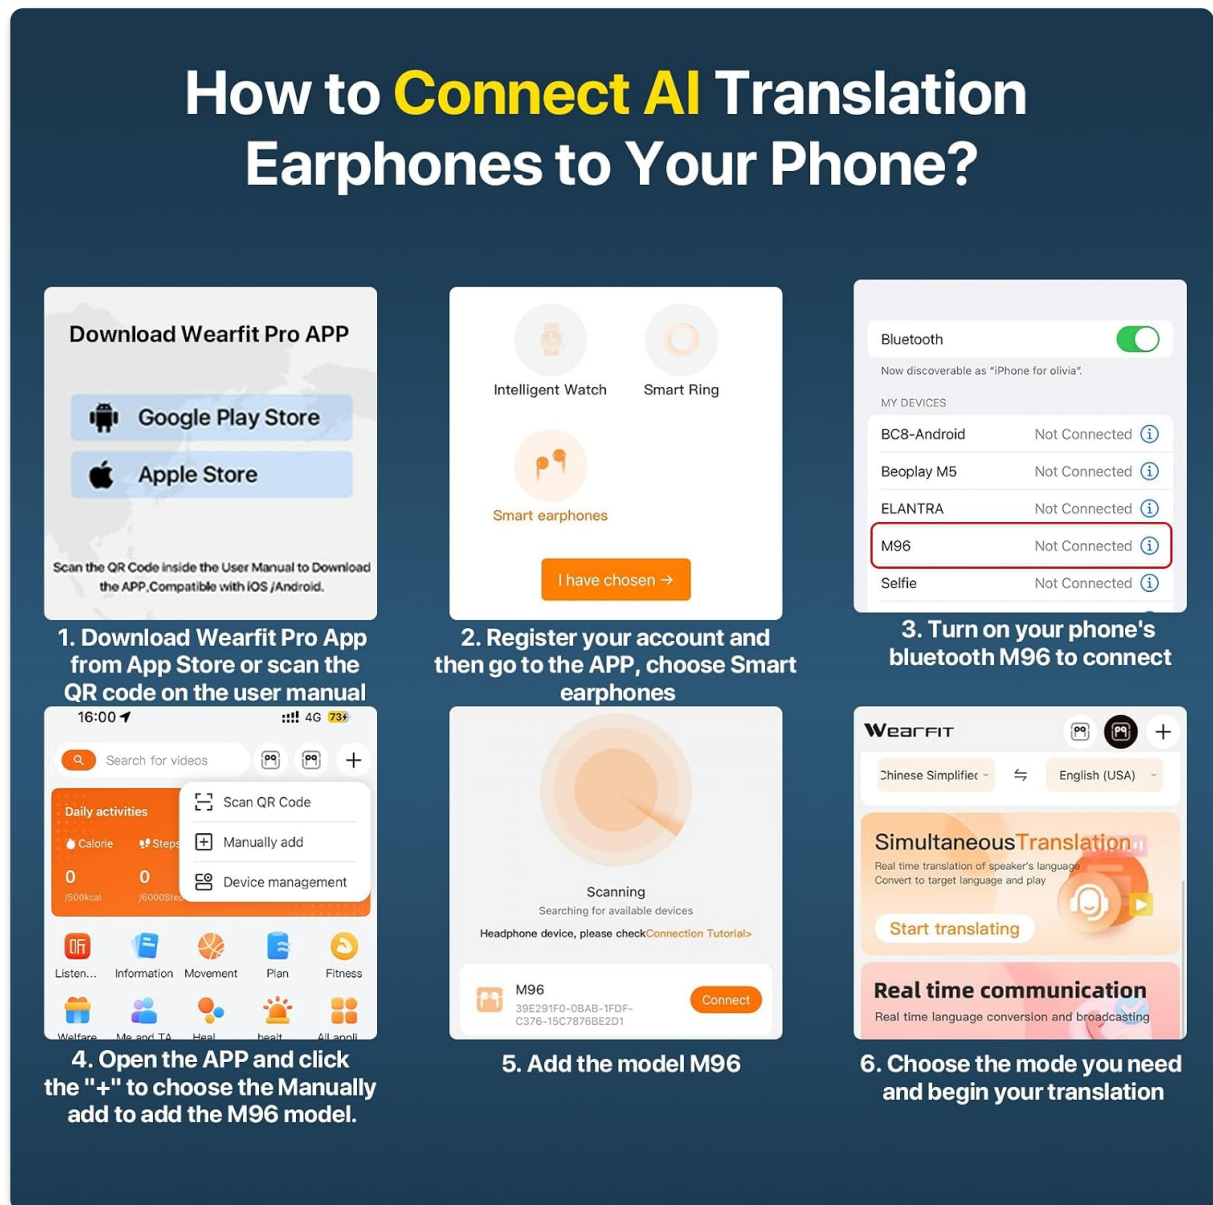


Figure 3: Connecting ZYDIE Earbuds to Your Phone via Wearfit Pro App.

Your browser does not support the video tag.

Video 1: Official guide on how to connect the ZYDIE AI Translation Earbuds to the Wearfit Pro application for initial setup and pairing.

4. OPERATING MODES & FEATURES

The ZYDIE AI Translation Earbuds offer versatile functionality with multiple operating modes and advanced features:

4.1. Translation Modes

The earbuds support 144 languages with 98% accuracy, enabling real-time two-way translation for various scenarios:

- **Real Time Call Mode:** For voice and video calls with real-time translation.
- **Voice Call Mode:** For standard voice calls with translation.
- **Simultaneous Translation:** Ideal for face-to-face conversations where the earbuds translate spoken language in real-time.
- **Speaker Mode:** Allows one person to speak into the phone, and the translation is broadcasted through the earbuds or phone speaker.

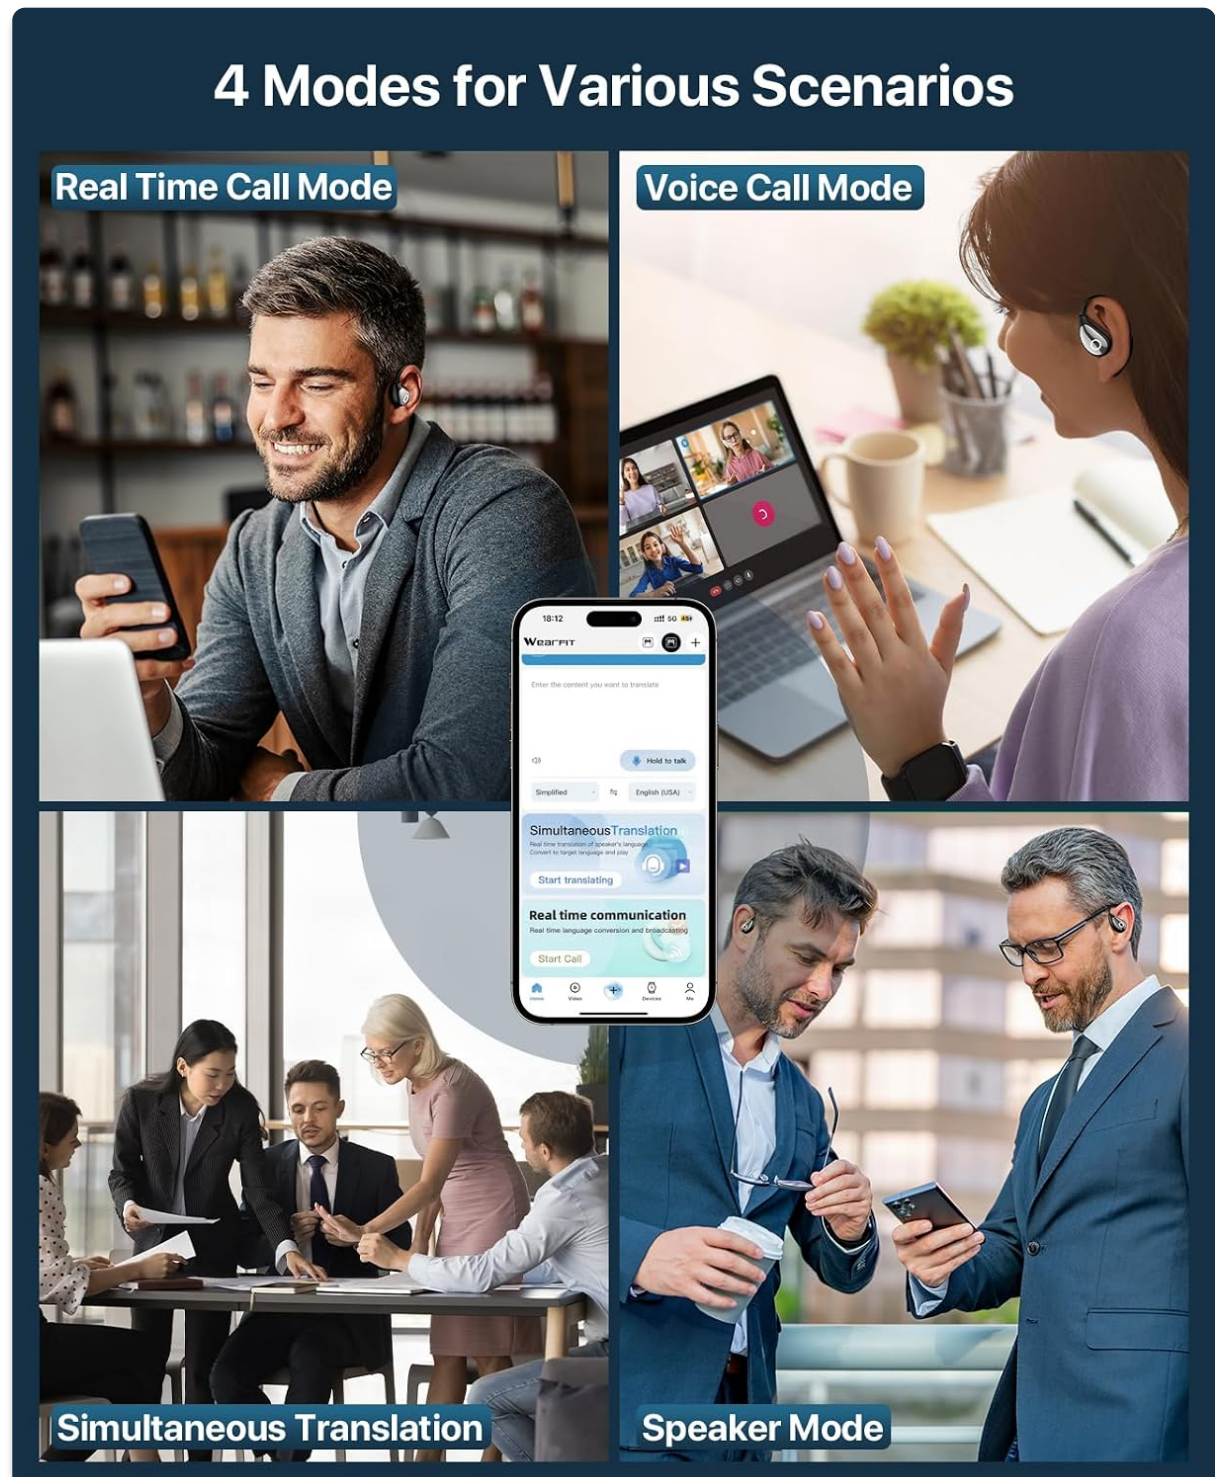


Figure 4: Overview of the 4 Translation Modes.

Your browser does not support the video tag.

4.2. 3-in-1 Functionality

Beyond translation, these earbuds serve multiple purposes:

- **Music Playback:** Enjoy high-quality audio with 360° surround sound technology and active noise cancellation for an immersive listening experience.
- **Phone Calls:** Make and receive calls with clear audio.

The advertisement features a dark blue background with a white audio waveform. At the top, the text 'Upgraded AI Smart Translation' is displayed in white and yellow, followed by 'Natural, Instant' in white. Below this, two black earbuds are shown. In the center, a smartphone displays a translation app interface with English and Japanese text. To the right, a black charging case is shown with a digital display. At the bottom, three statistics are listed: '144 Languages', '98% Accuracy', and 'Free App'. Below these, there are icons for Apple and Android, followed by the text 'Download Free APP to Your Phone/Tablet/Computer'.

Upgraded AI Smart Translation

Natural, Instant

🔊 Hello! nice to meet you

👂 こんにちは、はじめまして

144 Languages

98% Accuracy

Free App

Download Free APP to Your Phone/Tablet/Computer

Figure 5: Upgraded AI Smart Translation Features.

Plan yayi kele mbote mingi

Yes, this is very good.

Break Barriers with 144 Translations Languages

With advanced AI technology, our earbuds eliminate language barriers, ensuring smooth communication in travel, business, learning, and beyond.

 English	 French	 Chinese	 Russian
 Italian	 German	 Japanese	 More

Figure 6: Break Language Barriers with 144 Translation Languages.

5. BATTERY AND CHARGING

The ZYDIIIE M96 earbuds are equipped with a long-lasting battery for extended use:

- Up to 5 hours of continuous use on a single charge.
- Total playtime of up to 60 hours with the charging case.
- Features Type-C charging for convenience.
- The charging case has a digital display showing the battery percentage for both the case and individual earbuds.

Long-Lasting Battery

All-Day Power

60 Hours
with Charging Case

5 Hours
Single Charge Time



Power Display
of Case



Power Display
of Earbuds



Figure 7: Long-Lasting Battery and Power Display.

6. ERGONOMIC DESIGN

Designed for comfort and durability, the earbuds feature an open-ear design that ensures a secure and pressure-free fit, even during extended periods of use. They are lightweight and engineered for convenience, making them perfect for long business meetings, travel, or personal use.

Ergonomic Design



Figure 8: Ergonomic Design for All-Day Comfort.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	4 x 3 x 1.4 inches
Item Weight	3.84 ounces
Item Model Number	M96

Batteries	1 Lithium Ion batteries required (included)
Manufacturer	ZYDIIIE
Country of Origin	China

8. MAINTENANCE

To ensure the longevity and optimal performance of your ZYDIIIE AI Translation Earbuds, please follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage. Keep them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Use only the provided Type-C cable for charging. Avoid overcharging or completely draining the battery frequently.
- **Handling:** Handle the earbuds with care. Avoid dropping them or exposing them to strong impacts.

9. TROUBLESHOOTING

If you encounter any issues with your ZYDIIIE AI Translation Earbuds, please refer to the following common troubleshooting tips:

- **Earbuds not pairing:** Ensure Bluetooth is enabled on your device and the earbuds are fully charged. Try turning Bluetooth off and on again, or restarting your phone. If the issue persists, try resetting the earbuds (refer to the Wearfit Pro app or manufacturer's website for specific reset instructions).
- **Poor sound quality:** Check the earbud fit and ensure they are clean. Verify that your audio source is not the issue.
- **Translation inaccuracy:** Ensure a stable internet connection for online translation modes. Speak clearly and at a moderate pace. Check the selected source and target languages in the app.
- **Battery not charging:** Ensure the Type-C cable is securely connected to both the charging case and a power source. Try a different charging cable or power adapter.

For further assistance, please contact ZYDIIIE customer support.

10. WARRANTY AND SUPPORT

The ZYDIIIE AI Translation Earbuds are manufactured by ZYDIIIE. For specific warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official ZYDIIIE website. Please retain your proof of purchase for any warranty claims.

