



[Manuals.plus](#) /

> [padom](#) /

> padom GS03 UF-08 Smart Glasses Instruction Manual

padom GS03 UF-08

padom GS03 UF-08 Smart Glasses Instruction Manual

Model: GS03 UF-08

INTRODUCTION

Thank you for choosing the padom GS03 UF-08 Smart Glasses. These innovative open-ear audio Bluetooth glasses combine stylish design with advanced technology, offering features such as blue light filtering, integrated speakers and microphone, voice assistant compatibility, and intuitive touch controls. This manual provides detailed instructions to help you set up, operate, and maintain your new smart glasses for optimal performance and an enhanced audio experience.

WHAT'S IN THE BOX

- padom GS03 UF-08 Smart Glasses
- Eyeglasses Storage Bag
- Magnetic Charging Cable
- Cleaning Cloth
- User Manual (this document)



Ultra-Light Comfort 27 Grams of Uncompromised Awareness

Advanced frame engineering enhances situational awareness while maintaining all-day comfort

Image: Packaging contents of the padom GS03 UF-08 Smart Glasses, showing the glasses, storage bag, magnetic charging cable, cleaning cloth, and user manual.

PRODUCT OVERVIEW

The padom GS03 UF-08 Smart Glasses are designed for comfort and functionality. They feature an open-ear audio design, allowing you to hear your surroundings while enjoying audio. The frames are lightweight and equipped with blue light filtering lenses to reduce eye strain.

Key Features:

- **Open-Ear Audio:** Enjoy music and calls without blocking ambient sounds.
- **Blue Light Filtering Lenses:** Protect your eyes from harmful blue light emitted by screens.
- **Bluetooth 5.3 Connectivity:** Ensures a stable and fast connection to your devices.
- **Touch Controls:** Manage music, calls, and voice assistant with simple taps.
- **Voice Assistant Integration:** Access Siri, Google Assistant, or Alexa hands-free.
- **IPX5 Water Resistance:** Resistant to sweat and light splashes.
- **Lightweight Design:** Weighing approximately 27 grams for all-day comfort.
- **Magnetic Charging:** Convenient and secure charging.


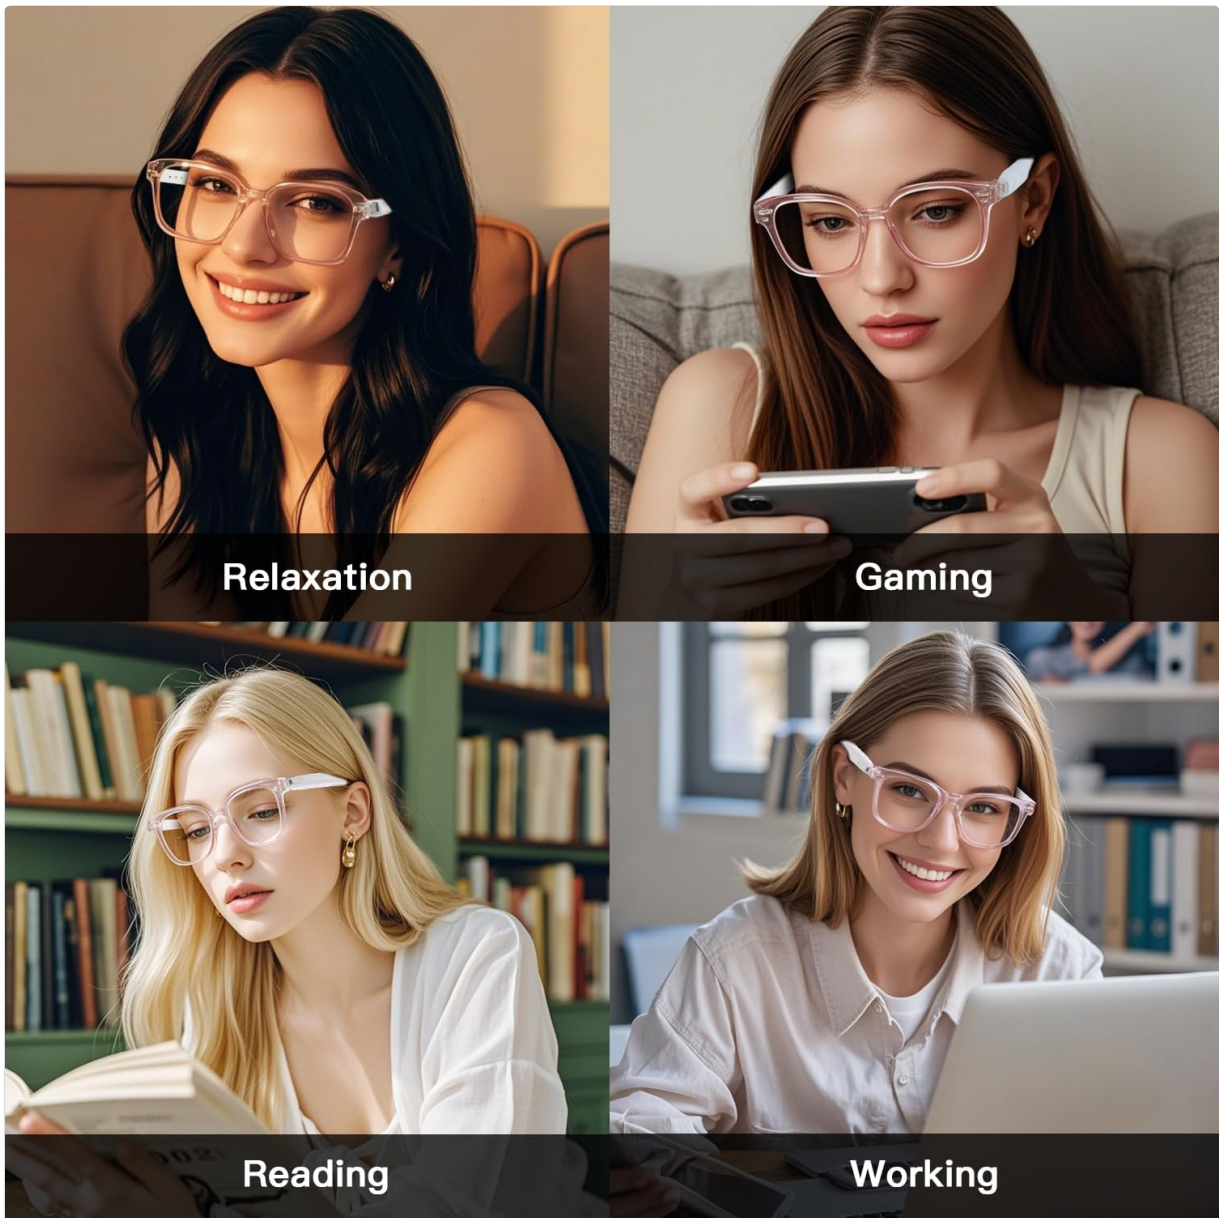


Image: Side view of the padom GS03 UF-08 Smart Glasses, highlighting the design of the temples where the audio components are housed.

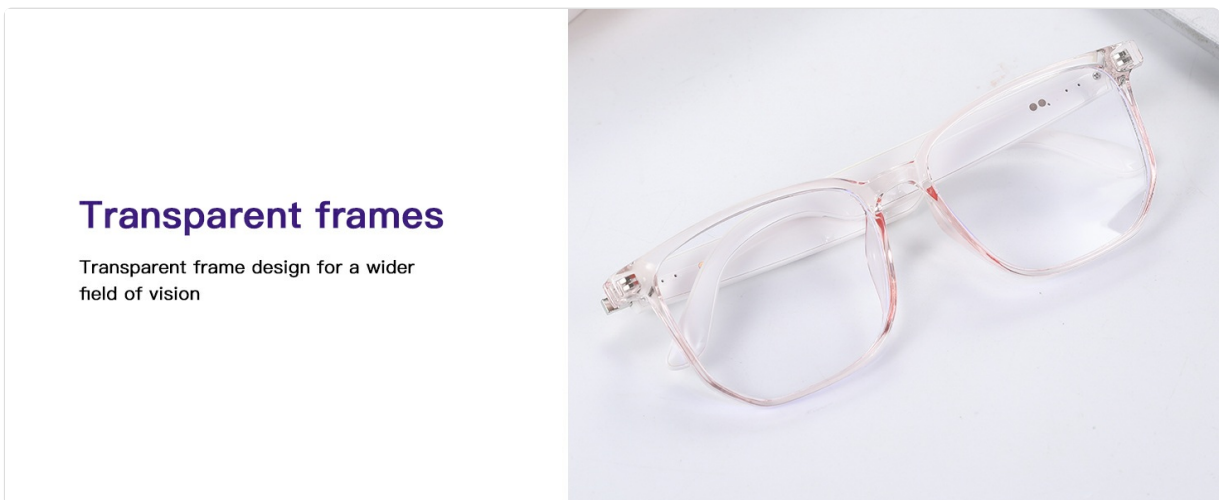

Transparent frames

Transparent frame design for a wider field of vision

Image: Diagram illustrating how the blue light shield lenses filter harmful blue light, enhancing comfort for digital eyes.

SETUP

1. Charging the Glasses

Before first use, fully charge your smart glasses. Use the provided magnetic charging cable. Align the magnetic connector with the charging points on the inside of the glasses' temples. The indicator light will show charging status.

- Full charge time: Approximately 90 minutes.
- Battery life: 4-6 hours of music time, 7-day standby.

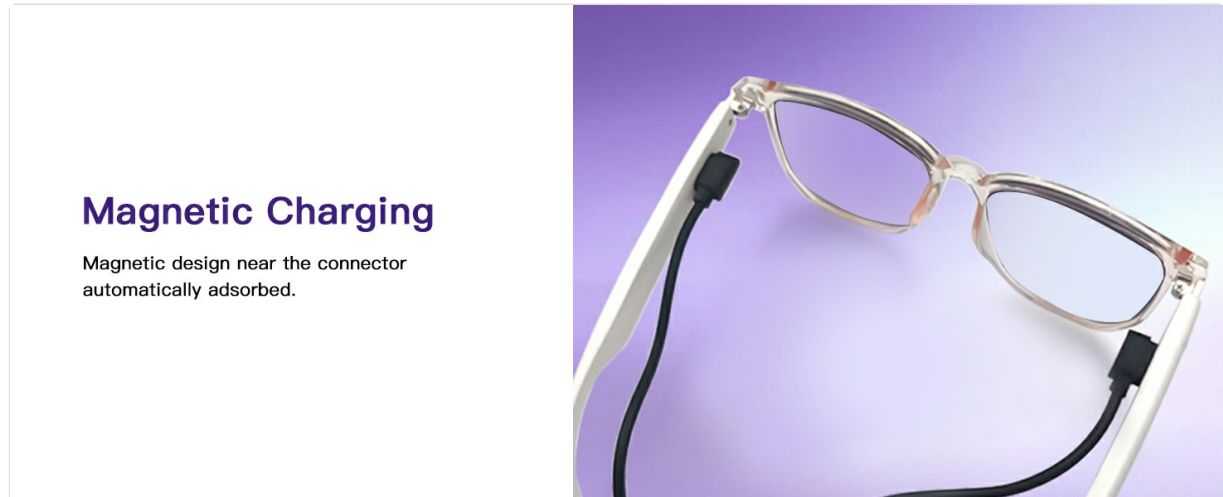


Image: Magnetic charging cable attaching to the temple of the smart glasses for power replenishment.

2. Bluetooth Pairing

1. Ensure the glasses are charged and powered off.
2. Press and hold the power button (usually on the temple) for 5 seconds until the indicator light flashes blue and red, indicating pairing mode.
3. On your smartphone or device, go to Bluetooth settings and search for "padom GS03 UF-08" or similar.
4. Select the device to pair. Once connected, the indicator light will turn solid blue or off, depending on the model.



Image: Representation of Bluetooth 5.3 technology, ensuring a fast and stable wireless connection for your smart glasses.

OPERATING INSTRUCTIONS

The padom GS03 UF-08 Smart Glasses feature intuitive touch controls located on the temples. Refer to the

diagram below for specific functions.


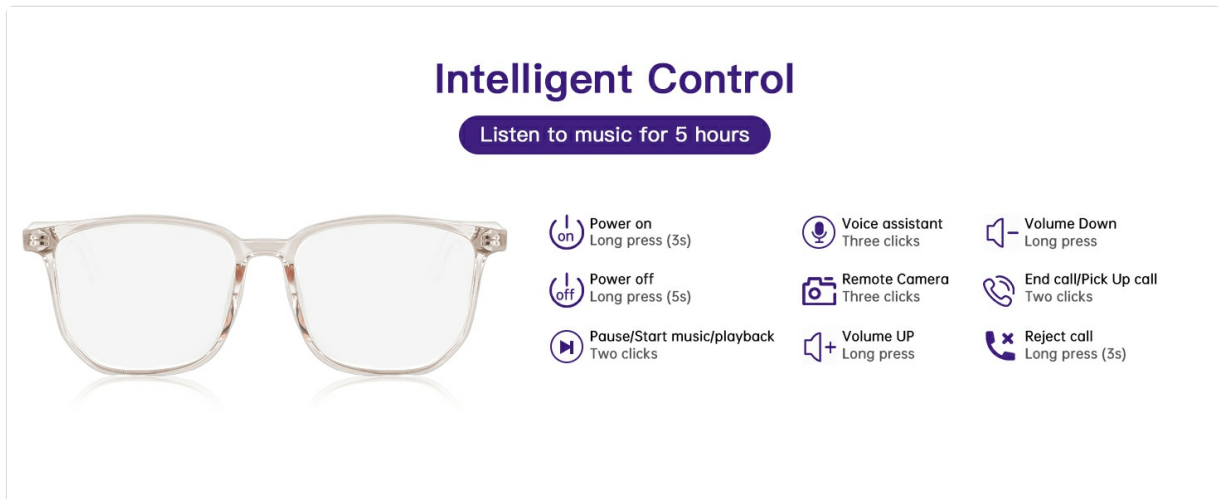


Image: Detailed diagram of touch control functions on the smart glasses, including actions for power, music playback, call management, voice assistant activation, and remote camera control.

Basic Controls:

- **Power On:** Long press (3 seconds) on the touch area.
- **Power Off:** Long press (5 seconds) on the touch area.
- **Play/Pause Music:** Double-click the touch area.
- **Answer/End Call:** Two clicks on the touch area.
- **Reject Call:** Long press (3 seconds) on the touch area.
- **Activate Voice Assistant:** Three clicks on the touch area.
- **Remote Camera Control:** Three clicks on the touch area to trigger your phone's camera shutter.
- **Volume Up:** Long press on the right temple.
- **Volume Down:** Long press on the left temple.

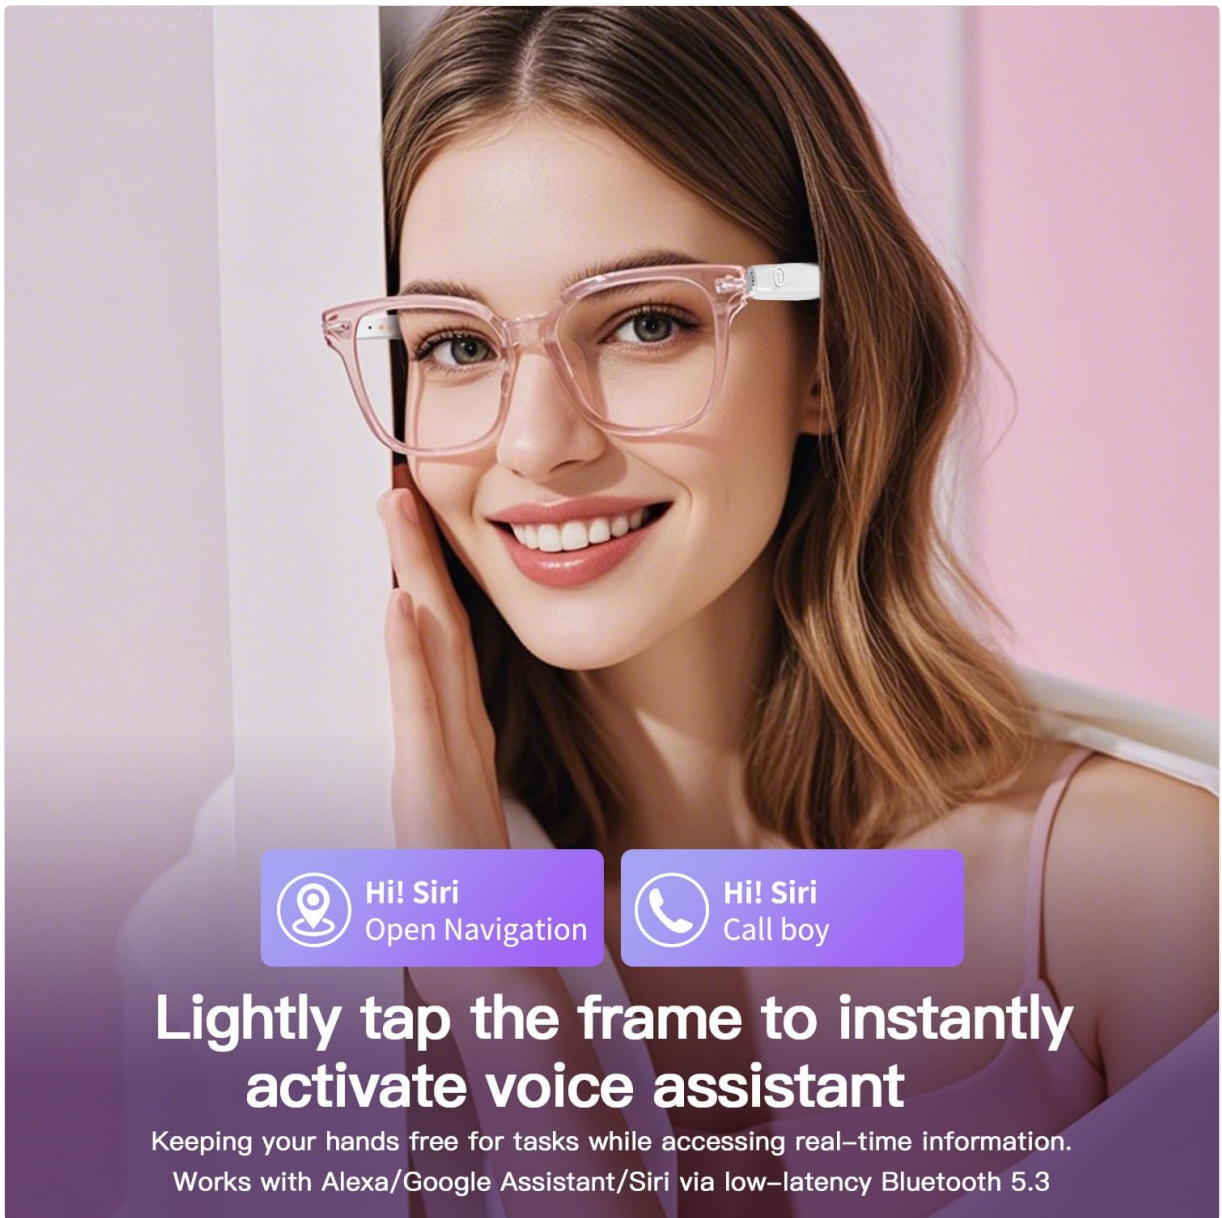

Hi! Siri
Open Navigation

Hi! Siri
Call boy

Lightly tap the frame to instantly activate voice assistant

Keeping your hands free for tasks while accessing real-time information.
Works with Alexa/Google Assistant/Siri via low-latency Bluetooth 5.3

Image: A user activating the voice assistant on the smart glasses, demonstrating hands-free control for navigation and calls.

Remote Control Camera

Hands-free photography | Optimized for on-the-go moments



Image: A user demonstrating the remote camera control feature of the smart glasses, allowing hands-free photography.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and usage of the GS03 Smart Glasses, including audio and control functions.

BLUE LIGHT FILTERING LENSES

The GS03 UF-08 Smart Glasses are equipped with anti-blue light lenses designed to filter harmful blue light. This feature is particularly beneficial for individuals who spend extended periods in front of digital screens, helping to reduce digital eye strain, minimize glare, and enhance visual clarity.

Advanced Blue Light Protection



- ✓ Reduce digital eye strain during extended screen time
- ✓ Minimize glare from artificial lighting
- ✓ Enhance visual clarity for sharper focus Stay productive and comfortable in the digital age

Image: A user wearing the smart glasses with blue light filtering lenses, demonstrating their use during screen time to protect eyes.

CARE & MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lenses and frames. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the glasses in the eyeglasses storage bag to protect them from scratches and dust.
- **Water Resistance:** The glasses are IPX5 water-resistant, meaning they can withstand sweat and light splashes. Do not submerge them in water or expose them to heavy rain.
- **Temperature:** Avoid exposing the glasses to extreme temperatures (hot or cold) as this can affect battery life and electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cannot power on	Low battery; Incorrect power-on procedure.	Charge the glasses fully. Ensure you long-press the touch area for 3 seconds.
Cannot pair via Bluetooth	Glasses not in pairing mode; Bluetooth off on device; Device too far.	Ensure glasses are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Keep devices within 10 meters.
No audio or low volume	Volume too low; Not connected; Audio source issue.	Increase volume on glasses and connected device. Repair Bluetooth. Check audio source.
Touch controls unresponsive	Temporary software glitch; Dirty touch area.	Restart the glasses. Clean the touch area with a soft cloth.

SPECIFICATIONS

Feature	Detail
Model Number	UF-08
Style	GS03 Normal version smart glasses
Connectivity Technology	Bluetooth 5.3
Special Feature	Blue Light Filtering
Water Resistance	IPX5
Battery Type	Lithium Polymer (2 Nonstandard Battery batteries included)
Item Weight	27 grams (approx. 0.95 ounces)
Package Dimensions	6.73 x 2.4 x 2.24 inches



Digital Eye Relief
HEV blue light filter for marathon
40% HEV reduction | Anti-glare coating

Amber-Tinted Clarity
Page-turning comfort without eye strain

Game On, Eyes On
Reduce screen glare while
dominating the leaderboard

Binge-Watch Smarter
Tap-to-wake voice assistant meets
cinematic comfort

Image: Dimensional specifications of the smart glasses, including frame height, lens width, nose bridge width, frame length, temple length, and overall weight.

WARRANTY & SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official padom website. Keep your purchase receipt for warranty claims.