

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VEODONT](#) /

› VEODONT Replacement Parts User Manual for Roidmi NEX X20, X30, S2, F8 Pro Vacuum Cleaners

VEODONT 2280

VEODONT Replacement Parts User Manual

FOR ROIDMI NEX X20, X30, S2, F8 PRO HANDHELD WIRELESS VACUUM CLEANERS

Model: 2280

Introduction

This manual provides instructions for the installation and maintenance of VEODONT replacement parts, including roller main brushes and HEPA filters, designed for Roidmi NEX X20, X30, S2, and F8 Pro handheld wireless vacuum cleaners. These parts are manufactured from durable materials to ensure a long service life and are easily removable and replaceable as part of routine maintenance. Replacing these components regularly helps to improve the cleaning ability and overall effectiveness of your vacuum cleaner.



Installation Instructions

Before beginning any installation or replacement procedure, ensure your Roidmi vacuum cleaner is turned off and unplugged from its power source to prevent accidental operation.

Replacing the HEPA Filter

1. Locate the dustbin and filter assembly on your Roidmi vacuum cleaner.
2. Remove the dustbin from the vacuum cleaner according to your vacuum's specific instructions.
3. Twist or pull to remove the old HEPA filter from the dustbin assembly.
4. Insert the new VEODONT HEPA filter into the designated slot, ensuring it is securely seated.
5. Reattach the dustbin to the vacuum cleaner.



Figure 2: A VEODONT HEPA filter, ready for installation.

Replacing the Main Roller Brush

1. Turn the vacuum cleaner over to access the brush roll compartment, typically located on the underside of the cleaning head.
2. Open the brush roll cover or latch mechanism. This may involve pressing a release button or sliding a lock.
3. Carefully lift out the old main roller brush.
4. Insert the new VEODONT main roller brush, ensuring the ends align correctly with the brush roll bearings or slots.
5. Close the brush roll cover and secure any latches.

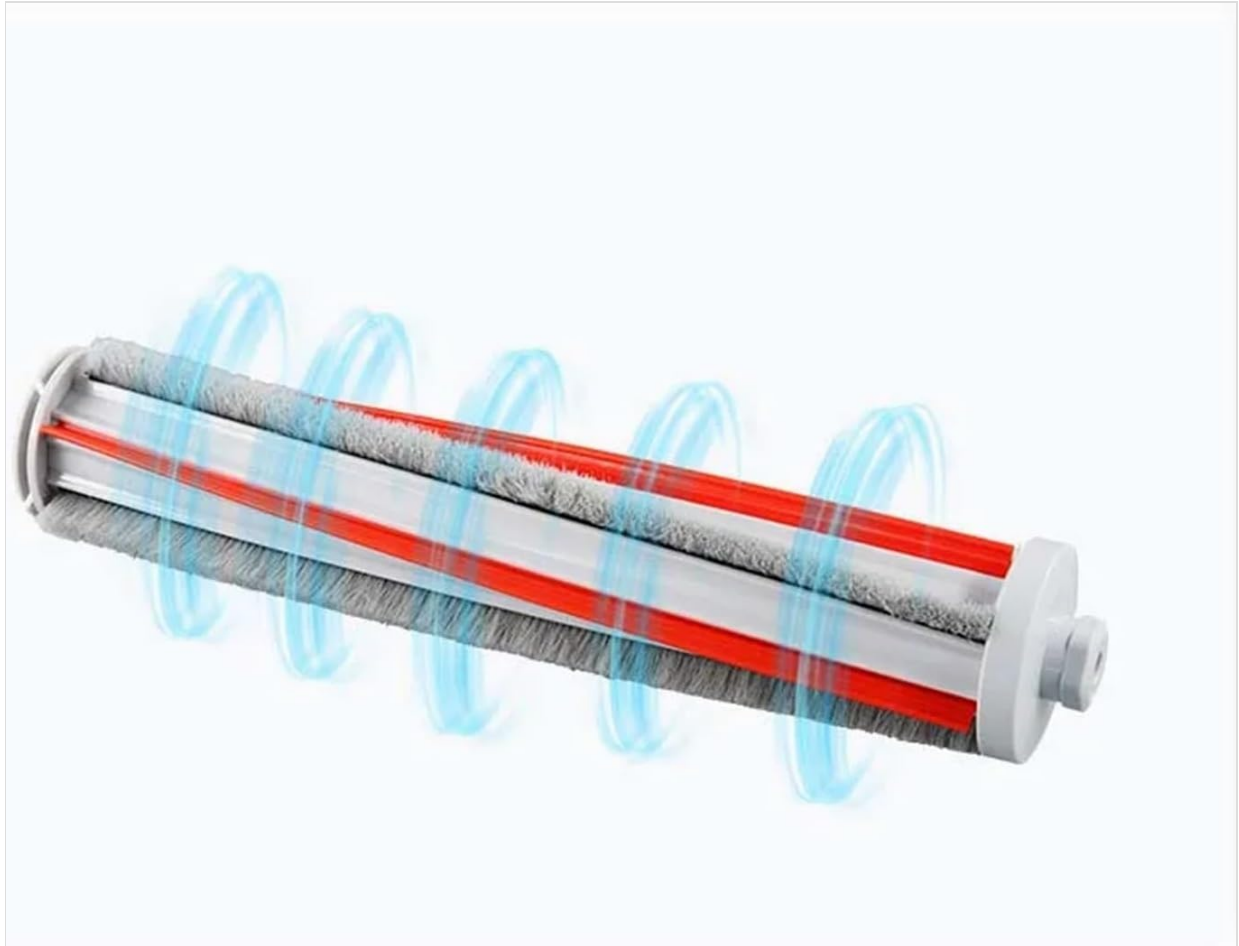


Figure 3: The main roller brush, designed for efficient debris collection.



Figure 4: Main roller brush dimensions.





Figure 5: Soft roller brush dimensions.

Operating Instructions

Once the VEODONT replacement parts are correctly installed, your Roidmi vacuum cleaner is ready for use. Operate the vacuum cleaner according to its original manufacturer's instructions. The new filters and brushes will contribute to maintaining optimal cleaning performance and air filtration.

Maintenance

Regular maintenance of your replacement parts is essential for prolonging their lifespan and ensuring consistent cleaning efficiency.

HEPA Filter Maintenance

- **Cleaning:** Tap the filter gently over a trash can to remove loose dust and debris. For deeper cleaning, rinse the filter under cool running water. Ensure the filter is completely dry before reinstalling it into the vacuum cleaner.
- **Replacement Frequency:** It is recommended to replace the HEPA filter every 3 to 6 months, depending on usage and household dust levels, to maintain optimal filtration performance.

Main Roller Brush Maintenance

- **Cleaning:** Regularly inspect the main roller brush for tangled hair, threads, or debris. Use the provided cleaning tool (refer to Figure 1) to cut and remove any entangled material from the brush bristles.
- **Replacement Frequency:** The main roller brush should be replaced every 6 to 12 months, or sooner if visible wear or damage affects cleaning performance.

Troubleshooting

If you experience issues after installing the replacement parts, consider the following common troubleshooting steps:

- **Reduced Suction:**
 - Check if the HEPA filter is clogged. Clean or replace it as per maintenance instructions.
 - Ensure the dustbin is empty and properly seated.
- **Brush Not Spinning or Ineffective Cleaning:**
 - Inspect the main roller brush for tangled hair or debris that might be obstructing its rotation. Clean thoroughly using the provided tool.
 - Verify that the brush is correctly installed and the brush cover is securely closed.
- **Unusual Noises:**
 - Ensure all parts, especially the brushes and filters, are correctly installed and not loose.
 - Check for any foreign objects lodged in the brush roll area or air pathways.

Specifications

Brand	VEODONT
Model Number	2280
Compatible Vacuum Models	Roidmi F8 Pro, Roidmi NEX X20, Roidmi NEX X30, Roidmi NEX S2
Item Weight (Set D)	1.76 ounces
Package Dimensions	0.39 x 0.39 x 0.39 inches
Components Included (Set D)	HEPA Filters, Main Roller Brushes, Cleaning Tool