

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [VR SHINECON](#) /
- › [VR SHINECON AI Translation Glasses User Manual](#)

VR SHINECON AI Translation Glasses

VR SHINECON AI Translation Glasses User Manual

Model: G06

INTRODUCTION

The VR SHINECON AI Translation Glasses are designed to provide seamless real-time voice and photo translation, open-ear audio, and convenient touch controls. These smart glasses enhance communication and entertainment, making them ideal for travel and daily use. They operate in conjunction with the free Ear Dance application on your iOS or Android smartphone via Bluetooth connection.



Image: VR SHINECON AI Translation Glasses alongside the Ear Dance app interface on a smartphone.

SETUP

1. App Download

The VR SHINECON AI Translation Glasses require the **Ear Dance** application for full functionality. Download the app using one of the following methods:

1. Method 1: Scan QR Code

Locate the QR code provided in your product packaging or on the instruction manual. Scan it with your smartphone's camera to download and install the "Ear Dance" app. Alternatively, you can use this direct link: [Ear Dance App Download](#).

2. Method 2: Search App Stores

Open the Google Play Store (for Android) or Apple App Store (for iOS) on your smartphone. Search for "Ear Dance" and download the official application.

How to Download App

method 1



Scan the QR code on the instruction manual to download and install the "EarDance" app

method 2



Google Play




App Store

You can also search for the keyword "EarDance" on major app stores to find the app and download and install it




How to bind the App

Step 1

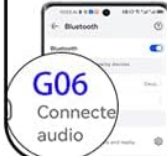

Open the Bluetooth page of your mobile phone and select **G06** to complete the connection.

Step 2

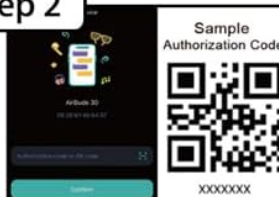

1) Scan the Authorization code (QR Code)
1. Click the Scan Button
2. Scan the QR Code



2) Enter the Code Number
1. Enter the Number
2. Click the Confirm

Image: Visual guide for downloading the Ear Dance application.

2. App Binding and Bluetooth Connection

After installing the Ear Dance app, follow these steps to connect your glasses:

1. Ensure your VR SHINECON AI Translation Glasses are charged and powered on.
2. Open the Bluetooth settings on your mobile phone.
3. In the list of available devices, select "**G06**" to establish the Bluetooth connection.
4. Open the Ear Dance app. You may be prompted to scan an activation QR code or enter an activation number. This code is typically found on a card within your product packaging.

OPERATING INSTRUCTIONS

1. Power On/Off and Wear Detection

The glasses feature an automatic wear detection system:

- The glasses automatically power on when worn.
- They automatically pause or enter a low-power state when removed, conserving battery life.

Smart Startup

Wakes up
when you
wear it



Image: Smart Startup feature, indicating automatic power-on when worn.

2. Touch Controls

Utilize the touch-sensitive controls on the temples of the glasses for various functions:

- **Play/Pause Audio:** Tap once.
- **Answer/End Calls:** Tap once.
- **Trigger Translation:** Specific tap gestures (refer to app for details).
- **Wake Voice Assistant:** Tap and hold (e.g., Siri, Google Assistant).

3. Volume Adjustment

Adjust the audio volume by gently swiping your fingertips along the right temple of the glasses:

- **Increase Volume:** Swipe forward.
- **Decrease Volume:** Swipe backward.

Swipe your fingertips to easily adjust the volume

Gently place your fingertips on the right volume bar. When sliding forward, the volume will gradually increase, and when sliding backward, the volume will gradually decrease.



Image: Visual instruction for adjusting volume on the glasses.

4. Real-Time Translation Features

The Ear Dance app unlocks powerful translation capabilities:

- **Voice Translation (Free Talk Mode):** Engage in real-time, ear-to-ear bilingual conversations across up to 164 languages. Speak naturally, and the glasses will translate and relay the conversation.
- **Photo Translation:** Use your smartphone camera through the app to snap photos of text (e.g., menus, documents, signs). The app will translate the text and display it, or speak it through your glasses.
- **Voice Note Mode:** Record voice memos and have them transcribed live within the app. This is useful for meetings, lectures, or personal notes.

BREAK LANGUAGE BARRIERS

Translate languages in real time

I'd like a tall latte.



トールラテを
つお願いします



TRANSLATES IN 164 LANGUAGES



English



Spanish



Mandarin



French



German



Japanese

Image: Demonstration of real-time translation breaking language barriers.

3-IN-1 REAL-TIME TRANSLATION WITH AI GLASSES

Photo Translation

Photo Translation in Seconds

Snap -> Translate menus, documents, and signs

Free Talk Mode

Single tap to speak - glasses/phone - instantly play translation

Direct ear-to-ear bilingual conversation

Voice-to-Text Transcription

Record meetings & convert into editable notes

164 Languages | IOS & Android App
Instant AI Response

164 languages

Image: Overview of the three main translation functionalities.

5. Open-Ear Audio

The integrated open-ear speakers allow you to listen to audio while remaining aware of your surroundings. This is beneficial for activities like walking, cycling, or commuting.

- Enjoy clear voice calls, podcasts, audiobooks, and navigation instructions.
- Bluetooth 5.3 technology ensures stable connectivity.
- Note: These glasses are not designed for bass-heavy music or noise isolation.

6. Sleep Mode

The app includes a sleep mode feature that provides relaxing sounds or white noise to aid in rest.

MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lenses and frame. Avoid harsh chemicals.
- **Storage:** When not in use, store the glasses in the provided pouch to protect them from scratches and dust.
- **Charging:** Use the original charging cable to charge the glasses. The auto wear detection helps

optimize battery life.

TROUBLESHOOTING

- **Connectivity Issues:** Ensure Bluetooth is enabled on your smartphone and the Ear Dance app is open. Verify that the glasses are charged and within range.
- **Translation Speed:** Translation speed can be affected by your internet connection and background noise. Ensure a stable connection for optimal performance.
- **App Activation:** If you encounter issues with app activation, double-check that you have correctly scanned the activation QR code or entered the activation number provided with your product.
- **Audio Quality:** For best audio quality, ensure the speakers on the temples are positioned correctly near your ears.

SPECIFICATIONS

Feature	Detail
Operating System Compatibility	Android, iOS
Special Feature	Voice Control
Connectivity Technology	Bluetooth 5.3
Wireless Communication Standard	Bluetooth
Battery Cell Composition	Lithium Ion
GPS	No GPS
Color	Black
Lens Type	Sunglass lenses, polarized, blue filter

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the VR SHINECON AI Translation Glasses, demonstrating their key features and benefits, including real-time translation and smart functionalities.

WARRANTY AND SUPPORT

For any assistance, technical support, or warranty inquiries regarding your VR SHINECON AI Translation Glasses, please contact VR SHINECON support. Refer to your product packaging for specific contact information or visit the official VR SHINECON website.

Protection plans may be available for purchase separately to extend coverage beyond the standard warranty. Please check with your retailer for details.

