

[Manuals.plus](#) /

> [OLIGHT](#) /

> OLIGHT Perun 3 Mini & Oclip Pro Instruction Manual

OLIGHT Perun 3 Mini, Oclip Pro

OLIGHT Perun 3 Mini & Oclip Pro Instruction Manual

Model: Perun 3 Mini, Oclip Pro

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your OLIGHT Perun 3 Mini rechargeable headlamp and OLIGHT Oclip Pro EDC flashlight. Please read this manual thoroughly before operation and retain it for future reference.



Image: The OLIGHT Perun 3 Mini headlamp attached to its elastic headband, ready for use.

2. PACKAGE CONTENTS

- OLIGHT Perun 3 Mini Headlamp
- OLIGHT Oclip Pro EDC Flashlight
- Headband with quick-detach bracket
- Magnetic Charging Cable
- User Manual (this document)

3. SETUP

3.1. Perun 3 Mini Headlamp

1. **Attaching to Headband:** Insert the Perun 3 Mini into the quick-detach bracket on the headband. Ensure it clicks securely into place.
2. **Adjusting Headband:** Adjust the elastic straps for a comfortable and secure fit on your head.
3. **Handheld Use:** The quick-detach bracket allows for easy removal of the Perun 3 Mini for handheld operation. Press the release button on the bracket to detach.

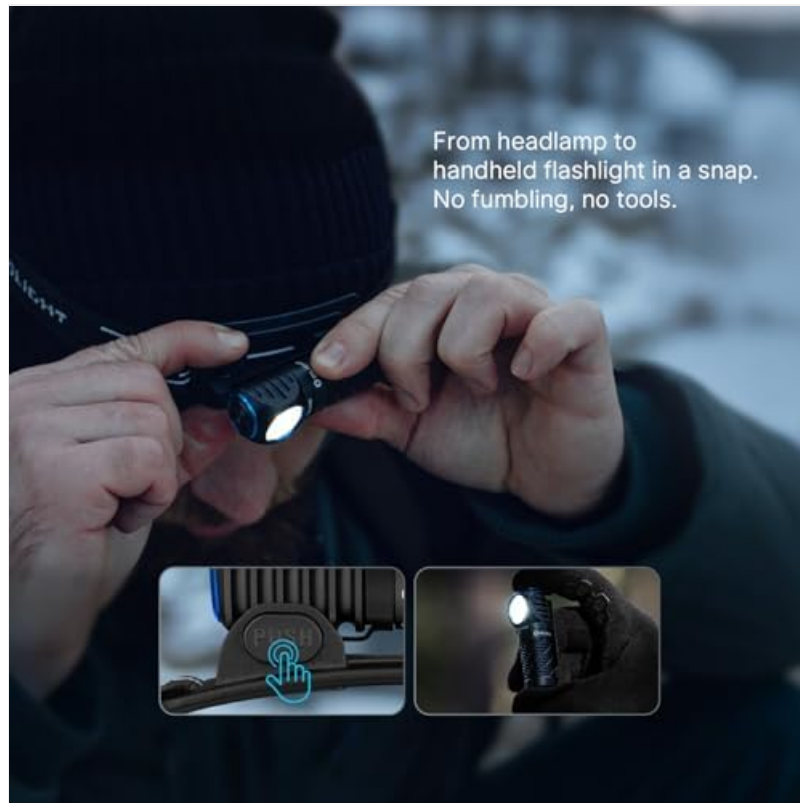


Image: Transitioning the Perun 3 Mini from headlamp to handheld flashlight by pressing the release button on the bracket.

3.2. Oclip Pro EDC Flashlight

1. **Unlocking:** Before first use, press and hold the main button for approximately 1 second to unlock the Oclip Pro. A visual indicator may confirm unlocking.
2. **Clipping:** Use the integrated clip to attach the Oclip Pro to clothing, gear, or other suitable surfaces.



Image: Instructions for unlocking the Oclip Pro by pressing and holding the button for 1 second.

4. OPERATING INSTRUCTIONS

4.1. Perun 3 Mini Headlamp

The Perun 3 Mini features multiple white light modes and red light modes for various applications.

- **White Light Modes:** Offers 5 different white light output levels, including a Moonlight mode for extended use.
- **Red Light Modes:** Provides 3 red light modes, suitable for preserving night vision or as an emergency signal.
- **Mode Switching:** Refer to the device's specific button press sequences for cycling through modes (e.g., single press, double press, press and hold).

White light for work and daily routines,
red light to preserve night vision



Image: The Perun 3 Mini in use, demonstrating both white light for general tasks and red light for night vision preservation.

4.2. Oclip Pro EDC Flashlight

The Oclip Pro offers three distinct lighting solutions controlled by a user-friendly interface.

- **Lighting Solutions:**
 - **Floodlight:** For wide area illumination (up to 500 lumens).
 - **Spotlight:** For focused, long-range illumination (up to 120-meter range).
 - **Red Light:** For night vision preservation or signaling (40/4 lumens).
- **User Interface:** Modes are switched by toggling the selector.
- **Battery Indicator:** A battery indicator located in the center of the switch displays the current battery level.

Pro Power in a Small Form

Floodlight for **daily routines**, spotlight for **focused tasks**, red light to preserve **night vision**.

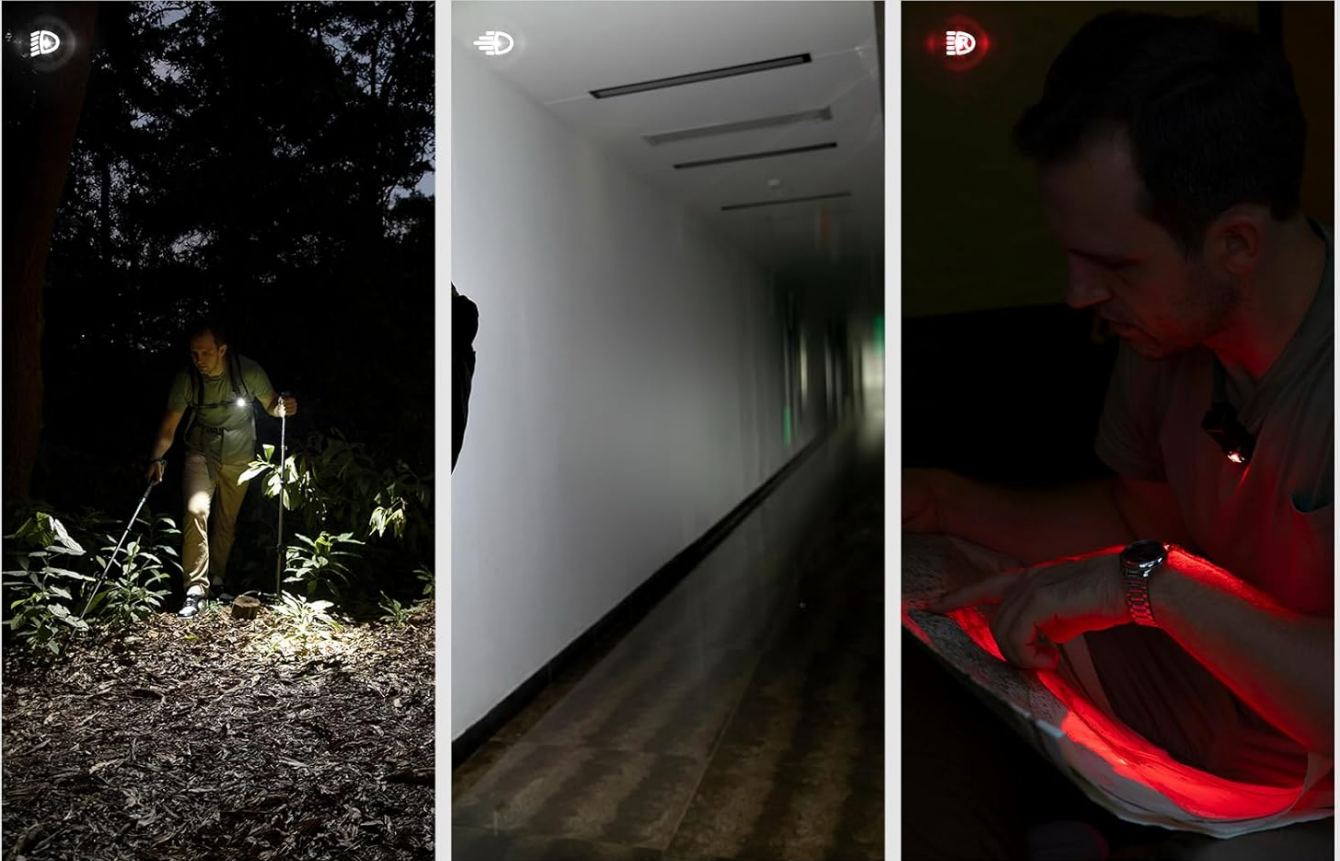


Image: Visual representation of the Oclip Pro's floodlight for daily routines, spotlight for focused tasks, and red light for night vision.

5. MAINTENANCE

5.1. Charging

Both the Perun 3 Mini and Oclip Pro are rechargeable. Use the provided magnetic charging cable to recharge the devices. Connect the magnetic charging end to the flashlight's charging port and the USB end to a compatible power source.

The Perun 3 Mini's rechargeable battery offers up to 10 days of continuous use in Moonlight mode, reducing the frequency of recharging.

5.2. Cleaning and Storage

- **Cleaning:** Wipe the devices with a soft, damp cloth to remove dirt or debris. Do not use abrasive cleaners or solvents.
- **Storage:** Store the flashlights in a cool, dry place away from direct sunlight and extreme temperatures. For long-

term storage, ensure the battery is partially charged (e.g., 50%) to prolong battery life.

6. TROUBLESHOOTING

- **Light not turning on:**
 - Check battery level and recharge if necessary.
 - Ensure the device is unlocked (refer to Setup section for Oclip Pro).
 - Verify proper connection if using the Perun 3 Mini with the headband bracket.
- **Dim light output:**
 - Battery may be low; recharge the device.
 - Lens may be dirty; clean according to maintenance instructions.
- **Device overheating:**
 - High output modes can generate heat. If the device becomes excessively hot, switch to a lower mode or turn it off to cool down.

7. SPECIFICATIONS

7.1. OLIGHT Perun 3 Mini Headlamp

- **Maximum Output:** Up to 920 lumens
- **Beam Distance:** Up to 133 meters
- **Light Modes:** 5 white light modes, 3 red light modes
- **Battery Life (Moonlight Mode):** Up to 10 days
- **Headband:** Lightweight with breathable holes, anti-sweat strip, reflective material. Quick-detach bracket.

Perun 3 Mini

COMPACT BRILLIANCE

Need a serious light without the bulk?
The Perun 3 Mini delivers up to 920 lumens in a light form factor that fits in the palm of your hand.



Image: Key specifications of the Perun 3 Mini, highlighting its compact size, lumen output, and beam distance.

7.2. OLIGHT Oclip Pro EDC Flashlight

- **Floodlight Output:** Up to 500 lumens
- **Spotlight Range:** Up to 120 meters
- **Red Light Output:** 40/4 lumens
- **Clip Durability:** 10,000-open-close-cycle tested
- **User Interface:** Toggle selector for mode switching, integrated battery indicator.



Image: Various views of the Oclip Pro, showcasing its design and compact form factor.



Why Oclip Pro?

Get the right light for the right task. Oclip Pro is an ultra-versatile light with **3 lighting options** and a **10,000-open-close-cycle tested** clip. From your work and everyday needs to critical situations, it boosts your productivity and safeguards your well-being when it matters most.

Image: The Oclip Pro emphasizing its versatile lighting options and the robust, tested clip mechanism.

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official OLIGHT website or contact OLIGHT customer service. OLIGHT products typically come with a manufacturer's warranty covering defects in materials and workmanship. For further assistance, technical support, or to view other OLIGHT products, please visit the official OLIGHT store: [OLIGHT Official Store](#)

