

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Oraimo](#) /
- › [Oraimo Watch 5R Pro Smartwatch OSW-830 User Manual](#)

Oraimo OSW-830

Oraimo Watch 5R Pro Smartwatch OSW-830 User Manual

Comprehensive instructions for setup, operation, and maintenance.

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SETUP

1.1 Unboxing and Initial Charge

Upon opening the package, ensure all components are present: the Oraimo Watch 5R Pro smartwatch, charging cable, and this user manual. Before first use, fully charge the device. Connect the magnetic charging cable to the charging contacts on the back of the watch and plug the USB end into a compatible power adapter (not included).



Image 1: Oraimo Watch 5R Pro Smartwatch. This image displays the smartwatch with its round black face and textured black strap. The watch face shows time, battery, steps, calories, and weather information.

1.2 App Installation and Device Pairing

To utilize all features of your Oraimo Watch 5R Pro, download the **Oraimo Health** application on your smartphone. The app is available on both Android and iOS app stores. Once installed, open the app and follow the on-screen instructions to create an account or log in.

1. Ensure your smartphone's Bluetooth is enabled.
2. Open the Oraimo Health app and navigate to the 'Add Device' section.
3. Select 'Oraimo Watch 5R Pro' from the list of available devices.
4. Confirm the pairing request on both your smartphone and the smartwatch.
5. Once paired, the watch will synchronize data with the app.

2. OPERATION

2.1 Display and Navigation

The Oraimo Watch 5R Pro features a 1.43-inch AMOLED display with 2.5D curved glass. Navigate the watch interface by swiping across the screen (up, down, left, right) and tapping to select options. The physical button on the side typically serves as a power button, back button, or to access the main menu.



Image 2: Close-up of the Oraimo Watch 5R Pro's 1.43" AMOLED screen. The image highlights the vibrant colors and crisp display of the watch face, showing various metrics like battery, steps, and date.

2.2 Bluetooth Calling

The smartwatch supports wireless Bluetooth calling. Once paired with your smartphone, you can answer, reject, or make calls directly from your watch. Ensure your watch is within Bluetooth range of your phone for this feature to function correctly.

2.3 Sports Modes

The device offers over 100 sports modes to track various physical activities. Access these modes through the watch's menu. Select your desired activity to begin tracking metrics such as duration, calories burned, and heart rate.

2.4 Health Monitoring

The Oramo Watch 5R Pro includes sensors for continuous health monitoring:

- **Heart Rate Monitor:** Tracks your heart rate throughout the day and during workouts.
- **SpO2 Monitor:** Measures your blood oxygen saturation levels.

These features provide insights into your physical condition. For accurate readings, ensure the watch is worn snugly on your wrist.



Image 3: Rear view of the Oramo Watch 5R Pro, showing the green light of the heart rate and SpO2 sensors. This image illustrates the technology used for continuous health tracking, including blood oxygen and heart rate monitoring.

2.5 Notifications

Receive notifications from your smartphone directly on your watch. Configure which app notifications you wish to receive through the Oramo Health app settings.

2.6 Watch Faces

Customize the appearance of your watch with various watch faces. Some watch faces are pre-installed, while others can be downloaded and applied via the Oramo Health app. Note that the extent of customization may vary.

3. MAINTENANCE

3.1 Cleaning

Regularly clean your smartwatch and strap to prevent skin irritation and maintain functionality. Use a soft, lint-free cloth. If necessary, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

3.2 Water Resistance

The Oramo Watch 5R Pro is rated IP68 for water and dust resistance. This means it can withstand immersion in water up to 1.5 meters for up to 30 minutes. It is suitable for daily use and light water activities like hand washing or rain exposure. Avoid hot water, steam, or prolonged immersion in water.

3.3 Battery Life

The watch is designed to provide up to 11 days of battery life under typical usage conditions. Actual battery performance may vary based on usage patterns, enabled features (e.g., continuous heart rate monitoring, Bluetooth calling), and environmental factors.

4. TROUBLESHOOTING

- **Watch not turning on:** Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes.
- **Cannot pair with smartphone:**
 - Ensure Bluetooth is enabled on your phone and the watch.
 - Make sure the watch is within range of your phone.
 - Restart both your phone and the watch.
 - Try unpairing and re-pairing the device through the Oramo Health app.
- **Notifications not appearing:**
 - Check notification settings in the Oramo Health app.
 - Ensure your phone's notification permissions are granted to the Oramo Health app.
 - Verify that the watch is connected via Bluetooth.
- **Inaccurate health data:** Ensure the watch is worn snugly on your wrist, not too tight or too loose. Clean the sensors regularly.
- **Short battery life:** Reduce the frequency of continuous health monitoring, screen brightness, and vibration intensity. Limit the use of Bluetooth calling.

5. SPECIFICATIONS

Feature	Detail
Model Number	OSW-830
Display	1.43 Inches AMOLED, Round, 2.5D
Connectivity	Bluetooth
Battery Capacity	300 Milliamp Hours
Operating System	Proprietary OS

Feature	Detail
Water Resistance	IP68
Special Features	Notifications, Bluetooth Calling, 100+ Sports Modes, SpO2 & Heart Rate Monitor
Compatible Devices	Smartphone
GPS	No GPS
Package Dimensions	13.2 x 11 x 5.7 cm
Item Weight	220 g

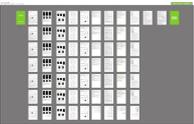
6. WARRANTY & SUPPORT

Oraimo products are designed with quality and reliability in mind. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Oraimo website. For technical support, troubleshooting assistance, or service inquiries, please contact Oraimo customer support through their official channels.

You can often find support contact details on the Oraimo website or within the Oraimo Health application.

© 2025 Oraimo. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - OSW-830

	<p>Oraimo Watch 5R Pro OSW-830 User Manual and Specifications</p> <p>Comprehensive guide for the oraimo Watch 5R Pro (OSW-830), covering setup, features, troubleshooting, technical specifications, and warranty information. Learn how to pair, use BT calling, and care for your smartwatch.</p>
	<p>Oraimo OSW-801 Smartwatch: Welcome Guide, Features, and Specifications</p> <p>Get started with your Oraimo OSW-801 smartwatch. This guide covers setup, Bluetooth pairing, app connection, key features like BT calls, fitness tracking, and detailed product specifications.</p>
	<p>Oraimo Tempo W2 Smart Watch OSW-20 User Manual and Guide</p> <p>A comprehensive guide to setting up, using, and troubleshooting the Oraimo Tempo W2 Smart Watch (Model OSW-20). Learn about its features, connectivity, charging, and maintenance.</p>
	<p>Oraimo Watch 5N OSW-806N Welcome Guide and Specifications</p> <p>A comprehensive guide to setting up, using, and troubleshooting the Oraimo Watch 5N (OSW-806N) smart accessory, including product specifications and warranty information.</p>
	<p>Oraimo OSW-803N Smartwatch User Manual and Specifications</p> <p>Comprehensive user guide for the Oraimo OSW-803N smartwatch, detailing setup, features, app integration, troubleshooting, technical specifications, and warranty information.</p>



[Oraimo OSW-805 Smartwatch Welcome Guide | Setup & User Information](#)

Get started with your Oraimo OSW-805 smartwatch. This welcome guide from ORAIMO TECHNOLOGY LIMITED provides essential setup and usage information for this consumer electronic device.