

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOIPSSE](#) /

› [KOIPSSE AI Smart Camera Glasses V03 User Manual](#)

KOIPSSE V03

KOIPSSE AI Smart Camera Glasses V03 User Manual

Model: V03

1. INTRODUCTION

Thank you for choosing the KOIPSSE AI Smart Camera Glasses V03. This manual provides essential information for setting up, operating, and maintaining your smart glasses. Please read it thoroughly before use to ensure optimal performance and safety.

Package Contents:

- KOIPSSE AI Smart Camera Glasses V03
- Magnetic Charging Cable
- Glasses Cleaning Cloth
- Instruction Manual (multi-language)

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or moisture.
- Avoid dropping or subjecting the glasses to strong impacts.
- Use only the provided magnetic charging cable.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep out of reach of children.
- Be aware of your surroundings when using the glasses, especially during activities like cycling or hiking.

3. PRODUCT OVERVIEW

The KOIPSSE AI Smart Camera Glasses V03 integrate advanced technology into a stylish eyewear design, offering hands-free video recording, photo capture, real-time translation, and an AI voice assistant.



Figure 3.1: Front view of the KOIPSSE AI Smart Camera Glasses V03, showing the integrated camera lens and sleek design.

Components:

- **Camera Lens:** Located on the front frame for video and photo capture.
- **Control Button(s):** For power, recording, and AI assistant activation (specific locations may vary, refer to quick start guide).
- **Microphone:** For voice commands and audio recording.
- **Speakers:** Integrated for audio playback and calls.
- **Charging Port:** Magnetic connection for power input.

4. SETUP

4.1 Charging the Glasses

1. Connect the magnetic charging cable to the charging port on the glasses.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The indicator light will show charging status (e.g., red for charging, green for fully charged).
4. A full charge typically takes approximately 1-2 hours.

4.2 Powering On/Off

- **To Power On:** Press and hold the main control button for approximately 3 seconds until the indicator light illuminates.
- **To Power Off:** Press and hold the main control button for approximately 5 seconds until the indicator light turns off.

4.3 Initial Pairing (Bluetooth/Wi-Fi)

To unlock full functionality, pair your glasses with your smartphone via Bluetooth and connect to Wi-Fi.

1. Ensure your glasses are powered on and fully charged.
2. Download the dedicated KOIPSSE app from your smartphone's app store.
3. Open the app and follow the on-screen instructions to enable Bluetooth pairing.
4. On your smartphone, navigate to Bluetooth settings and select "KOIPSSE V03" from the list of available devices.
5. Once paired, use the app to connect the glasses to your local Wi-Fi network for features requiring internet access (e.g., real-time translation, AI assistant updates).

5. OPERATING INSTRUCTIONS

5.1 Video Recording (1080P HD)

Capture hands-free 1080P HD video of your surroundings.



Figure 5.1: The integrated camera lens on the smart glasses, capable of 1080P HD video recording.

- **To Start Recording:** Briefly press the designated video recording button (refer to quick start guide for exact button). The indicator light will change to confirm recording has started.

- **To Stop Recording:** Briefly press the same video recording button again. The indicator light will revert to standby mode.
- Videos are saved to the internal 4GB memory.

5.2 Photo Taking

Capture still images with a simple press.

- **To Take a Photo:** Briefly press the designated photo capture button (this may be the same as the video button with a different press pattern, or a separate button). The indicator light will flash once.
- Photos are saved to the internal 4GB memory.

5.3 AI Voice Assistant

Access your personal AI assistant with voice commands.



Figure 5.2: A user activating the AI voice assistant with a touch, demonstrating hands-free interaction.

- **To Activate:** Tap the side of the glasses or use a specific voice command (e.g., "Hey Assistant").
- Once activated, you can issue commands such as:
 - "Record video"
 - "Take a picture"

- "Translate [phrase] to [language]"
- "What's the weather?"
- "Call [contact name]"

5.4 Real-Time Translation

Break down language barriers with instant voice translation.

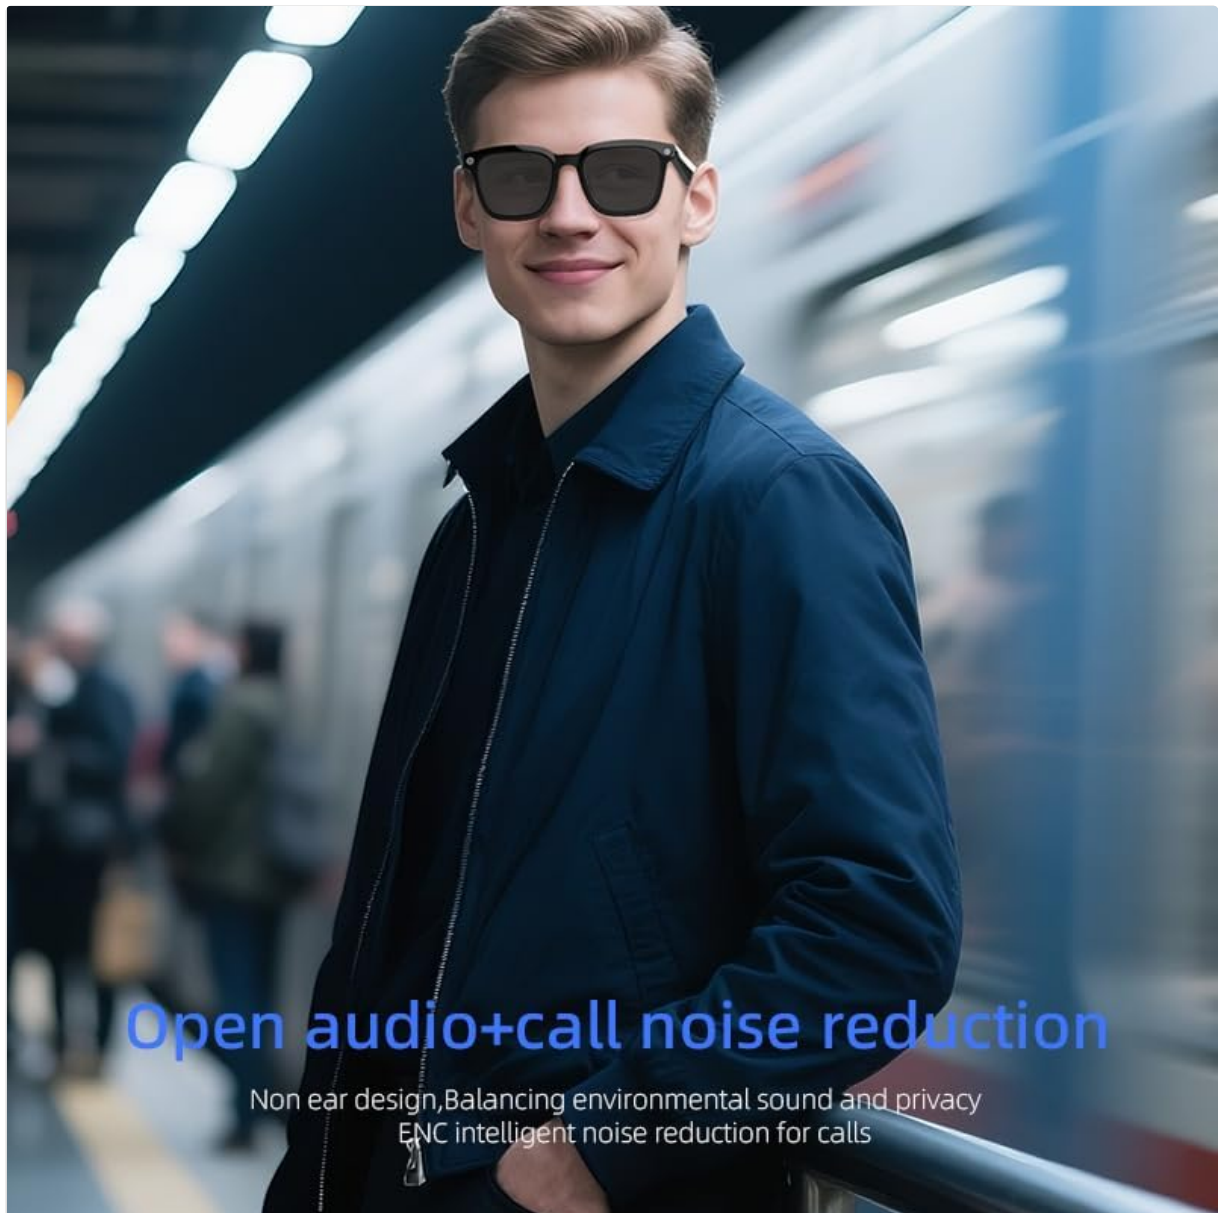


Figure 5.3: The smart glasses facilitating real-time translation during a conversation, enhancing communication.

- Ensure the glasses are connected to Wi-Fi and paired with the app.
- Activate the translation feature via the AI assistant or the dedicated app.
- Speak clearly into the microphone. The translated audio will be played through the integrated speakers.
- The app may provide a visual display of the translation.

5.5 Audio Playback and Calls

Enjoy music or take calls with open-ear audio.



Figure 5.4: A user wearing the smart glasses, benefiting from open audio and call noise reduction in an urban environment.

- Once paired with your smartphone, audio from your device will automatically play through the glasses' speakers.
- For calls, answer/end calls via the control button or your smartphone. The glasses feature call noise reduction for clearer conversations.

5.6 Data Transfer

Transfer your recorded videos and photos to your smartphone or computer.

- **Via App:** Connect the glasses to your smartphone via Bluetooth and open the KOIPSSE app. Follow the app's instructions to browse and download files from the glasses' internal memory.
- **Via Computer:** Connect the glasses to your computer using the magnetic charging cable. The glasses should appear as a removable storage device. You can then drag and drop files.

6. MAINTENANCE

6.1 Cleaning

- Use the provided glasses cleaning cloth to gently wipe the lenses and frame.

- For stubborn smudges, slightly dampen the cloth with water or a lens cleaning solution.
- Do not use abrasive cleaners or solvents.

6.2 Storage

- Store the glasses in their protective case when not in use.
- Keep them in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Glasses not powering on	Low battery; device malfunction	Charge the glasses fully. If problem persists, contact support.
Cannot connect to smartphone (Bluetooth/Wi-Fi)	Bluetooth/Wi-Fi off; incorrect pairing; app issue	Ensure Bluetooth/Wi-Fi is enabled on both devices. Restart glasses and phone. Re-pair through the app. Check app for updates.
Poor video/photo quality in low light	Environmental limitation	The camera performs best in well-lit conditions. Ensure adequate lighting for optimal results.
Cannot transfer photos/videos	Connection issue; app malfunction; full memory	Ensure stable connection via app or USB. Restart app/computer. Check internal memory capacity. Try transferring a few files at a time.
AI Assistant or Translation not working	No internet connection; microphone blocked; app issue	Ensure Wi-Fi connection is active. Check for app updates. Speak clearly and ensure microphone is not obstructed.

8. SPECIFICATIONS

Feature	Detail
Model Number	V03
Video Resolution	1080P HD
Memory Storage Capacity	4 GB
Battery Type	1 Nonstandard Battery (Lithium Polymer)
Battery Capacity	220 Milliamp Hours
Connectivity Technology	Bluetooth, Wi-Fi
Operating System	Ubuntu Touch
Special Features	Audio Recording, Camera, Music Player, Video Recording, Voice Control, Real-time Translation
Item Weight	8.8 ounces
Manufacturer	Shenzhen Chuangshengda Electronics Co., Ltd.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your KOIPSSE AI Smart Camera Glasses V03, please refer to the warranty card included in your package or contact the manufacturer directly through their official website or customer service channels.

© 2025 KOIPSSE. All rights reserved.