

Monster E68

Monster Open Ear AC360 Wireless Bluetooth Rotary Earphone User Manual

Model: E68

1. INTRODUCTION

This manual provides detailed instructions for the Monster Open Ear AC360 Wireless Bluetooth Rotary Earphones, Model E68. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- Monster Open Ear AC360 Earphones (Left and Right)
- Wireless Charging Case
- USB Charging Cable
- Lanyard
- User Manual (This document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Monster Open Ear AC360 earphones and charging case.



Image: The Monster Open Ear AC360 earphones shown with their wireless charging case. The earphones feature an open-ear design with ear hooks, and the case is compact and black.

3.1 Earphone Components

- **Ear Hook:** Provides a secure and comfortable fit over the ear.
- **Speaker Unit:** Delivers audio without entering the ear canal.
- **Touch Control Area:** For managing playback, calls, and voice assistant.
- **Microphone:** For hands-free calls.

3.2 Charging Case Components

- **Charging Ports:** Internal contacts for earphones.
- **USB-C Port:** For charging the case.
- **LED Indicators:** Show charging status and battery level.
- **Magnetic Rotating Cover:** Unique design for securing earphones.



Image: A close-up view of the Monster Open Ear AC360 earphone and its charging case, highlighting the unique rotating magnetic cover design of the case.

4. SETUP

4.1 Charging the Earphones and Case

1. **Initial Charge:** Before first use, fully charge the earphones and charging case. Place the earphones into the charging case.
2. **Charging the Case:** Connect the provided USB charging cable to the USB-C port on the charging case and to a power source (e.g., computer USB port, wall adapter). The LED indicators on the case will show the charging status.
3. **Charging the Earphones:** When placed in the charged case, the earphones will automatically begin charging. The case provides up to 24 hours of total battery life, with earphones offering up to 8 hours on a single charge. A 10-minute charge can provide approximately 1 hour of playtime.

24 Hours of Listening Time

10-min charge, 1-hour playtime

8 Hr

Single Charge

24 Hr

Total Battery Life



Image: An illustration showing the Monster Open Ear AC360 earphones and charging case, detailing the battery life: 8 hours on a single charge and 24 hours total with the charging case.

4.2 Bluetooth Pairing

1. **Power On:** Open the charging case. The earphones will automatically power on and enter pairing mode. The indicator lights on the earphones will flash, indicating they are ready to pair.
2. **Activate Bluetooth:** On your device (smartphone, tablet, etc.), enable Bluetooth.
3. **Select Device:** In your device's Bluetooth settings, look for "Monster Open Ear AC360" in the list of available devices and select it to connect.

4. **Confirmation:** Once connected, the earphone indicator lights will stop flashing, and you may hear an audible confirmation.
5. **Reconnect:** After initial pairing, the earphones will automatically connect to the last paired device when removed from the case and within range.



Image: The Monster Open Ear AC360 earphones and charging case next to a laptop and smartphone, illustrating the Bluetooth 6.0 pairing process on a phone screen.

5. OPERATING INSTRUCTIONS

5.1 Wearing the Earphones

The Monster Open Ear AC360 earphones are designed for comfort and stability with an open-ear fit.

1. Identify the Left (L) and Right (R) earphones.
2. Gently place the earphone over your ear, ensuring the ear hook rests securely behind your ear and the speaker unit is positioned near your ear canal without entering it.
3. Adjust for a comfortable and stable fit. The open-ear design allows you to remain aware of your surroundings.

Ergonomic Design



Light Weight



Flexible Earhook



Stable Fit



Protect Hearing



Image: A woman wearing the Monster Open Ear AC360 earphone, demonstrating its ergonomic, lightweight, flexible earhook, and stable fit design.

5.2 Touch Controls

The earphones feature touch-sensitive controls on the outer surface of each earphone. Specific functions may vary slightly depending on your device and application.

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Left)	Previous Track
Double Tap (Right)	Next Track
Triple Tap (Left/Right)	Activate Voice Assistant
Long Press (Left/Right)	Reject Call

6. MAINTENANCE

6.1 Cleaning

- Regularly clean the earphones and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Ensure charging contacts on both earphones and case are clean and free of debris to maintain proper charging.

6.2 Water Resistance (IPX5)

The Monster Open Ear AC360 earphones are rated IPX5 water-resistant, meaning they can withstand splashes of water and sweat. They are suitable for workouts and light rain exposure.

- Do not submerge the earphones in water.
- Do not expose them to running water (e.g., shower, faucet).
- Ensure earphones are dry before placing them back into the charging case to prevent damage.



Image: A person exercising while wearing the Monster Open Ear AC360 earphone, with a visual representation of water splashing, indicating its IPX5 waterproof rating.

6.3 Storage

When not in use, store the earphones in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Monster Open Ear AC360 earphones, refer to the following common problems and solutions:

- **Earphones not pairing:**
 - Ensure earphones are fully charged.
 - Turn off Bluetooth on your device and turn it back on.
 - Forget "Monster Open Ear AC360" from your device's Bluetooth list and attempt to pair again.
 - Place earphones back in the case, close the lid, wait a few seconds, then open to re-enter pairing mode.
- **No sound or low volume:**
 - Check the volume level on both your device and the earphones.
 - Ensure earphones are properly connected to your device.
 - Clean any debris from the speaker units.
- **Charging issues:**
 - Ensure the charging cable is securely connected to both the case and the power source.
 - Verify that the charging contacts on the earphones and inside the case are clean and free of obstruction.
 - Try a different USB charging cable or power adapter.
- **Earphones disconnect frequently:**
 - Ensure you are within the effective Bluetooth range of your device (typically 10 meters/33 feet).
 - Avoid strong electromagnetic interference.
 - Reset the earphones (refer to manufacturer's website for specific reset instructions if needed).

8. SPECIFICATIONS

Feature	Detail
Model Name	E68
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	6.0
Earpiece Shape	Open-Ear
Control Method	Touch
Water Resistance Level	IPX5
Single Earphone Playtime	Up to 8 hours
Total Battery Life (with case)	Up to 24 hours
Charging Time (10 min charge)	Approx. 1 hour playtime

Feature	Detail
Audio Driver Type	Dynamic Driver
Compatible Devices	Smartphones, TVs, and other Bluetooth-enabled devices
Item Weight	5.9 ounces (0.17 Kilograms)
Included Components	Wireless Charging Case

9. WARRANTY AND SUPPORT







9.1 Warranty Information

For detailed warranty information, please refer to the product packaging or visit the official Monster website. Keep your proof of purchase for warranty claims.

9.2 Customer Support

If you require further assistance or have questions not covered in this manual, please visit the [Monster official website](#) or contact their customer support directly. Contact information can typically be found on the product packaging or the official website.

Related Documents - E68

	Monster Open Ear AC360 Bluetooth Headphones Quick Start Guide A quick start guide for the Monster Open Ear AC360 Bluetooth Headphones, detailing product overview, charging, pairing, wearing, operations, LED indicators, and safety precautions.
	Monster Open Ear AC225 Bluetooth Headphones Quick Start Guide A concise guide to setting up and using your Monster Open Ear AC225 Bluetooth Headphones, covering charging, pairing, wearing, and basic operations.
	Monster Aria Free Quick Start Guide - Wireless Open Ear Headphones Get started quickly with the Monster Aria Free open-ear wireless headphones. This guide covers charging, pairing, controls, and wearing instructions for model MH22134.
	Monster MH22241 Bluetooth Headphones Quick Start Guide Quick start guide for Monster MH22241 Bluetooth Headphones, covering setup, pairing, operation, and indicator lights. Learn how to use your Monster Open Ear AC390 earbuds.
	Monster Open Ear AC210 Bluetooth Headphones Quick Start Guide User guide for Monster Open Ear AC210 Bluetooth headphones, covering setup, pairing, controls, and troubleshooting. Features include touch controls, voice assistant, and single-earphone mode.
	Monster Open Ear AC600 Bluetooth Headphones Quick Start Guide A concise guide to setting up and using your Monster Open Ear AC600 Bluetooth headphones, including pairing, controls, and charging.

Contents

Introduction.....1

Acknowledgements.....4

WHO Collaborating Centres for Classification of Diseases.....5

Report of the International Conference for the Tenth
Revision of the International Classification of Diseases.....7

List of three-character categories.....26

Tabular list of inclusions and four-character subcategories.....1-1

I Certain infectious and parasitic diseases.....1-1

II Neoplasms.....1-1

III Diseases of the blood and blood-forming organs and
certain disorders involving the immune mechanism.....III-1

IV Endocrine, nutritional and metabolic diseases.....IV-1

V Mental and behavioural disorders.....V-1

VI Diseases of the nervous system.....VI-1

VII Diseases of the eye and adnexa.....VII-1

VIII Diseases of the ear and nasal process.....VIII-1

IX Diseases of the circulatory system.....IX-1

X Diseases of the respiratory system.....X-1

XI Diseases of the digestive system.....XI-1

XII Diseases of the skin and subcutaneous tissue.....XII-1

XIII Diseases of the musculoskeletal system and
connective tissue.....XIII-1

XIV Diseases of the genitourinary system.....XIV-1

XV Pregnancy, childbirth and the puerperium.....XV-1

XVI Certain conditions originating in the perinatal period.....XVI-1

XVII Congenital malformations, deformations and
chromosomal abnormalities.....XVII-1

XVIII Symptoms, signs and abnormal clinical and laboratory
findings not elsewhere classified.....XVIII-1

XIX Injury, poisoning and certain other consequences
of external causes.....XIX-1

XX External causes of morbidity and mortality.....XX-1

Contents

Introduction.....1

Acknowledgements.....4

WHO Collaborating Centres for Classification of Diseases.....5

Report of the International Conference for the Tenth
Revision of the International Classification of Diseases.....7

List of three-character categories.....25

Tabular list of inclusions and four-character subcategories.....1-1

I Certain infectious and parasitic diseases.....1-1

II Neoplasms.....1-1

III Diseases of the blood and blood-forming organs and
certain disorders involving the immune mechanism.....III-1

IV Endocrine, nutritional and metabolic diseases.....IV-1

V Mental and behavioural disorders.....V-1

VI Diseases of the nervous system.....VI-1

VII Diseases of the eye and adnexa.....VII-1

VIII Diseases of the ear and nasal process.....VIII-1

IX Diseases of the circulatory system.....IX-1

X Diseases of the respiratory system.....X-1

XI Diseases of the digestive system.....XI-1

XII Diseases of the skin and subcutaneous tissue.....XII-1

XIII Diseases of the musculoskeletal system and
connective tissue.....XIII-1

XIV Diseases of the genitourinary system.....XIV-1

XV Pregnancy, childbirth and the puerperium.....XV-1

XVI Certain conditions originating in the perinatal period.....XVI-1

XVII Congenital malformations, deformations and
chromosomal abnormalities.....XVII-1

XVIII Symptoms, signs and abnormal clinical and laboratory
findings not elsewhere classified.....XVIII-1

XIX Injury, poisoning and certain other consequences
of external causes.....XIX-1

XX External causes of morbidity and mortality.....XX-1

Contents

Introduction.....1

Acknowledgements.....4

WHO Collaborating Centres for Classification of Diseases.....5

Report of the International Conference for the Tenth
Revision of the International Classification of Diseases.....7

List of three-character categories.....26

Tabular list of inclusions and four-character subcategories.....1-1

I Certain infectious and parasitic diseases.....1-1

II Neoplasms.....1-1

III Diseases of the blood and blood-forming organs and
certain disorders involving the immune mechanism.....III-1

IV Endocrine, nutritional and metabolic diseases.....IV-1

V Mental and behavioural disorders.....V-1

VI Diseases of the nervous system.....VI-1

VII Diseases of the eye and adnexa.....VII-1

VIII Diseases of the ear and nasal process.....VIII-1

IX Diseases of the circulatory system.....IX-1

X Diseases of the respiratory system.....X-1

XI Diseases of the digestive system.....XI-1

XII Diseases of the skin and subcutaneous tissue.....XII-1

XIII Diseases of the musculoskeletal system and
connective tissue.....XIII-1

XIV Diseases of the genitourinary system.....XIV-1

XV Pregnancy, childbirth and the puerperium.....XV-1

XVI Certain conditions originating in the perinatal period.....XVI-1

XVII Congenital malformations, deformations and
chromosomal abnormalities.....XVII-1

XVIII Symptoms, signs and abnormal clinical and laboratory
findings not elsewhere classified.....XVIII-1

XIX Injury, poisoning and certain other consequences
of external causes.....XIX-1

XX External causes of morbidity and mortality.....XX-1

[pdf] User Manual

Instruction manual part 2e volume tabular index 2011 National Center for Health Statistics volume1 cdc gov nchs data dvs |||

Contents Introduction equelae of malnutrition and other nutritional deficiencies Obesity and other hyperalimentation E65-**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68** Sequelae of hyperalimentati...

lang:en score:24 filesize: 2.27 M page_count: 1280 document date: 2010-12-27

[pdf] User Manual Instructions

Instruction manual part 2e Volume 1 ICD 10 International Statistical Classification of Diseases and Related Health Problems Tabular List National Center for Statistics Manual This brings together the notes on certification classification 2 REQUESTS Director General to issue classification formerly included in with a good deal new background instructional matter guidance use tabulations planning which was seen as lacking earlier revisions presents index itself an introduction expanded instructions its 2005 cdc gov nchs data dvs volume

Contents Introduction..... equelae of malnutrition and other nutritional deficiencies Obesity and other hyperalimentation E65-**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68** Sequelae of hyperalimentati...

lang:en score:24 filesize: 2.48 M page_count: 1268 document date: 2013-11-29

[pdf] User Manual

Instruction manual part 2e 2010 Tabular list National Center for Health Statistics 2E Volume1 2010acc cdc gov nchs data dvs |||

Contents Introduction..... equelae of malnutrition and other nutritional deficiencies Obesity and other hyperalimentation E65-**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68** Sequelae of hyperalimentati...

lang:en score:23 filesize: 3.96 M page_count: 1279 document date: 2010-01-08



[\[pdf\]](#) User Manual

Instruction manual 2e Alphabetical index National Center for Health Statistics 2E Volume3 2010acc cdc gov nchs data dvs |||

SECTION I Alphabetical index to diseases and nature of injury ALPHABETICAL INDEX TO DISEASES AND ... cranial, nontraumatic NEC I69.2 - - subarachnoid I69.0 - hepatitis, viral B94.2 - hyperalimentation **E68** - infarction, cerebral I69.3 - - bilateral multiple I69.30 - - multiple bilateral I69.30 - i...

lang:en score:23 filesize: 6.37 M page_count: 1131 document date: 2010-01-08




[\[pdf\]](#) User Manual

ICD 10 Mortality 2e Volume1 2016 mortality instruction manual National Center for Health Statistics ICD-10Mortality 2eVolume1 classification is given in Part 2a Instruction Manual NCHS While the title has been amended to make clearer content and purpose reflect progressive extension of scope beyond diseases injuries familiar abbreviation retained In volume1 cdc gov nchs data dvs

ICD10Mortality 2eVolume1 2016 INTRODUCTION A classification of diseases may be defined as a syste ... Sequelae of malnutrition and other nutritional deficiencies Obesity and other hyperalimentation E65**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68** Sequelae of hyperalimentati...

lang:en score:23 filesize: 5.08 M page_count: 1361 document date: 2016-03-10

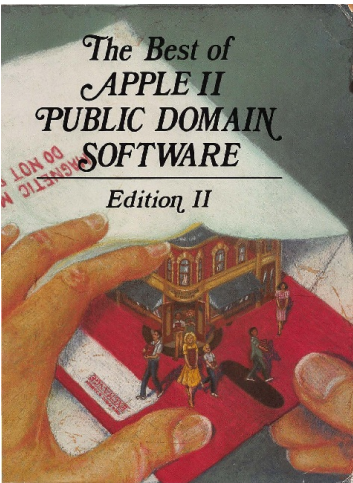

[\[pdf\]](#) User Manual Guide

The Best Apple II Public Domain Software Edition 1987 Words that are DOS commands have been capitalized For further information consult the User s Manual or Guide All of our disks vintageapple org apple ii

Cfhe Best of cAPPLEII PUBLIC DOMAI . SOFTWARE Editioq II The Best Of Apple Public Domain Sof ... ALKENBURG CASTLE E64 MODERN PROBLEMS E65 THE SC HOOL OF DEATH E66 XENON DUNGEONS E67 CHAOSIUM CAVES **E68** THE SMITH S STRONGHOLD E69 BLACK CASTLE OF NAGOG E70 HOUSE ON EAMON RIDGE Eamon 83 Adventure...

lang:en score:23 filesize: 53.87 M page_count: 341 document date: 2018-05-20

Contents	
Introduction.....	1
Acknowledgments.....	4
WHO Collaborating Centres for Classification of Diseases.....	5
Report of the International Conference for the Tenth Revision of the International Classification of Diseases.....	7
List of three-character categories.....	26
Tabular list of inclusions and four-character subcategories	
I Certain infectious and parasitic diseases.....	I-1
II Neoplasms.....	II-1
III Diseases of the blood and blood-forming organs and certain disorders involving the immune mechanism.....	III-1
IV Endocrine, nutritional and metabolic diseases.....	IV-1
V Mental and behavioural disorders.....	V-1
VI Diseases of the nervous system.....	VI-1
VII Diseases of the eye and adnexa.....	VII-1
VIII Diseases of the ear and hearing process.....	VIII-1
IX Diseases of the circulatory system.....	IX-1
X Diseases of the respiratory system.....	X-1
XI Diseases of the digestive system.....	XI-1
XII Diseases of the skin and subcutaneous tissue.....	XII-1
XIII Diseases of the musculoskeletal system and connective tissue.....	XIII-1
XIV Diseases of the genitourinary system.....	XIV-1
XV Pregnancy, childbirth and the puerperium.....	XV-1
XVI Certain conditions originating in the perinatal period.....	XVI-1
XVII Congenital malformations, deformations and chromosomal abnormalities.....	XVII-1
XVIII Symptoms, signs and abnormal clinical and laboratory findings not elsewhere classified.....	XVIII-1
XIX Injury, poisoning and certain other consequences of external causes.....	XIX-1
XX External causes of morbidity and mortality.....	XX-1

[pdf] User Manual

Instruction manual part 2e Tabular list for 2009 Volume 1 National Center Health Statistics Part Volume1

cdc gov nchs data dvs |||

Contents Introduction..... ... sequelae of

malnutrition and other nutritional deficiencies Obesity and other hyperalimentation

E65-**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68**

Sequelae of hyperalimentati...

lang:en score:23 filesize: 2.53 M page_count: 1277 document date: 2009-02-10

SECTION I	
Alphabetical index to diseases and nature of injury	

[pdf] User Manual

Instruction manual part 2e ICD 10 alphabetical index National Center for Health Statistics 2008Vol3 cdc

gov nchs data dvs |||

SECTION I Alphabetical index to diseases and nature of injury ALPHABETICAL

INDEX TO DISEASES AND ... cranial, nontraumatic NEC I69.2 - - subarachnoid I69.0

- hepatitis, viral B94.2 - hyperalimentation **E68** - infarction, cerebral I69.3 - - multiple

I69.30 - infection, pyogenic, intracranial or intraspi...

lang:en score:23 filesize: 2.88 M page_count: 1115 document date: 2007-12-18

ICD-10 2e Volume 1 - 2015	
INTRODUCTION	
A classification of diseases may be defined as a system of categories to which morbid entities are assigned according to established criteria. There are many possible axes of classification and the one selected will depend upon the use to be made of the statistics to be compiled. A statistical classification of diseases must encompass the entire range of morbid conditions within a manageable number of categories.	
The Tenth Revision of the International Statistical Classification of Diseases and Related Health Problems is the latest in a series that was formulated in 1893 as the Bern Classification or International List of Causes of Death. A complete review of the historical background to the classification is given in Part 2a Instruction Manual (NCHS). While the title has been amended to make clearer the content and purpose and to reflect the progressive extension of the scope of the classification beyond diseases and injuries, the familiar abbreviation "ICD" has been retained. In the updated classification, conditions have been grouped in a way that was felt to be most suitable for general epidemiological purposes and the evaluation of health care.	
Work on the Tenth Revision of the ICD started in September 1983 when a Preparatory Meeting on ICD-10 was convened in Geneva. The programme of work was guided by regular meetings of Heads of WHO Collaborating Centres for Classification of Diseases. Policy guidance was provided by a number of special meetings including those of the Expert Committee on the International Classification of Diseases - Tenth Revision, held in 1986 and 1987.	
In addition to the technical contributions provided by many specialist groups and individual experts, a large number of comments and suggestions were received from WHO Member States and Regional Offices as a result of the global circulation of draft proposals for revision in 1984 and 1986. From the comments received, it was clear that many users wished the ICD to encompass types of data other than the "diagnostic information" (in the broadest sense of the term) that it has always covered. In order to accommodate the perceived needs of these users, the concept arose of a "family" of classifications centred on the traditional ICD with its familiar form and structure. The ICD itself would thus meet the requirement for diagnostic information for general purposes, while a variety of other classifications would be used in conjunction with it and would deal either with different approaches to the same information or with different information (notably medical and surgical procedures and disability).	
Following suggestions at the time of development of the Tenth Revision of the classification that a different basic structure might better serve the needs of the many and varied users, several alternative models were evaluated. It became clear, however, that the traditional single-variable axis design of the classification, and other aspects of its structure that gave emphasis to conditions that were frequent, costly or otherwise of public health importance, had withstood the test of time and that many users would be unhappy with any of the models that had been proposed as a possible replacement.	
Consequently, as study of the Tenth Revision will show, the traditional ICD structure has been retained but an alphanumeric coding scheme replaces the previous numeric one. This provides a	
1	

[pdf] User Manual

ICD 10 2e Volume1 2015 Instruction manuals Part2e National Center for Health Statistics philips slc7 la

volume1 cdc gov nchs data dvs |||

ICS-10 2e-Volume1 - 2015 INTRODUCTION A classification of diseases may be

defined as a system of cat ... sequelae of malnutrition and other nutritional deficiencies

Obesity and other hyperalimentation E65-**E68** E65 Localized adiposity E66 Obesity

E67 Other hyperalimentation **E68** Sequelae of hyperalimentat...

lang:en score:23 filesize: 4.93 M page_count: 1359 document date: 2014-12-22

[\[pdf\]](#)

Instruction manuals ICD 10 Mortality 2e Volume3 2015 mortality National Center for Health Statistics
volume3 cdc gov nchs data dvs |||

Persons with disabilities experiencing problems accessing this page should contact NCHSED through e- ... traumatic NEC I69.2 2a 2b - - subarachnoid I69.0 - hepatitis, viral B94.2 2a 2b - hyperalimentation **E68** 2a 2b - infarction, cerebral I69.3 2a 2b - - bilateral multiple I69.30 2a 2b - - multiple bil...

lang:en score:22 filesize: 7.15 M page_count: 1389 document date: 2015-07-31

SECTION I
Alphabetical index to diseases and nature of injury

[\[pdf\]](#) User Manual

Instruction manual part 2e Alphabetical index for 2009 Volume 3 National Center Health Statistics Part
Volume3 cdc gov nchs data dvs |||

SECTION I Alphabetical index to diseases and nature of injury ALPHABETICAL
INDEX TO DISEASES AND ... cranial, nontraumatic NEC I69.2 - - subarachnoid I69.0 - hepatitis, viral B94.2 - hyperalimentation **E68** - infarction, cerebral I69.3 - - bilateral multiple I69.30 - - multiple bilateral I69.30 - i...

lang:en score:22 filesize: 2.87 M page_count: 1131 document date: 2009-02-10

SECTION I
Alphabetical index to diseases and nature of injury

[\[pdf\]](#) User Manual

Instruction manual part 2e vol 3 ICD 10 index Alphabetical National Center for Health Statistics 2006 Vol
cdc gov nchs data dvs |||

SECTION I Alphabetical index to diseases and nature of injury ALPHABETICAL
INDEX TO DISEASES AND ... cranial, nontraumatic NEC I69.2 - - subarachnoid I69.0 - hepatitis, viral B94.2 - hyperalimentation **E68** - infarction, cerebral I69.3 - infection, pyogenic, intracranial or intraspinal G09 - infectious...

lang:en score:22 filesize: 2.86 M page_count: 1101 document date: 2005-12-16

Contents

Introduction	1
Acknowledgments	4
WHO Collaborating Centres for Classification of Diseases	5
Report of the International Conference for the Tenth Revision of the International Classification of Diseases	7
List of three-character categories	25
Tabular list of inclusion and four-character subcategories	
I Certain infectious and parasitic diseases	I-1
II Neoplasms	II-1
III Diseases of the blood and blood-forming organs and certain disorders involving the immune mechanisms	III-1
IV Endocrine, nutritional and metabolic diseases	IV-1
V Mental and behavioural disorders	V-1
VI Diseases of the nervous system	VI-1
VII Diseases of the eye and adnexa	VII-1
VIII Diseases of the ear and related structures	VIII-1
IX Diseases of the respiratory system	IX-1
X Diseases of the digestive system	X-1
XI Diseases of the skin and subcutaneous tissue	XI-1
XII Diseases of the musculoskeletal system and connective tissue	XII-1
XIII Diseases of the genitourinary system	XIII-1
XIV Pregnancy, childbirth and the puerperium	XIV-1
XV Certain conditions originating in the perinatal period	XV-1
XVI Congenital malformations, deformations and chromosomal abnormalities	XVI-1
XVII Symptoms, signs and abnormal clinical and laboratory findings not elsewhere classified	XVII-1
XVIII Injury, poisoning and certain other consequences of external causes	XVIII-1
XIX External causes of morbidity and mortality	XIX-1

[International Statistical Classification of Diseases and Related Health Problems, Tenth Revision](#)

This document details the Tenth Revision of the International Statistical Classification of Diseases and Related Health Problems (ICD-10), outlining its development, structure, and the content of its various volumes, including the tabular list and instruction manual.

lang:en score:20 filesize: 2.54 M page_count: 1268 document date: 2005-12-16


[\[pdf\]](#) User Manual

Part 2e Instruction Manual ICD 10 Volume 1 cause of death National Center for Health Statistics CDC 2a

This brings together the notes on certification and classification formerly included in with a good deal new background instructional matter guidance use tabulations planning which was seen as lacking earlier revisions REQUESTS Director General to issue International Statistical Classification Diseases Related Problems 3 ENDORSES volume1 2013 cdc gov nchs data dvs

ICD-10-Volume-1 2013 INTRODUCTION A classification of diseases may be defined as a system of categ ... equelae of malnutrition and other nutritional deficiencies Obesity and other hyperalimentation E65-**E68** E65 Localized adiposity E66 Obesity E67 Other hyperalimentation **E68** Sequelae of hyperalimentati...

lang:en **score:19** filesize: 4.01 M page_count: 1855 document date: 2013-07-09

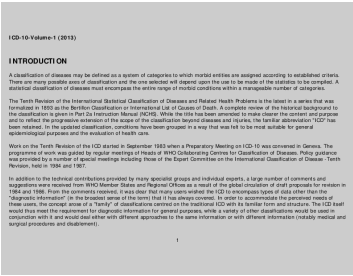

[\[pdf\]](#) Test Report SAR Rating

Measurement Report Kent RF Exposure Shenzhen Monster Creative Technology Co Ltd MH22218 BLUETOOTH HEADPHONE 2AVD2 2AVD2MH22218 mh22218

Radio Test Report Report No.: STS2411008H01 Issued for Shenzhen Monster Creative Technology Co., Ltd ... g, China Product Name: BLUETOOTH HEADPHONE Brand Name: MONSTER Model Name: MH22218 Series Model s : **E68** FCC ID: 2AVD2-MH22218 Test Standards: FCC 47CFR 2.1093 The test results presented in this report...

lang:en **score:17** filesize: 673.39 K page_count: 9 document date: 2024-11-13




[\[pdf\]](#) Decleration of Conformity

Family declaration Shenzhen Monster Creative Technology Co Ltd MH22218 BLUETOOTH HEADPHONE 2AVD2 2AVD2MH22218 mh22218

Shenzhen Monster Creative Technology Co., Ltd Product Similarity Declaration Product name: BLUETOOTH HEADPHONE Model name: MH22218, **E68** FCC ID: 2AVD2-MH22218 We Shenzhen Monster Creative Technology Co., Ltd hereby state that all the models are electrical identical including the same software param...

lang:tl **score:16** filesize: 59.02 K page_count: 1 document date: 2024-11-13

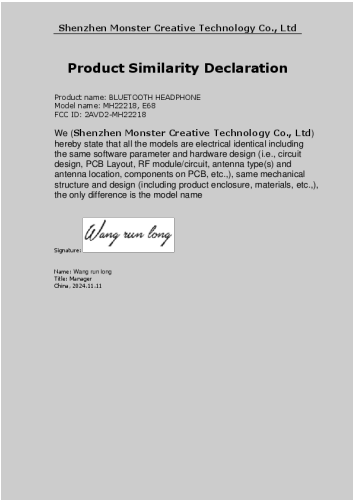

INTRODUCTION

Content of the three volumes of ICD-10

The presentation of the classification has been changed and there are now three volumes

Volume 1. Tabular List. This contains the report of the International Conference for the Tenth Revision, the

[\[pdf\]](#) User Manual

ICD 10 Instruction Manual 2e Volume1 2014 manual Mortality National Center for Health Statistics CDC

review of the historical background to classification is given in Part 2a NCHS While title has Braun

GermanDemocratic Republic ViceChairman MrR A Israel UnitedStates America 4 ICD10Mortality2e-

Volume12014 DrR REQUESTS DirectorGeneral issue International Statistical Classification Diseases and

Related Problems 3 ENDORSES and changes as well as intention produce an three character categories

with alphabeticalindex foruse where more complex detailed fourcharacterversion would be inappropriate

volume1 cdc gov nchs data dvs

ICD10Mortality 2eVolume1 2014 INTRODUCTION A classification of diseases may

be defined as a system o ... Sequelae of malnutrition and other nutritional deficiencies

Obesity and other hyperalimentation E65**E68** E65 Localized adiposity E66 Obesity

E67 Other hyperalimentation **E68** Sequelae of hyperalimentation...

lang:en **score:16** filesize: 4.52 M page_count: 1121 document date: 2014-01-02

[\[pdf\]](#)

Adria Galin Pons Letter Authorization Shenzhen Monster Creative Technology Co Ltd MH22218

BLUETOOTH HEADPHONE 2AVD2 2AVD2MH22218 mh22218

C5266091_X8_Ed.1 Shenzhen Monster Creative Technology Co., Ltd. Letter of

Authorization Company ... o an District, Shenzhen, Guangdong, China Product Name:

BLUETOOTH HEADPHONE Model Number: MH22218, **E68** FCC Identifier: 2AVD2-

MH22218 We authorize LGAI Technological Center S.A., Ronda de la Font del ...

lang:en score:16 filesize: 63.82 K page_count: 1 document date: 2024-11-13

[\[pdf\]](#) User Manual

Instruction manual part 2e volume 3 Mortality ICD 10 NCHS National Center for Health Statistics CDC

Aarskog s syndrome Q87 1 2a Abandonment T74 0 Abasia astasia hysterical F44 4 Abdomen abdominal

see also condition acute R10 2b volume3 2016 cdc gov nchs data dvs

ICD10Mortality 2eVolume3 2016 SECTION I Alphabetical index to diseases and

nature of injury A Aars ... nontraumatic NEC I69.2 2a 2b subarachnoid I69.0 hepatitis,

viral B94.2 2a 2b hyperalimentation **E68** 2a 2b infarction, cerebral I69.3 2a 2b bilateral

multiple 169.30 2a 2b multiple bilatera...

lang:en score:16 filesize: 4.61 M page_count: 1045 document date: 2016-05-11

[\[pdf\]](#) User Manual

Part 2e Instruction Manual ICD 10 Volume 3 cause of death National Center for Health Statistics

SECTION I Alphabetical index to diseases and nature 2013 injury A Aarskog 39 s syndrome Q87 1

Abandonment T74 0 Abasia astasia hysterical F44 4 Abdomen abdominal see also condition acute R10

2b volume3 cdc gov nchs data dvs


ICD-10 2e Volume 3 2013 SECTION I - Alphabetical index to diseases and nature of

injury A Aarsk ... ontraumatic NEC I69.2 2a 2b - - subarachnoid I69.0 -hepatitis, viral

B94.2 2a 2b -hyperalimentation **E68** 2a 2b -infarction, cerebral I69.3 2a 2b - - bilateral

multiple I69.30 2a 2b - - multiple bila...

lang:en **score:15** filesize: 7.11 M page_count: 2023 document date: 2013-07-10

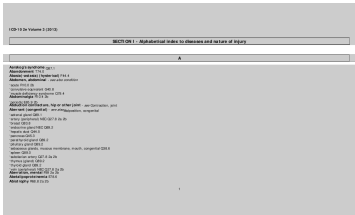

[\[pdf\]](#) User Manual

Instruction manual part 2e Volume 3 ICD 10 International Statistical Classification of Diseases Related

Health Problems Alphabetical Index National Center for Statistics CDC ALPHABETICAL INDEX TO

DISEASES AND NATURE OF INJURY A 1 Aarskog 39 s syndrome Q87 Abandonment T74 0 Abasia

astasia hysterical F44 4 Abdomen abdominal see also condition acute R10 2005 cdc gov nchs data dvs

SECTION I Alphabetical index to diseases and nature of injury ALPHABETICAL

INDEX TO DISEASES AND ... cranial, nontraumatic NEC I69.2 - - subarachnoid I69.0

- hepatitis, viral B94.2 - hyperalimentation **E68** - infarction, cerebral I69.3 - infection,

pyogenic, intracranial or intraspinal G09 - infectious...

lang:en **score:15** filesize: 2.92 M page_count: 1102 document date: 2013-11-29



[NTK Lambda Sensor and Exhaust Gas Temperature Sensor Catalog 2015-2016](#)

Explore the comprehensive NTK Lambda Sensor and Exhaust Gas Temperature

Sensor catalog for 2015-2016, featuring extensive vehicle application listings for

major automotive brands and detailed technical specifications.

lang:en **score:14** filesize: 8.04 M page_count: 477 document date: 2015-12-07



[\[pdf\]](#) Test Report

Measurement Report Kent Test report 1 Shenzhen Monster Creative Technology Co Ltd MH22218

BLUETOOTH HEADPHONE 2AVD2 2AVD2MH22218 mh22218

ABTSL Radio Test Report Report No.:STS2411008W01 Issued for Shenzhen


Monster Creative Technology Co ... , China Product Name: BLUETOOTH

HEADPHONE Brand Name: MONSTER Model Name: MH22218 Series Model s :

E68 FCC ID: 2AVD2-MH22218 Test Standards: FCC Part15.247 The test results

presented in this report r...

lang:en **score:14** filesize: 3.24 M page_count: 79 document date: 2024-11-19

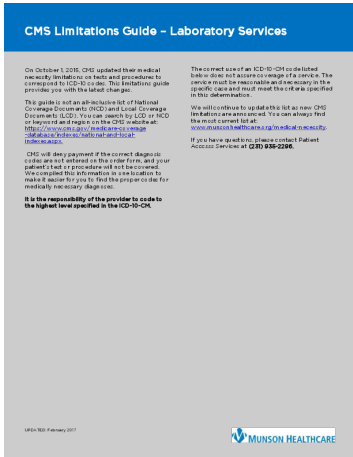


[pdf] Guide

Cleary Casey CMS Limitations Guide Laboratory Services UPDATED February 2017 Z11 4 Encounter for screening human immunodeficiency virus HIV 51 papillomavirus HPV Feb munsonhealthcare org media file |||

CMS Limitations Guide Laboratory Services On October 1, 2015, CMS updated their medical necessity ... CMS Limitations Guide Laboratory Services E21.2 E21.4 E21.5 E55.0 E55.9 E64.3 E67.2 E67.3 E67.8 **E68** E83.30 E83.31 E83.32 E83.39 E83.51 E83.52 E84.0 E84.11 E84.19 E84.8 E84.9 E89.2 G73.7 K50.00 K50...

lang:en score:13 filesize: 7.62 M page_count: 1597 document date: 2017-07-03

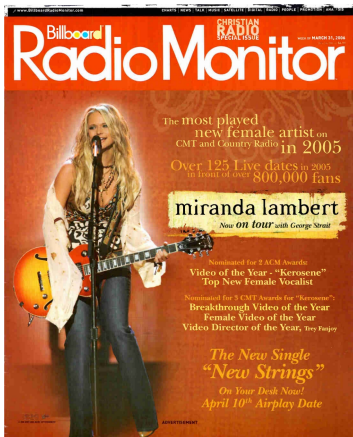

[pdf] Guide Label

Bi World Radio History Its user guide describes how to configure software capture audio feeds from music subscription services such as Rhapsody Billboard Monitor 2006 03 31 worldradiohistory Archive All Music www.BillboardRadioMonitoncom Bi 21M6 SONY WS MUSIC ENTERTAINMENT c ito CHARTS NEWS TALK MUSIC SATEL ... Patay Pablo Freek-A-Leek 5 TJlJlrcryouetmrew 5 JKwon Topsy 40 David Banner Play 1W LW 92 93 8e9 **e68** 83 85 ED 85 68 67 58 48 51 49 47 1 47 51 16 42 43 32 40 47 39 48 36 27 34 32 32 68 ...

lang:en score:13 filesize: 8.47 M page_count: 52 document date: 2020-07-06


[pdf] Accessories Catalog Price List

SPECIFIC EQUIPMENT FOR BIKE AND SCOOTE cloudfront all the molds are manually checked to assure perfect alignment of their components All metal parts manufactured in works facility also located givi 2019 catalog d114i7f87txmqm net Catalogs

CASES, SCREENS AND TECHNICAL EQUIPMENT USA PRICE LIST - JANUARY 2019 EXPLORE. ENJOY. www.giviusa.c ... ional T502 info 22 lb 40lt 16.6 S410 11 22.3 EXPLORE. ENJOY. 17 HARD CASES MOUNTS E36NJ **E68** T468B S410 E36 E36 36 ltr. top or side case, matte black 195,00 OPTIONAL Polyurethane bac...

lang:en score:12 filesize: 33.12 M page_count: 195 document date: 2018-12-17



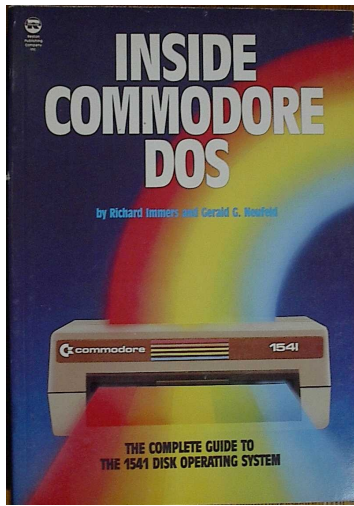

[Inside Commodore DOS: The Complete Guide to the 1541 Disk Operating System](#)

A comprehensive technical manual detailing the Commodore 1541 disk drive's Disk Operating System (DOS). Covers diskette formatting, organization, direct-access programming, DOS protection, and low-level FDC operations for advanced users and programmers.

lang:en score:11 filesize: 7.18 M page_count: 511 document date: 2008-10-19