

SINGCALL SC-R60 APE230

SINGCALL Wireless Portable Caregiver Pager Panic Alarm System SC-R60 APE230 Instruction Manual

Model: SC-R60 APE230 | Brand: SINGCALL

1. PRODUCT OVERVIEW

The SINGCALL Wireless Portable Caregiver Pager Panic Alarm System is designed to provide reliable communication for individuals needing assistance, such as the elderly, children, pregnant women, and patients. This system includes a portable receiver and emergency call buttons, offering peace of mind through its multi-ringtones options, adjustable volume, and long signal range.

- **Multi-Ringtones & Adjustable Volume:** Portable receiver with 32 ringtones and adjustable volume from 0-100dB. Set different ringtones per call button. Mute mode helps avoid disturbed sleep. LED flashing with ringtones (hearing-impaired friendly).
- **Long Signal Range:** Delivers stable signal transmission up to 100m/328ft in open areas.
- **IP55 Waterproof & Fast Charging/Battery Replacement:** Both the receiver and call button are IP55 waterproof rated, resisting dust, rain or water splashes. Rechargeable receiver charges fast via included cable. Call button battery is easy to replace.
- **Multiple Scenarios:** Suitable for hospital, nursing facility, care home, and clinic.
- **Emergency Button with Detachable Lanyard:** The call button features a removable neck lanyard for hanging or pocket storage. Wear or carry effortlessly.



Image: The SINGCALL system provides freedom and easier caregiving for various users.



Image: The call button is designed for diverse users including the elderly, children, pregnant women, disabled individuals, and patients.

Your browser does not support the video tag.

Video: An overview of the SINGCALL Wireless Portable Caregiver Pager Alarm System, demonstrating its use in various scenarios.

2. WHAT'S IN THE BOX

- Portable Receiver
- Emergency Call Button (quantity may vary based on package)
- Charging Cable (for receiver)
- Neck Lanyard (for call button)
- Mounting Accessories (screws, adhesive tape)

3. SETUP INSTRUCTIONS

3.1 Charging the Receiver

The portable receiver is rechargeable. Connect the provided Type-C charging cable to the charging port on the receiver and a suitable power source. The LED indicator will show charging status.

Portable Receiver

Easy to Carry



Image: Portable Receiver features including Type-C charging port and built-in battery.

3.2 Attaching the Lanyard to the Call Button

The emergency call button comes with a detachable lanyard for convenient wearing. Follow the steps below to attach it securely.

Your browser does not support the video tag.

Video: Instructions on how to attach the lanyard to the caregiver call button.

3.3 Pairing the Call Button with the Receiver

The system typically comes pre-paired. If re-pairing is needed or you are adding new call buttons, follow the registration process.

Your browser does not support the video tag.

Video: Detailed guide on how to pair the caregiver pager with the wireless portable receiver.

4. OPERATING INSTRUCTIONS

4.1 Activating the Call Button

To send an alert, simply press the large bell icon on the emergency call button. The receiver will then sound an

alarm and flash its LED indicator.

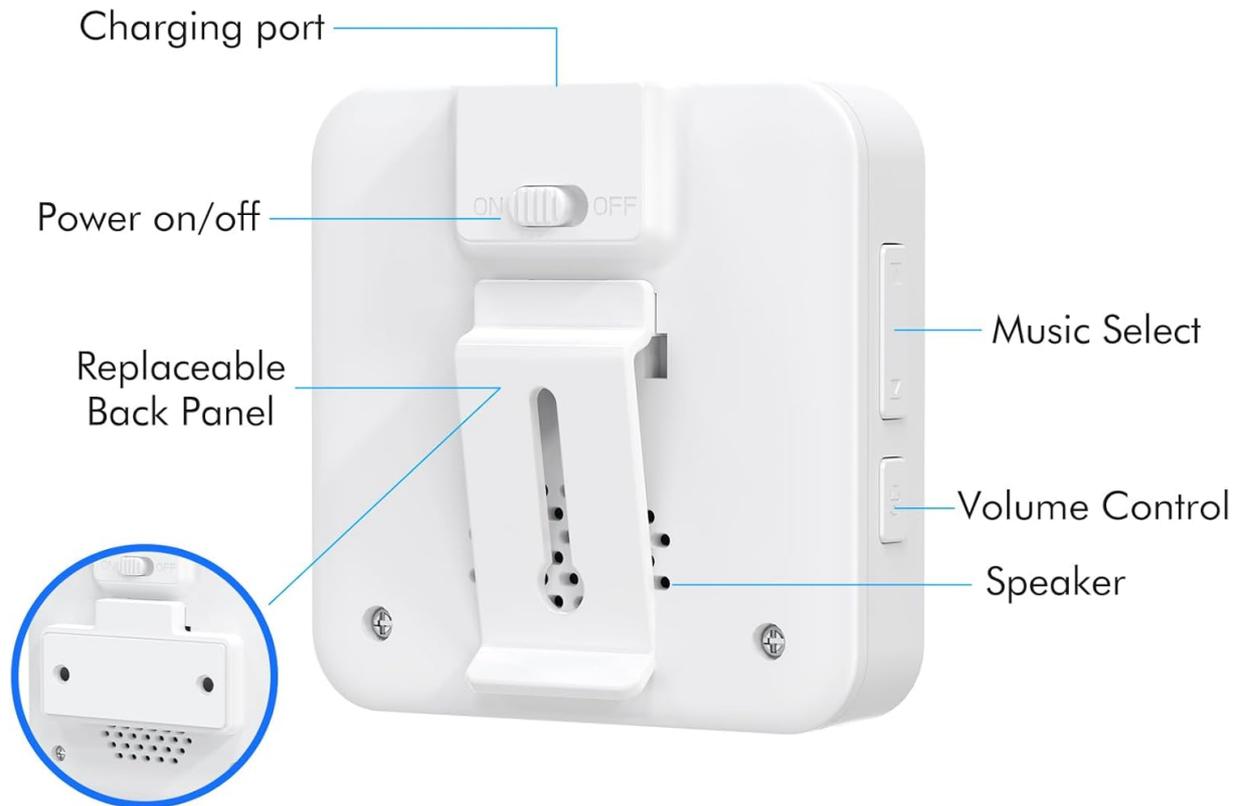


Image: Receiver controls for power, music selection, and volume.

4.2 Adjusting Volume and Ringtones

The receiver offers 32 different ringtones and adjustable volume levels from 0-100dB. Use the dedicated buttons on the side of the receiver to cycle through ringtones and adjust the volume to your preference, including a mute mode.

Memory Function

Remember your personal preference settings



Image: The receiver features memory function for personal settings and a mute mode.

Your browser does not support the video tag.

Video: Guide on how to change the volume of the wireless portable receiver.

Your browser does not support the video tag.

Video: Instructions on how to change the ring tone of the wireless portable receiver.

5. MAINTENANCE

5.1 Battery Replacement for Call Button

The call button uses a replaceable battery. To replace, carefully open the back panel using a small screwdriver, replace the 12V 23A battery, and re-secure the panel.

Your browser does not support the video tag.

Video: Step-by-step guide on how to replace the battery of the call button.

5.2 Cleaning and Care

Wipe the devices with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners. The IP55 rating provides protection against dust and water splashes, but do not submerge the devices in water.

6. TROUBLESHOOTING

6.1 No Signal/Poor Range

- Ensure the receiver is powered on and charged.
- Check the call button battery and replace if necessary.
- Reduce the distance between the call button and the receiver.
- Avoid placing the receiver near large metal objects or other electronic devices that may cause interference.

6.2 Resetting to Factory Defaults

If you experience persistent issues or wish to clear all paired transmitters, you can reset the receiver to its factory default settings.

Your browser does not support the video tag.

Video: Instructions on how to delete all transmitters and restore the receiver to factory defaults.

7. SPECIFICATIONS

Brand	SINGCALL
Model Number	SC-R60 APE230
Power Source	Battery Powered (Rechargeable Lithium Polymer for Receiver, 12V 23A for Call Button)
Item Dimensions (L x W x H)	3.35 x 3.35 x 3.15 inches
Connectivity Technology	Wireless
Installation Type	Screw-In, Self-Adhesive

Alert Type	Manual
Item Weight	8.4 ounces (238 Grams)
Control Method	Push Button
Maximum Range	100 Meters (328 Feet) in open areas
Waterproof Rating	IP55

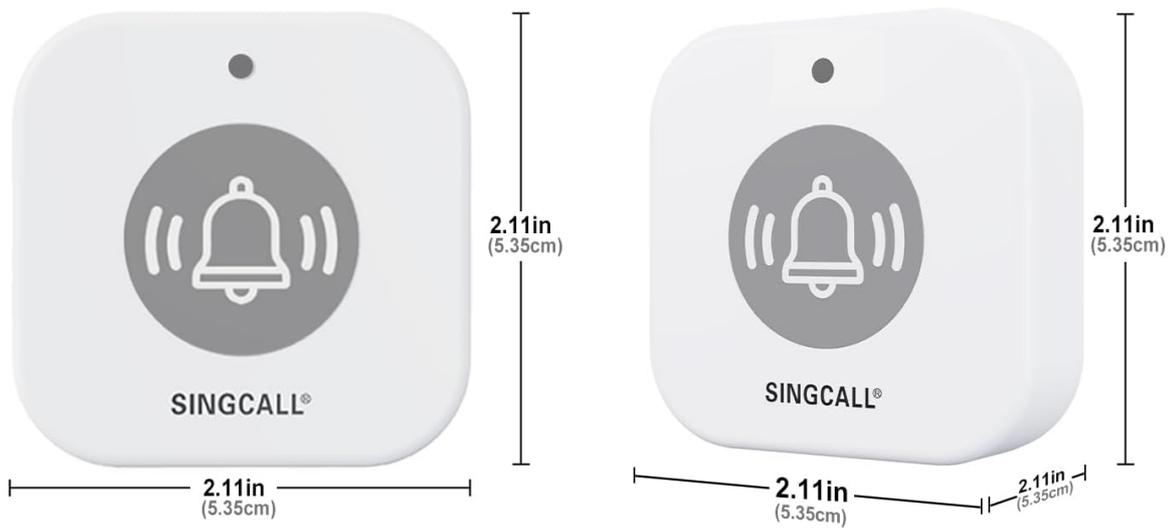
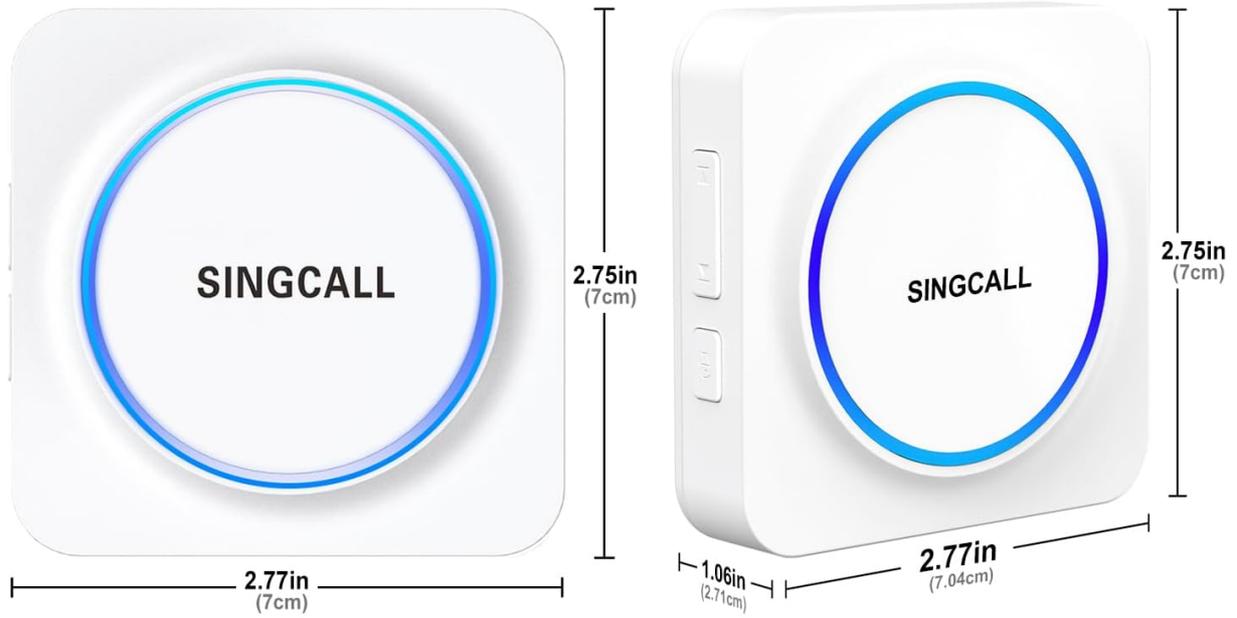


Image: Dimensions of the SINGCALL receiver and call button.

100M/328FT Range in Open Area



Image: The system offers a 100M/328FT range in open areas, with signal passing through various obstacles.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your SINGCALL Wireless Portable Caregiver Pager Panic Alarm System, please refer to the contact information provided in your product packaging or visit the official SINGCALL website.