

[Manuals.plus](#) /

> [CuiSuto](#) /

> CuiSuto AI Translator Smart Glasses C-GV90 User Manual

CuiSuto C-GV90

CuiSuto AI Translator Smart Glasses C-GV90 User Manual

Model: C-GV90

INTRODUCTION

Welcome to the CuiSuto AI Translator Smart Glasses C-GV90 user manual. These smart glasses integrate real-time AI translation, dynamic color-changing lenses, open-ear audio, and voice control for a seamless and connected experience. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your device.



WHAT'S IN THE BOX


Please verify that all items are present in your package:

- CuiSuto AI Translator Smart Glasses (C-GV90)
- Magnetic Charging Cable
- User Manual
- Eyeglasses Cleaning Cloth
- Packaging Box

SETUP

1. Initial Charging

Before first use, fully charge your glasses. Connect the magnetic charging cable to the charging port on the glasses and to a USB power source. A full charge typically takes approximately 1 hour.



One Moment of Magnetic Charging One Day of Battery Life

Unilateral magnetic attraction · Let energy flow naturally like breathing




 ≈ 6h listening to music	 ≈ 5h Call battery life	 ≈ 1h charging time
--	---	---

Image: Illustration of the magnetic charging process and battery life indicators (approximately 6 hours for listening to music, 5 hours for calls, 1 hour charging time).

2. Powering On/Off

- **Power On:** Press and hold the button on the temple for 3 seconds.
- **Power Off:** Press and hold the button on the temple for 5 seconds.

3. Bluetooth Pairing

After the first power-on, the glasses will automatically enter pairing mode. Ensure Bluetooth is enabled on your smartphone or device. Select "C-GV90" from the list of available devices to connect. Subsequent connections will be automatic once the glasses are powered on and within range of a previously paired device.

OPERATING INSTRUCTIONS

AI Translation

The CuiSuto AI Translator Smart Glasses support real-time AI translation for over 100 languages. For full functionality, it is recommended to use the companion application (e.g., "Hyper MZT app" as mentioned in user reviews) on your smartphone. During video or audio calls, bilingual subtitles can automatically display, enhancing communication without requiring an app for web users.

Smart Color-Changing Lenses

The lenses feature slidable color-changing technology with UV400 protection, blocking 99% of harmful light. This allows for easy adaptation to various lighting conditions.

- **To Darken Lenses:** Gently slide your finger backward along the temple.
- **To Brighten Lenses:** Gently slide your finger forward along the temple.



Image: Visual guide demonstrating the backward slide gesture to darken lenses and the forward slide gesture to brighten them.

Open-Ear Audio & HD Calls

Equipped with built-in air-conduction speakers and AI noise reduction, these glasses allow you to hear music and calls clearly while remaining aware of your surroundings. This eliminates the need for separate headphones.

One - click control *Easy to operate*

Intelligent control

After the first Bluetooth connection the temple is automatically paired without operation



One - click operation button

- Power on and off**
Power on: Long press the button for 3 seconds
Shutdown: Long press the button for 5 seconds
- Incoming call**
Answer/Hang up call: Click the button once
Reject a call: Long press the button for 1.5 seconds
- Play/Pause**
In the music playing state
Click the button once to play/pause
- Wake up the voice assistant**
In the non-music-playing state
Click the button twice to wake up the voice assistant
- Remote control photography**
(After the camera is turned on)
Press the button 3 times to control taking pictures
- Adjust the color of the lens**
Lens darkening: Slide backward by touching the arrow on the temple with your finger.
Lens brightening: Slide forward by touching the arrow on the temple with your finger.

Image: A woman wearing the smart glasses, with graphic elements illustrating the open-ear audio experience, allowing simultaneous awareness of ambient sounds and media.

Voice Control & Gesture Commands

The integrated button on the temple provides intuitive control over various functions:

- **Answer/Hang Up Call:** Click the button once.
- **Reject Call:** Long press the button for 1.5 seconds.
- **Play/Pause Music:** Click the button once during music playback.
- **Wake Voice Assistant (Siri/Google):** Click the button twice when not playing music.
- **Remote Photography:** Triple-press the button to remotely snap photos (requires camera to be turned on on the connected device).

Applicable to various

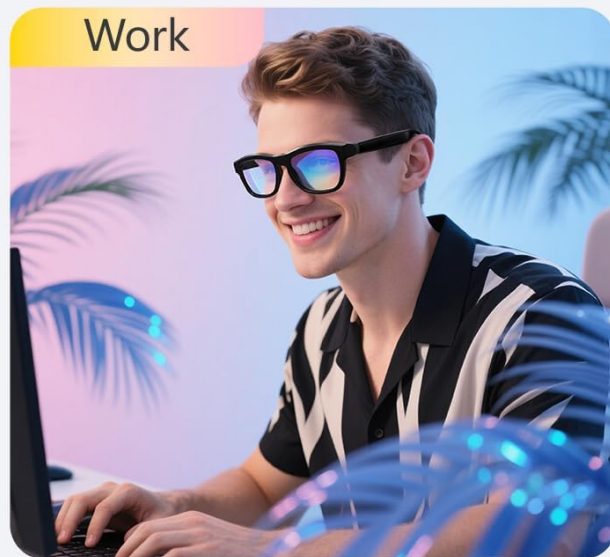
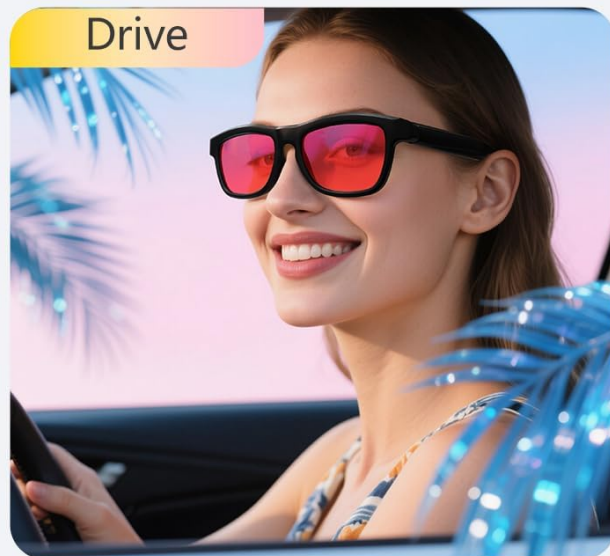


Image: A detailed diagram showing the single button on the temple and its corresponding functions for power, calls, music, voice assistant, remote photography, and lens adjustment.

MAINTENANCE

- **Cleaning Lenses:** Use the provided eyeglasses cleaning cloth to gently wipe the lenses. Avoid abrasive materials or harsh chemicals that could damage the lens coating.
- **Cleaning Frame:** Wipe the frame with a soft, damp cloth. Do not submerge the glasses in water.
- **Storage:** Store the glasses in their protective case when not in use to prevent scratches and damage.
- **Charging:** Always use the original magnetic charging cable to prevent damage to the charging port and

battery.

TROUBLESHOOTING

- **Glasses not powering on:** Ensure the glasses are fully charged. Press and hold the power button for 3 seconds.
- **Unable to pair via Bluetooth:** Make sure Bluetooth is enabled on your device and the glasses are in pairing mode. Try turning off and on both the glasses and your device's Bluetooth.
- **No audio:** Check the volume level on both the glasses and your connected device. Ensure the glasses are properly paired.
- **Lenses not changing color:** Ensure the glasses are powered on. Verify that the sliding gesture on the temple is performed correctly.
- **Translation not working:** Confirm that the companion app is installed and configured correctly on your smartphone, and that the glasses are connected to the app. Ensure an active internet connection for AI translation services.

SPECIFICATIONS

Feature	Detail
Model Number	C-GV90
Connectivity Technology	Bluetooth 5.4
Battery Capacity	270 Milliamp Hours (Lithium Ion)
Charging Time	Approximately 1 hour
Battery Life (Music/Calls)	Approximately 5-6 hours
Frame/Temple Material	PC (Polycarbonate)
Lens Material	Glass liquid crystal lenses
Item Weight	44g (0.1 Kilograms / 3.52 ounces)
Special Features	AI Translation, Slidable Color-Changing Lenses, Open-Ear Audio, Voice Assistant, Remote Photography, UV Protection

Product Parameters

Type number	GV90
Product name	AI intelligent translation and dimming glasses
Blue teeth	BT5.4
Charging interface	Magnetic charging
Frame/temple material	PC
Lens material	Glass liquid crystal lenses
Charging time	About 1 hour
Weight	Glasses 44g + packing box 197g = 241g



Image: Detailed product parameters including type number, product name, Bluetooth version, charging interface, materials, charging time, and weight, alongside a diagram of the glasses with dimensions.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact CuiSuto customer service directly. Details for contacting support can typically be found on the manufacturer's official website or through the retailer where the product was purchased.