

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Wooask](#) /

› Wooask A8 Translation Earbuds User Manual

Wooask A8

Wooask A8 Translation Earbuds User Manual

Model: A8

1. INTRODUCTION

The Wooask A8 Translation Earbuds are an advanced AI-powered device designed to facilitate real-time communication across language barriers. This device integrates seamless online and offline translation capabilities, high-definition audio for calls and music, a ChatGPT assistant, and meeting recording functions. It operates independently without requiring a smartphone application or Bluetooth pairing, offering a streamlined user experience.

Key features include:

- Real-time online translation in 144 languages and accents.
- Offline translation support for 16 languages, ideal for travel without internet access.
- Integrated ChatGPT assistant for information retrieval and conversational AI.
- Dual-microphone noise cancellation for clear audio in various environments.
- Multiple translation modes: In-ear, Speaker, and Earbud-to-Screen.
- Long-lasting battery life for extended use.
- Compact and portable design with a 2.5-inch HD touchscreen.

2. PRODUCT OVERVIEW

The Wooask A8 system consists of a main translator device with a built-in screen and a pair of wireless earbuds. The device is designed for intuitive operation directly from its touchscreen interface.





Figure 2.1: Wooask A8 Translator Device with Earbuds

2.1. What's in the Box

- A8 Translator Device (x1)
- USB-A to Type-C Charging Cable (x1)
- User Manual (x1)

3. SETUP

3.1. Initial Charging

Before first use, fully charge the Wooask A8 device using the provided USB-A to Type-C charging cable. Connect the Type-C end to the device and the USB-A end to a compatible power adapter (not included). A full charge typically takes 1-2 hours.

Long-Lasting Battery



1000mAh



Type-C



1.5Hrs Full Charge



35Hrs Continue Working



Tips: Please use the charging cable in the box

Figure 3.1: Battery Information and Charging Port

3.2. Powering On/Off

To power on the device, press and hold the power button located on the side until the screen illuminates. To power off, press and hold the power button and select 'Power Off' from the on-screen options.

3.3. Earbud Pairing

The earbuds are designed for instant pairing with the Wooask A8 device. Simply place the earbuds into the charging case, ensure the device is powered on, and they will automatically connect. No manual Bluetooth pairing is required.

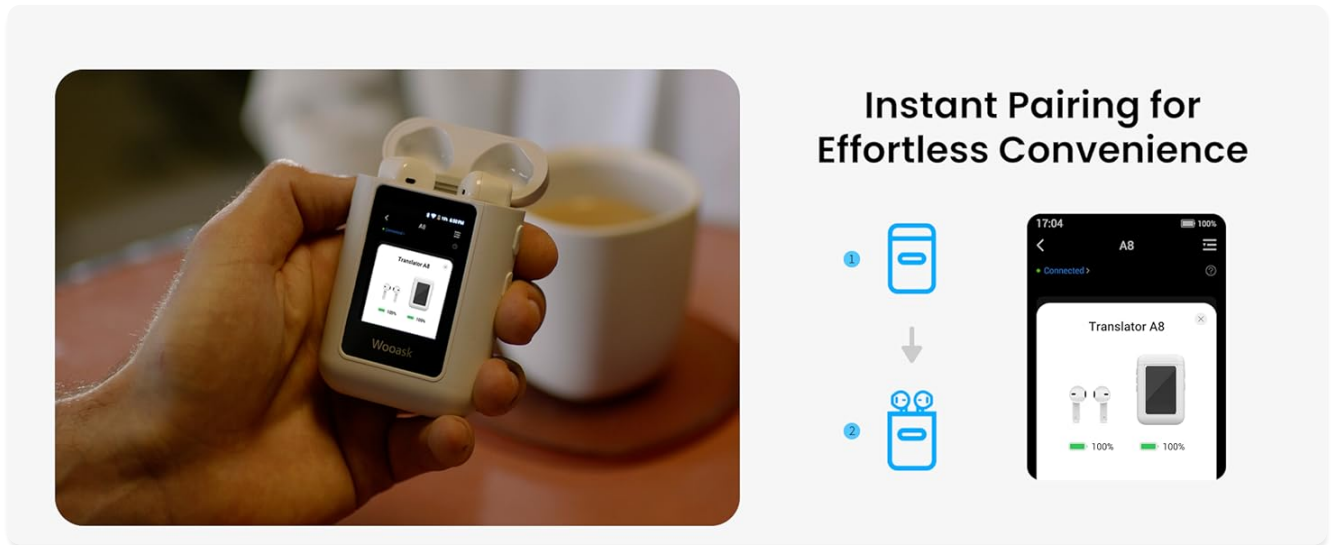



Figure 3.2: Instant Earbud Pairing

4. OPERATING THE WOASK A8

The Wooask A8 offers various modes to suit different communication needs. Navigate through the main menu on the 2.5-inch HD touchscreen to select your desired function.

Independent Use with A8's Built-in Screen

ALL-IN-1

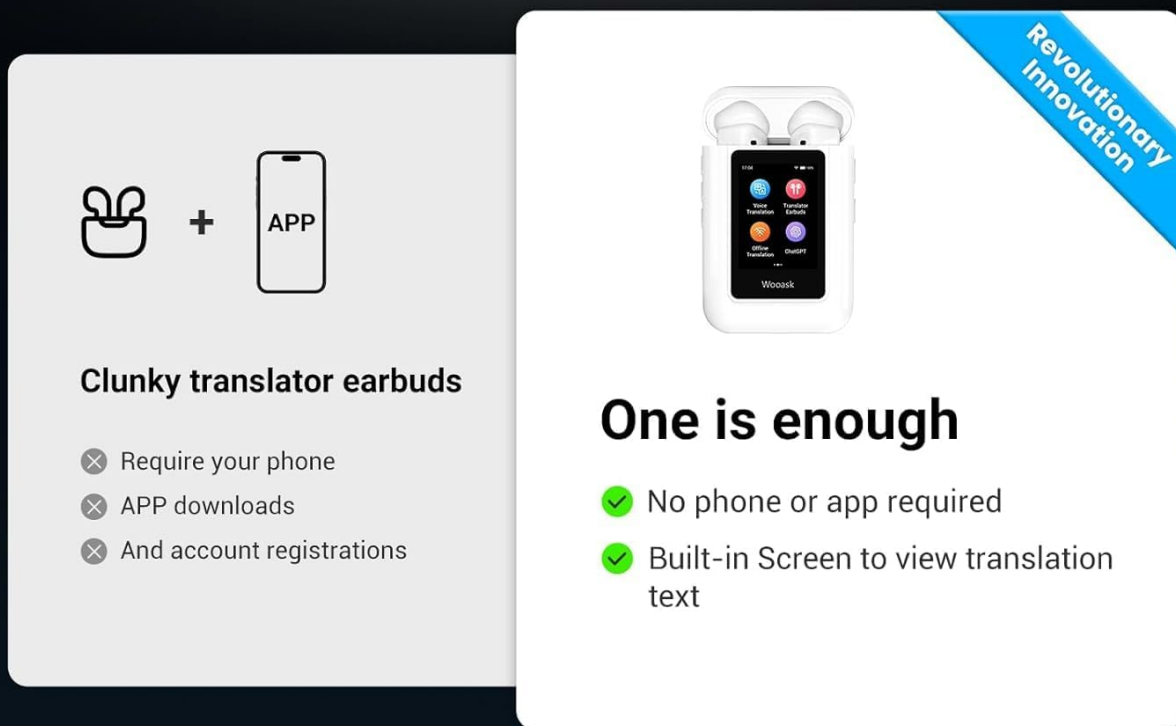

The image is a comparison graphic. On the left, a grey box shows an earbud icon, a plus sign, and a smartphone icon labeled 'APP'. Below this, the text 'Clunky translator earbuds' is followed by three bullet points with 'X' icons: 'Require your phone', 'APP downloads', and 'And account registrations'. On the right, a white box shows the Wooask A8 device with its earbuds and a built-in screen displaying a translation interface. A blue diagonal banner in the top right corner of this box says 'Revolutionary Innovation'. Below the device, the text 'One is enough' is followed by two bullet points with green checkmark icons: 'No phone or app required' and 'Built-in Screen to view translation text'.

Clunky translator earbuds

- ✗ Require your phone
- ✗ APP downloads
- ✗ And account registrations

One is enough

- ✓ No phone or app required
- ✓ Built-in Screen to view translation text


Figure 4.1: Independent Operation of Wooask A8

4.1. Translation Modes

The device supports multiple translation modes for flexible communication:

- **In-ear Mode:** For private, one-on-one conversations. Each participant wears an earbud, and translations are delivered directly to their ear.
- **Speaker Mode:** For group discussions or when earbuds are not preferred. The device's built-in speaker broadcasts translations.
- **Earbud-to-Screen Translation:** Allows one person to speak into an earbud while the translation appears on the device's screen for another person to read.

Two Modes for Seamless Translation

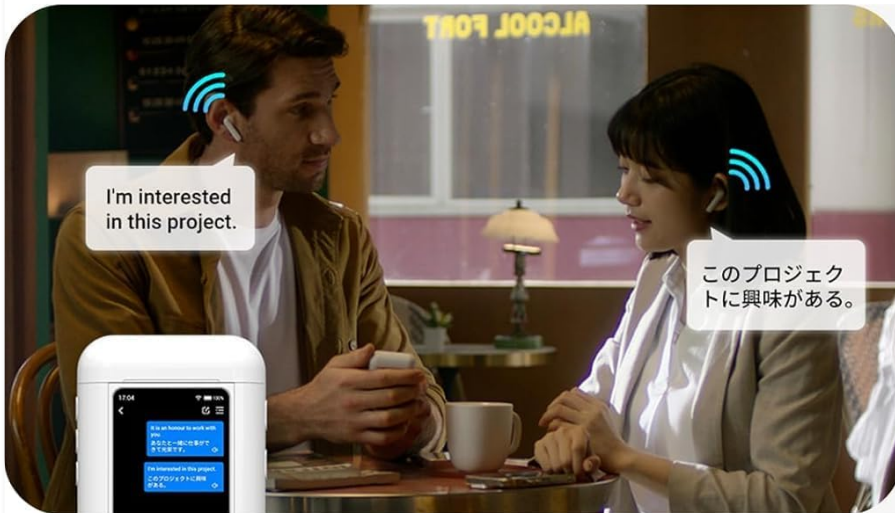

In-ear mode
For private conversation



Speaker mode
No need to wear earbuds

Figure 4.2: In-ear and Speaker Translation Modes

In-Ear Mode

Immediate translation in your ear as you speak

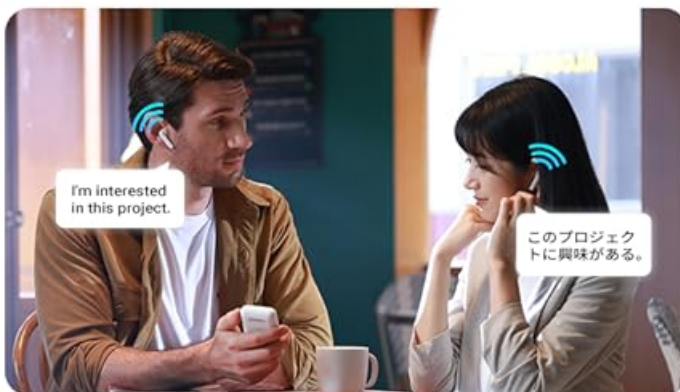


Figure 4.3: In-Ear Mode in Use

Speaker Mode

Powerful 2W Speaker for Clear Translation Without Earbuds



Figure 4.4: Speaker Mode in Use

4.2. Language Selection

The Wooask A8 supports a wide range of languages for both online and offline translation. Select your desired source and target languages from the device's menu.

4.2.1. Online Translation

The device supports 144 languages and accents for online real-time translation. An internet connection (Wi-Fi or mobile hotspot) is required for online translation.

74 Languages & 70 Accents

98% High Accuracy | Response in 0.5S



Spanish

Qué tiempo hace hoy?

Chinese

今天天气怎么样?

English

What's the weather like today?

Japanese

天気はどうですか。

German

Wie ist das Wetter heute?

Figure 4.5: Online Translation in Action

Figure 4.6: Online Languages for In-ear Mode

Online Language for Speaker Mode

- Spanish (20 Accents)
- Arabic (16 Accents)
- English (16 Accents)
- French (4 Accents)
- Tamil (4 Accents)
- Chinese (3 Accents)
- German (3 Accents)
- Bengali (2 Accents)
- Dutch (2 Accents)
- Italian (2 Accents)
- Portuguese (2 Accents)
- Swahili (2 Accents)
- Urdu (2 Accents)
- Afrikaans
- Albanian
- Amharic
- Armenian
- Azerbaijani
- Bulgarian
- Burmese
- Basque
- Catalan
- Croatian
- Czech
- Danish
- Estonian
- Filipino
- Finnish
- Galician
- Georgian
- Greek
- Gujarati
- Hebrew
- Hindi
- Hungarian
- Icelandic
- Indonesian
- Japanese
- Javanese
- Kannada
- Kazakh
- Korean
- Khmer
- Lao
- Latvian
- Lithuanian
- Macedonian
- Malay
- Malayalam
- Marathi
- Mongolian
- Nepali
- Norwegian
- Persian
- Polish
- Punjabi
- Romanian
- Russian
- Serbian
- Sinhala
- Slovak
- Slovenian
- Sundanese
- Swedish
- Telugu
- Thai
- Turkish
- Ukrainian
- Uzbek
- Vietnamese
- Zulu

144 Languages and Accents



*More languages will come soon

Figure 4.7: Online Languages for Speaker Mode

4.2.2. Offline Translation

The Wooask A8 supports offline translation for 16 languages, allowing communication without an internet connection. These languages include English, Spanish, Simplified Chinese, Traditional Chinese, Japanese, Arabic, Portuguese, Russian, French, German, Korean, Thai, Hindi, Vietnamese, Italian, and Indonesian.

Offline Translation in 16 Languages



English



Spanish



Simplified
Chinese



Traditional
Chinese



Japanese



Arabic



Portuguese



Russian



French



German



Korean



Thai



Hindi



Vietnamese



Italian



Indonesian



No Internet Required

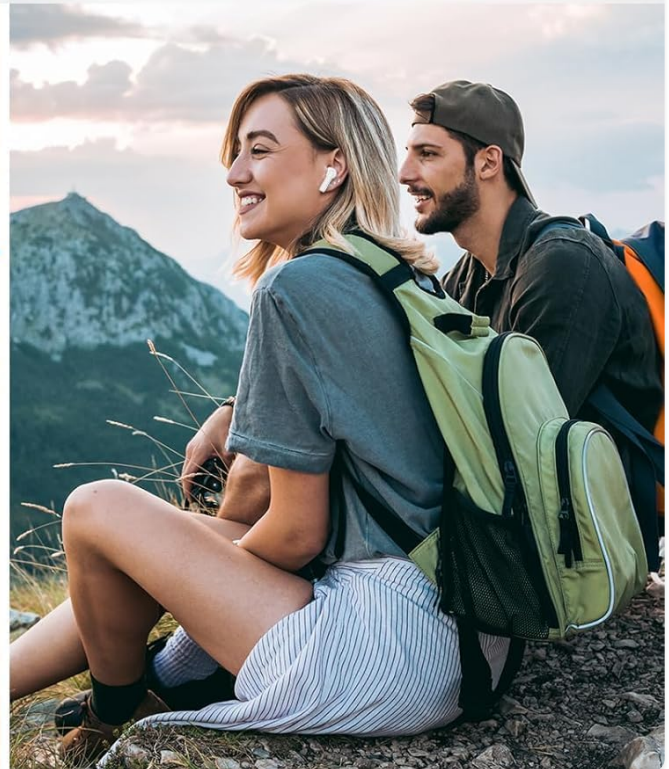


Figure 4.8: Offline Translation Languages and Scenarios

Offline Languages (Speaker Mode)

16 Languages

- English
- Spanish
- Simplified Chinese
- Traditional Chinese
- French
- German
- Japanese
- Arabic
- Portuguese
- Russian
- Korean
- Thai
- Hindi
- Vietnamese
- Italian
- Indonesian



Figure 4.9: Offline Languages for Speaker Mode

4.3. ChatGPT Assistant

Access the integrated ChatGPT assistant for various queries, information, and conversational interactions. The ChatGPT feature supports 43 languages.

Smart Voice Assistance with ChatGPT

Powered by **OpenAI**



Figure 4.10: ChatGPT Assistant Interface

ChatGPT Languages

43
 Languages

Arabic	Romanian	Turkish
Icelandic	Latvian	Urdu
Polish	Marathi	Hungarian
Bulgarian	Bengali	Greek
German	Nepali	Spanish
Danish	Norwegian	Hebrew
Russian	Afrikaans	English
French	Portuguese	Vietnamese
Filipino	Japanese	Indonesian
Finnish	Swedish	Hindi
Korean	Slovak	Italian
Dutch	Slovenian	Chinese (Simplified)
Catalan	Serbian	Chinese (Traditional)
Czech	Thai	
Croatian	Tamil	

Figure 4.11: ChatGPT Supported Languages

4.4. Additional Features

- **Meeting Recording:** The device can record conversations, which can be useful for business meetings or language learning.
- **Music Playback:** Enjoy immersive music playback through the earbuds or device speaker.
- **Voice Switching:** The device supports switching between male and female voices for translations.
- **Record Forwarding:** Easily forward recorded translations via email or other compatible methods.

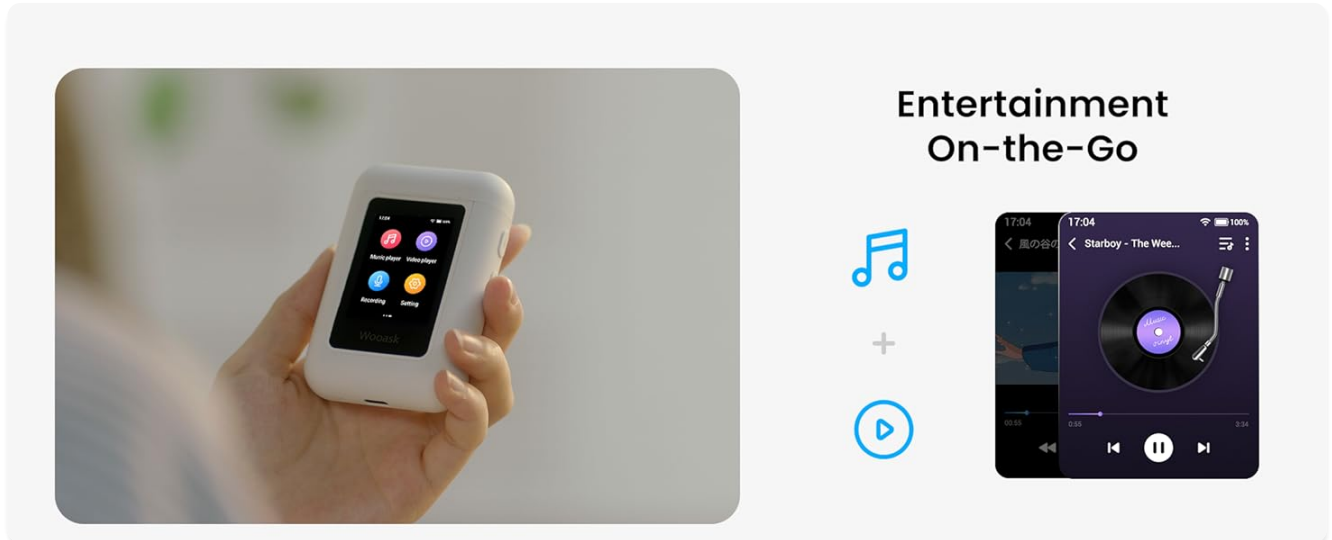


Figure 4.12: Entertainment On-the-Go

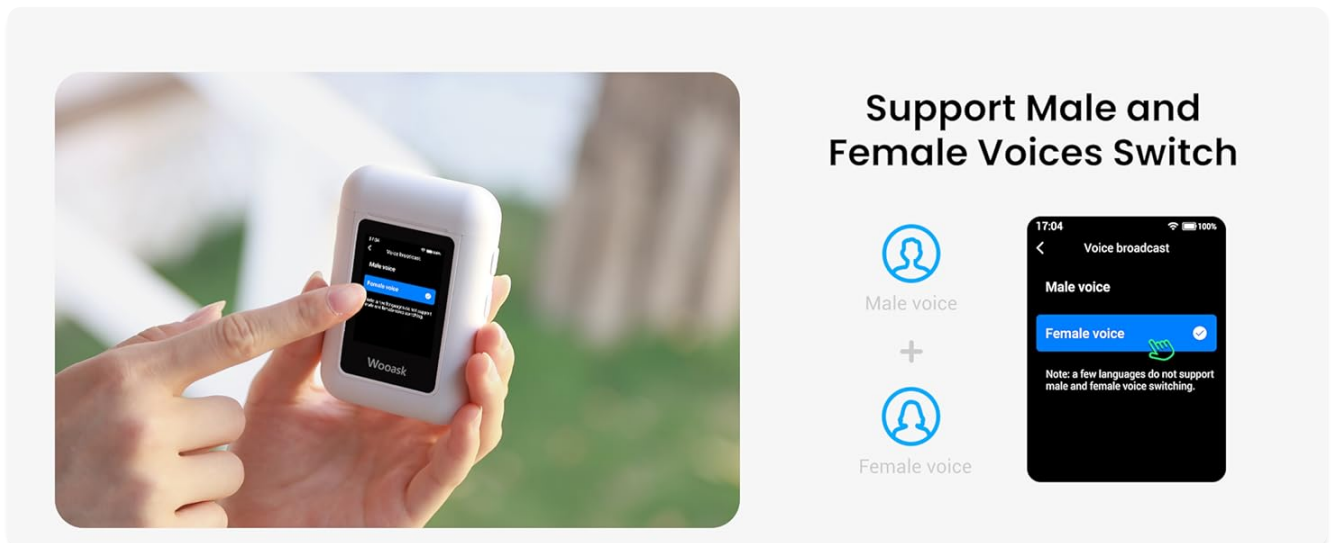


Figure 4.13: Male and Female Voice Switching



Easy Record Forwarding



Figure 4.14: Easy Record Forwarding

5. MAINTENANCE

5.1. Cleaning

Wipe the device and earbuds with a soft, dry cloth. Do not use liquid cleaners or abrasive materials. Ensure no moisture enters the charging port or speaker grilles.

5.2. Storage

Store the Wooask A8 in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the device is fully charged before storage and recharge it periodically to maintain battery health.

5.3. Battery Care

Use only the original charging cable provided. Avoid exposing the device to temperatures below 0°C (32°F) or above 45°C (113°F) as this can affect battery performance and lifespan.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Wooask A8 Translation Earbuds.

Problem	Possible Cause	Solution
Device does not power on	Low battery; device frozen	Charge the device for at least 30 minutes. If still unresponsive, perform a soft reset by holding the power button for 10-15 seconds.
No translation output	Incorrect language selection; no internet connection (for online mode); microphone blocked	Verify source and target languages. Ensure a stable internet connection for online translation. Check if the microphone is clear.

Problem	Possible Cause	Solution
Earbuds not connecting	Earbuds not properly seated in case; low earbud battery	Ensure earbuds are correctly placed in the charging case. Charge the device and earbuds.
Translation accuracy issues	Unclear speech; noisy environment; complex sentence structure	Speak clearly and at a moderate pace. Reduce background noise. Simplify sentences if possible.

7. SPECIFICATIONS

Feature	Detail
Model	A8
Package Dimensions	4.8 x 4.1 x 1.7 inches
Item Weight	9 ounces
Batteries	3 Lithium Ion batteries required
Battery Capacity	1000mAh (device)
Charging Time	Approx. 1.5 hours for full charge
Continuous Translation Time	Up to 35 hours
Standby Time	Up to 10 days
Online Languages	144 languages & accents
Offline Languages	16 languages
ChatGPT Languages	43 languages
Manufacturer	Wooask
ASIN	B0FSZ42F9Z

Cutting-Edge Technology for Precise Translation

Powered by a Quad-Core Processor



Figure 7.1: Advanced Technology Overview

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Wooask website or contact their customer service directly. Details can typically be found on the product packaging or the manufacturer's official online resources.

For further assistance, please visit the [Wooask Store on Amazon](#).