

[Manuals.plus](#) /

› [Plimpton](#) /

› Plimpton Paper8 8-inch Android Tablet with Wacom EMR Pen User Manual

Plimpton Paper8

Plimpton Paper8 8-inch Android Tablet with Wacom EMR Pen User Manual

INTRODUCTION


Welcome to the Plimpton Paper8 8-inch Android Tablet. This device combines the versatility of an Android tablet with the natural writing experience of a Wacom EMR pen. Featuring the latest Android 15 system, integrated Gemini AI, and an eye-friendly AG anti-glare display, the Paper8 is designed to enhance your productivity, creativity, and entertainment. This manual will guide you through the setup, operation, and maintenance of your new device.

1. SETUP

1.1 Package Contents

Before you begin, please ensure all items are present in your package:

- Plimpton Paper8 Electronic Notebook (Tablet) x1
- Protective Case x1
- Wacom Touch Pen x1
- Nib Remover x1
- Soft Replacement Nibs x2
- USB-C Cable x1
- Power Adapter x1

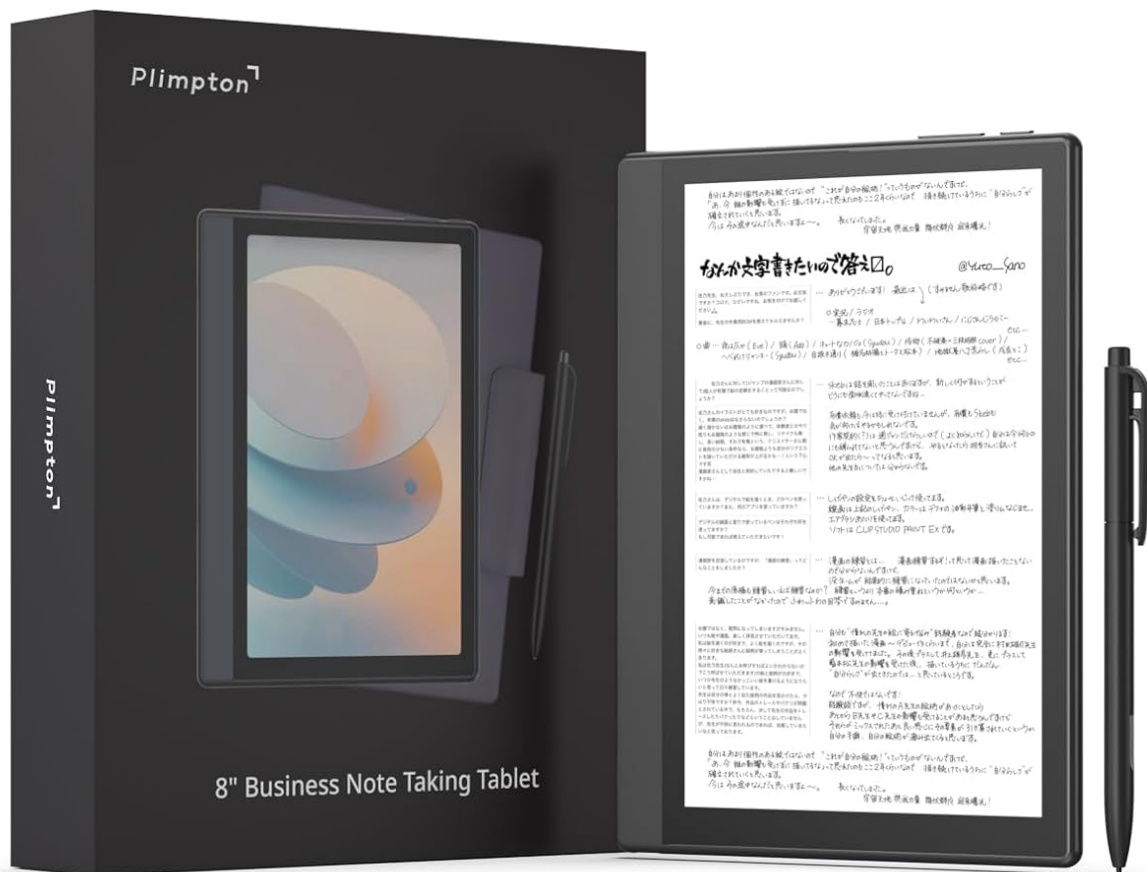

付属品



paper8



保護ケース



wacom pencil



USB-Cケーブル



電源アダプター



替え芯抜き



ソフト替え芯2本

Figure 1.1: Plimpton Paper8 Included Accessories

1.2 Initial Power On

1. Press and hold the power button located on the side of the tablet until the screen lights up.
2. Follow the on-screen prompts to select your language and region.

1.3 Connecting to Wi-Fi

1. From the home screen, swipe down from the top to open the Quick Settings panel.
2. Tap the Wi-Fi icon to enable Wi-Fi.
3. Select your desired Wi-Fi network from the list and enter the password if prompted.

1.4 Google Account Setup

To access Google Play Store and other Google services, sign in with your Google account or create a new one when

prompted during the initial setup or via the Settings app.

1.5 Wacom EMR Pen Usage

The included Wacom EMR pen does not require charging or Bluetooth pairing. It is ready to use immediately upon contact with the screen. The pen offers 4096 levels of pressure sensitivity and tilt detection for a natural writing and drawing experience.

EMRテクノロジーにより、自然な書き心地をいつでも実感できます。





充電不要・Bluetooth 不要



操作効率が
高い
ペン先を押して、すっと滑らせればよい



替芯収納
収納と操作を一体化



4096級高感度スタイラス
細ペン先で精細に描く

Figure 1.2: Wacom EMR Pen Features

1.6 Protective Case Functionality

The included protective case features a Hall sensor. Opening the case will automatically wake the screen, allowing you to start writing immediately. Closing the case will automatically lock the screen, conserving power and protecting your privacy.

2. OPERATING INSTRUCTIONS

2.1 Basic Navigation and Android 15

The Plimpton Paper8 runs on the latest Android 15 system, providing an intuitive and efficient user experience. Navigate using touch gestures: swipe to scroll, pinch to zoom, and tap to select.

2.2 Using the Wacom EMR Pen for Notes and Drawing

The Wacom EMR pen provides a paper-like writing feel. Utilize it for quick memos, detailed illustrations, or annotating documents. The 4096 pressure levels and tilt detection ensure precise and natural input. Popular apps like Clip Studio Paint and ibisPaint are compatible and available for download from Google Play.



Figure 2.1: Natural Writing Experience with Wacom EMR Pen

Your browser does not support the video tag.

Video 2.1: Demonstration of Wacom EMR pen usage, split-screen functionality, and media playback on the Plimpton Paper8 tablet.

2.3 Display Modes: Black & White and Color

The tablet features a special AG (anti-glare) soft-light processing panel that reduces reflections and eye strain during prolonged use. It supports both a Black & White Reading Mode and a vibrant Color Mode. By default, the screen may display in Black & White. To switch to Color Mode, simply turn off the "Reading Mode" setting in the device's settings. This allows you to optimize the display for reading text or viewing colorful diagrams and images.



Figure 2.2: Plimpton Paper8 Display Modes

2.4 Gemini AI Integration

The latest Google Gemini AI is deeply integrated into the system, supporting voice search, AI notes, translation, and smart organization features. This assists in various scenarios including work, study, and daily life. In split-screen mode, you can use note-taking apps (e.g., Wacom Notes) alongside the Gemini AI assistant. During meetings, the AI assistant can record audio and analyze content in real-time to organize notes. For study, it can provide instant Q&A.

Gemini AIアシスタントで即答

Gemini AIと対話しながら、リアルタイムで検索し情報を収集する



Figure 2.3: Gemini AI Assistant on Plimpton Paper8

2.5 Camera Functionality

The tablet is equipped with a 13-megapixel main rear camera. This allows for daily photography and document scanning. You can quickly scan paper documents and convert them into electronic files. Printed and handwritten text can be converted into editable text with one click. PDF documents can be easily viewed and edited (using Google's scanning app).

高精細カメラ

各種紙文書を素早くスキャンして電子ファイルに変換。印刷体・手書き文字もワンクリックで編集可能なテキストに変換。PDF形式の文書を使用すれば、即時閲覧・注釈・修正が容易です。
(Googleが提供するスキャンアプリを使用する)

13MP



Figure 2.4: 13MP Camera

2.6 Versatile Applications

The Plimpton Paper8 supports a wide range of uses including writing, drawing, learning tools, office drafts, and meeting notes. It also functions as a regular tablet for watching videos, browsing YouTube, and reading e-books. Its compact and lightweight design (approx. 194x143x7.2mm, 350g) makes it highly portable for use on the go, in business meetings, or for creative inspiration.

仕事にも娯楽にも使える



タブレットで即時ノート作成



ドキュメント内容への注釈



電子書籍を読む



映画 & エンターテインメント

Figure 2.5: Diverse Usage Scenarios

3. MAINTENANCE

3.1 Screen Cleaning

To clean the AG anti-glare screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials that could damage the screen coating.

3.2 Wacom EMR Pen Nib Replacement

If the pen nib becomes worn, it can be replaced. Use the included nib remover tool to gently pull out the old nib. Insert a new replacement nib firmly until it clicks into place. Two soft replacement nibs are included in the package.

3.3 Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. For long-term storage, charge the battery to approximately 50% and store it in a cool, dry place. The Wacom EMR pen does not require battery charging.

4. TROUBLESHOOTING

4.1 Device Not Powering On

- Ensure the tablet is sufficiently charged. Connect it to the power adapter and wait a few minutes before attempting to power it on again.
- Press and hold the power button for at least 10-15 seconds to perform a forced restart.

4.2 Pen Not Responding

- Check if the pen nib is properly inserted. If it's loose or worn, replace it with a new one.
- Ensure there are no foreign objects or debris on the screen or pen tip.
- Restart the tablet.

4.3 Wi-Fi Connection Issues

- Verify that your Wi-Fi router is working correctly and other devices can connect.
- Restart the tablet and your Wi-Fi router.
- Forget the network in Wi-Fi settings and reconnect.

4.4 Screen Display Problems (e.g., Black & White)

- If the screen is stuck in black and white, navigate to Settings and ensure "Reading Mode" is turned off.
- Adjust the brightness settings in Quick Settings or Display settings.

5. SPECIFICATIONS

Feature	Description
Brand	Plimpton
Model	Paper8
Operating System	Android 15
Display Type	LED, AG Anti-Glare Liquid Crystal
Screen Size	8 inches
Active Surface Area	8 inches
Connectivity	Wi-Fi 6, Bluetooth 5.4
Pressure Sensitivity	4096 Levels (Wacom EMR Pen)
Special Features	Wacom EMR Pen (no charging required), AG Anti-Glare LCD, Pressure Sensing, Hall Sensor Case Included
Color	Gray
Included Items	EMR Touch Pen, USB-C Cable, 2 Soft Replacement Nibs, 8-inch Tablet, Power Adapter
Manufacturer	Plimpton
Country of Origin	China

6. WARRANTY INFORMATION

The Plimpton Paper8 tablet comes with a **2-year warranty** from the date of purchase. In case of product defects during this period, a new product replacement will be provided. This warranty is offered to ensure customer satisfaction and covers manufacturing defects. Please retain your proof of purchase for warranty claims.

7. SUPPORT

For further assistance, technical support, or inquiries regarding your Plimpton Paper8 tablet, please refer to the official Plimpton website or contact customer service through your point of purchase. Detailed FAQs and troubleshooting guides may also be available online.

Thank you for choosing Plimpton. We hope you enjoy your new Paper8 tablet!

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question