

GOKKYOA GOKKYOA-104

GOKKYOA Toilet Installation Aid (Model GOKKYOA-104) User Manual

1. INTRODUCTION

The GOKKYOA Toilet Installation Aid, Model GOKKYOA-104, is a specialized tool designed to simplify the process of installing, moving, and repairing toilets. This portable and foldable dolly lift assists in achieving precise positioning while significantly reducing the physical strain associated with handling heavy toilets. It is engineered for efficiency and safety in various installation and maintenance scenarios.



Image 1: Overview of the GOKKYOA Toilet Installation Aid highlighting its key benefits.

2. PRODUCT FEATURES

- **Ergonomic Heavy-Lifting Design:** Supports upright or tilt operation to facilitate lifting heavy toilets, reducing back strain. Its hygienic structure minimizes direct contact, promoting a cleaner and safer installation process.
- **Compact Foldable Frame:** Features a space-saving design that folds and locks quickly for convenient storage or transport, ideal for professionals moving between job sites.
- **Durable Stainless Steel Construction:** Constructed from rust-resistant, heavy-duty stainless steel, ensuring reliability and longevity even with frequent professional use in confined spaces.
- **Mess-Free Installation:** Keeps the toilet securely elevated throughout the process, eliminating the need to touch the floor or clean wax rings. Rubber wheels protect floor surfaces during movement.
- **Precision Positioning System:** Equipped with adjustable straps and a pulley lift system, allowing for precise alignment of the toilet with the waste outlet. Quick water connection and easy control ensure safe and accurate placement.





◀ **RUBBER WHEEL**

Silent rubber wheels for smoother and easier use.

▶ **RUBBER PAD**

The purpose of the rubber pad is to prevent the toilet from colliding.

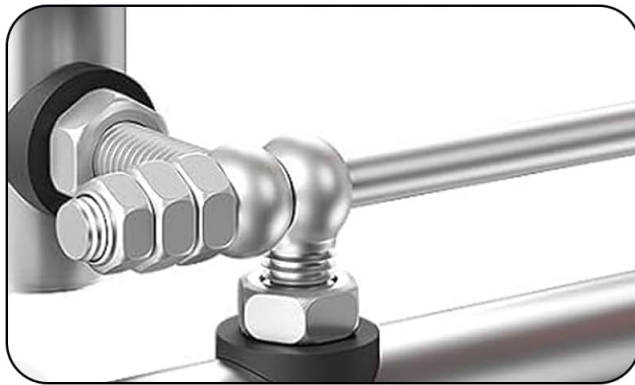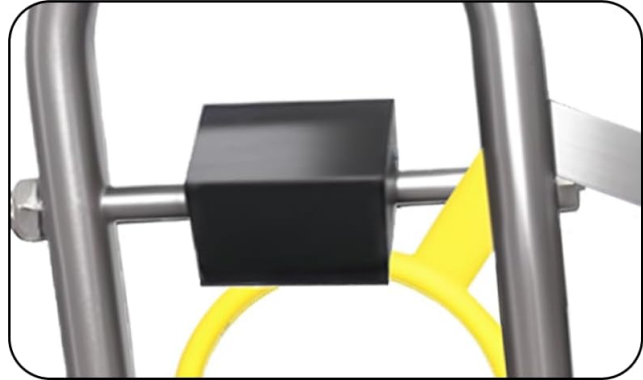

◀ **STAINLESS STEEL**

Corrosion resistance + toughness, double buff protection for durability.

Image 2: Detailed view of key components including rubber wheels, rubber pad, and stainless steel frame.



CONNECTING ROPE

Approximately 2m long connecting rope, securely fastens the toilet, precise positioning, safe and effortless.

POSITIONING RING

It can accurately locate discharge outlets, accommodate various specifications, protect pipes, and is easy to install.



Image 3: The connecting rope securely fastens the toilet, and the positioning ring aids in accurate discharge outlet location.

3. SETUP INSTRUCTIONS

1. **Unfold the Frame:** Carefully unfold the compact frame until it locks into its upright position. Ensure all locking mechanisms are engaged for stability.
2. **Position the Aid:** Place the GOKKYOA Toilet Installation Aid near the toilet to be moved or installed.
3. **Secure the Toilet:** Use the adjustable straps and pulley lift system to securely fasten the toilet to the aid. Ensure the straps are taut and the toilet is balanced on the support frame.
4. **Prepare for Movement:** Verify that the rubber wheels are free to rotate and that the toilet is stable before attempting to move it.

PRODUCT DIMENSIONS

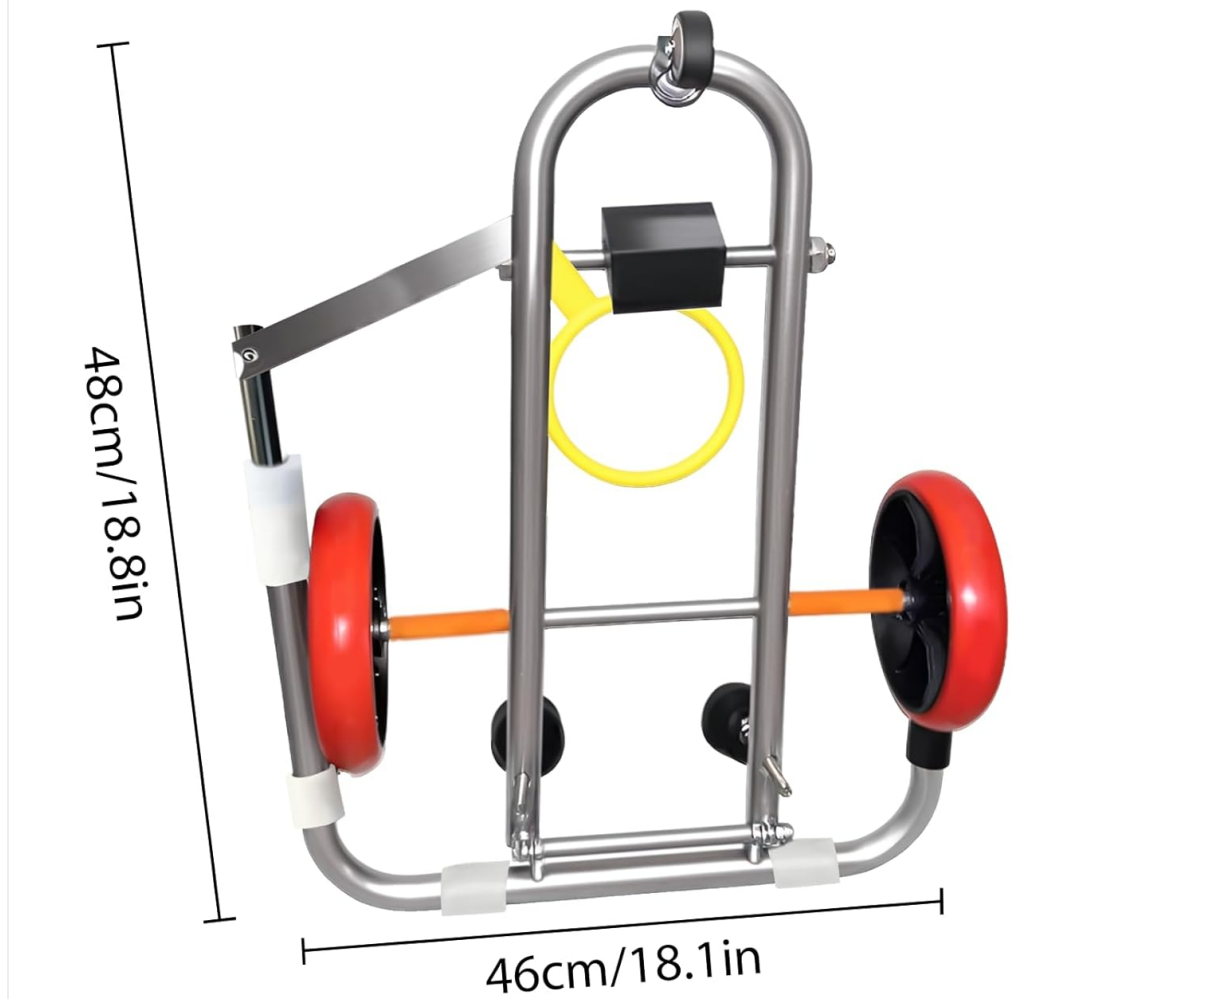


Image 4: Product dimensions for reference during setup and storage.

4. OPERATING INSTRUCTIONS

1. **Lifting the Toilet:** Use the ergonomic design to lift the toilet. The aid allows for both upright and tilted operation, depending on the space and required maneuverability.
2. **Moving the Toilet:** Gently push or pull the aid to move the toilet to the desired location. The rubber wheels are designed to protect floor surfaces during transport.
3. **Precision Positioning:** Utilize the positioning ring to accurately align the toilet with the waste outlet. The adjustable system allows for fine adjustments to ensure a perfect fit.
4. **Lowering and Disconnecting:** Once positioned, carefully lower the toilet into place. After the toilet is securely installed, release the straps and remove the installation aid.

BEFORE



- ❌ Difficult to install
- ❌ Long installation time
- ❌ Installation accuracy is unstable
- ❌ High demand for human resources

NOW



- ✅ Reduce installation difficulty
- ✅ Improve installation efficiency
- ✅ More stable installation
- ✅ Reduced labor costs

Image 5: Illustrates the improved efficiency and reduced effort when using the installation aid.

5. MAINTENANCE

- **Cleaning:** After each use, wipe down the stainless steel frame and rubber components with a damp cloth to remove any debris or residue.
- **Inspection:** Regularly inspect the straps, wheels, and frame for any signs of wear, damage, or corrosion. Replace any worn or damaged parts immediately to ensure safe operation.
- **Storage:** Fold the aid into its compact form and store it in a dry, clean place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Difficulty Moving the Toilet:** Ensure the rubber wheels are clean and free of obstructions. Verify that the toilet is properly balanced on the aid and the straps are not overly tight, impeding movement.
- **Instability During Operation:** Check that the frame is fully unfolded and all locking mechanisms are securely engaged. Ensure the toilet is centered and the straps are evenly tightened.
- **Alignment Issues:** Re-evaluate the placement of the positioning ring. Make small, controlled adjustments using the pulley system to achieve precise alignment with the waste outlet.

- **Strap Slippage:** Ensure the straps are correctly threaded through the ratchet mechanism and are free from damage or excessive wear. Tighten the straps firmly but without over-stressing the toilet.

7. SPECIFICATIONS

Feature	Detail
Brand	GOKKYOA
Model Number	GOKKYOA-104
Material	Alloy Steel, Plastic
Color	Silver
Item Weight	5 Pounds
Load Capacity	300 Pounds
UPC	735167379514
Included Components	Ratchet Strap, Rubber Wheels, Support Frame, Toilet Lift Tool, Transport Wheels

8. WARRANTY AND SUPPORT

The manufacturer provides a warranty for this product. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation included with your purchase or contact GOKKYOA customer support directly. Contact information for support is typically found on the product packaging or the manufacturer's official website.