




[Home](#) » [AUDIO ENHANCEMENT plus](#) » **AUDIO ENHANCEMENT plus LINKING XD Receiver Classroom Microphones User Guide** 

Contents [[hide](#)]

- [1 AUDIO ENHANCEMENT plus LINKING XD Receiver Classroom Microphones](#)
- [2 LINKING XD CLEAR BRIDGE™](#)
- [3 CLEAR CONNECT](#)
- [4 STUDENT ACCESS TO CLEAR CONNECT](#)
- [5 SUPPORTED LANGUAGES](#)
- [6 CLOSING A CLEAR CONNECT SESSION](#)
- [7 TROUBLESHOOTING](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



AUDIO ENHANCEMENT plus LINKING XD Receiver Classroom Microphones



LINKING XD CLEAR BRIDGE™

The XD Clear Bridge™ will need to be linked to a compatible XD Receiver to send audio to CLEAR Connect™ and the accompanying translation service.

1. Use the included USB-C cable to connect the XD Clear Bridge to the teacher computer. Ensure Input Audio in the computer settings is set to XD Audio Bridge
2. Press the Link button on the front of the amplifier or receiver (look for the blinking yellow LED).



3. With the XD Clear Bridge connected to a USB port on the computer, press the Link button on the back of the unit. The XD Clear Bridge LED will slowly blink Green when plugged into a USB Port. After the Link button is pressed the XD Clear Bridge will quickly blink green until the link is completed.




4. Successful linking will produce a beep through the system, and on the front of the amplifier you will see an additional green LED, as well as a solid green LED on the rear of the XD Clear Bridge.



CLEAR CONNECT

Once your XD Clear Bridge and XD Microphone units are both linked with a compatible XD Receiver unit, you are ready to fully utilize the CLEAR Connect translation service.


1. Make sure your XD Teacher Microphone and any additional microphones are linked to the classroom's XD Receiver. For directions on how to link microphones, please see their associated quick start guides, available at <https://audioenhancement.com/downloads>.
2. To begin a CLEAR Connect session, visit <https://aeclearconnect.com> and log in with the credentials provided. (Figure 1)

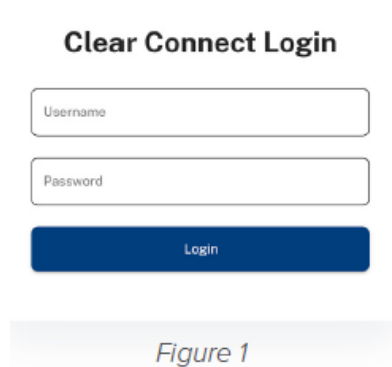

Clear Connect Login

Figure 1

3. Once at the Teacher Experience screen, enter a session name for your students, and select the language you will be instructing in.
4. Press Start Translation.
5. You will be given a session code (Figure 2). This is the code that students will use to access the translated instructions.

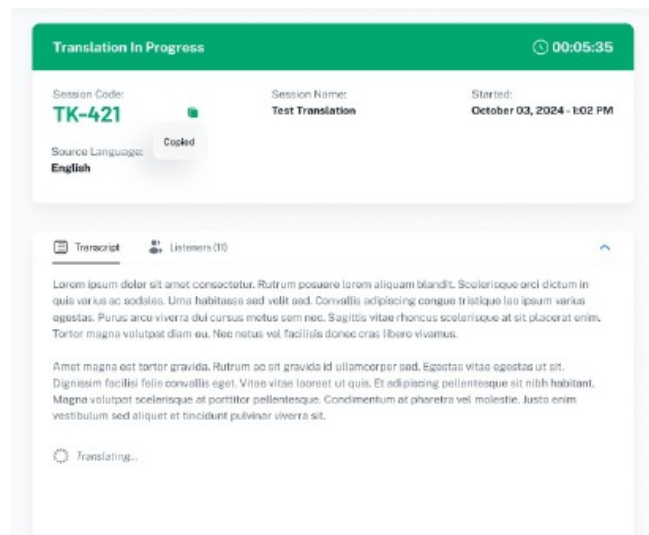

Translation In Progress ⌚ 00:05:35

Session Code: TK-421 <small>Source Language: English</small>	Session Name: Test Translation	Started: October 03, 2024 - 1:02 PM
---------------------------------------------------------------------------	------------------------------------------	-----------------------------------------------

Copied

Transcript Listeners (1)

Lorem ipsum dolor sit amet consectetur. Rutrum posuere lorem aliquam blandit. Sclerisque orci dictum in quis varius ac sodales. Ulla habitasse sed velit sed. Convallis adipiscing congue tristique leo ipsum varius egestas. Purus arcu viverra dul cursus moris sem nec. Sagittis vitae rhoncus scelerisque at sit placerat enim. Tortor magna volutpat diam eu. Nee netus vel, facilisis donec oras libero vivamus.

Amet magna est tortor gravida. Rutrum ac sit gravida id ullamcorper sed. Egestas vitae egestas ut sit. Dignissim facilisi felis convallis eget. Vitae vitae laoreet ut quis. Et adipiscing pellentesque sit nibh habitant. Magna volutpat scelerisque at porttitor pellentesque. Condimentum at pharetra vel molestie. Justo enim vestibulum sed aliquet et tincidunt pulvinar viverra sit.

⌚ Translating...

Figure 2

NOTE

On first usage, your browser may prompt you to allow the app to use the XD Clear Bridge as a microphone. Click the Allow while visiting the site button to ensure that the app always uses the microphone without prompting.

STUDENT ACCESS TO CLEAR CONNECT

Students can access CLEAR Connect through <https://aeclearconnect.live> Once there, students will be able to enter their names and select their desired translation language, along with entering the Session Code provided by the instructor. Click Join Translation Session once all information is entered to access the translated instructions. (Figure 3)

Figure 3

The Student Experience (Figure 4) is where students will see session information, as well as the translated teacher instruction. Students can toggle between their native language and instructor's language, read the transcription provided, as well as mute the translated audio, using the speaker icon.

Figure 4

SUPPORTED LANGUAGES

- Afrikaans (South Africa)
- Arabic
- Basque (Spain)

- Bengali (India)
- Bulgarian (Bulgaria)
- Catalan (Spain)
- Czech (Czech Republic)
- Danish (Denmark)
- Dutch (Belgium)
- Dutch (Netherlands)
- English (Australia)
- English (India)
- English (UK)
- English (US)
- Filipino (Philippines)
- Finnish (Finland)
- French (Canada)
- French (France)
- Galician (Spain)
- German (Germany)
- Greek (Greece)
- Gujarati (India)
- Hindi (India)
- Hungarian (Hungary)
- Icelandic (Iceland)
- Indonesian (Indonesia)
- Italian (Italy)
- Japanese (Japan)
- Kannada (India)
- Korean (South Korea)
- Latvian (Latvia)
- Lithuanian (Lithuania)
- Malay (Malaysia)
- Malayalam (India)
- Marathi (India)
- Polish (Poland)
- Portuguese (Brazil)

- Portuguese (Portugal)
- Punjabi (India)
- Romanian (Romania)
- Russian (Russia)
- Serbian (Serbia)
- Slovak (Slovakia)
- Spanish (Spain)
- Spanish (US)
- Swedish (Sweden)
- Tamil (India)
- Telugu (India)
- Thai (Thailand)
- Turkish (Turkey)
- Ukrainian (Ukraine)
- Vietnamese (Vietnam)

CLOSING A CLEAR CONNECT SESSION

All CLEAR Connect sessions automatically close after 90 minutes of translation, however, an instructor can close a session whenever necessary by using the Close Session button (Figure 5) in the top right corner of the interface. Once a session is closed, all users will be removed, and a new CLEAR Connect session will need to be started to continue.

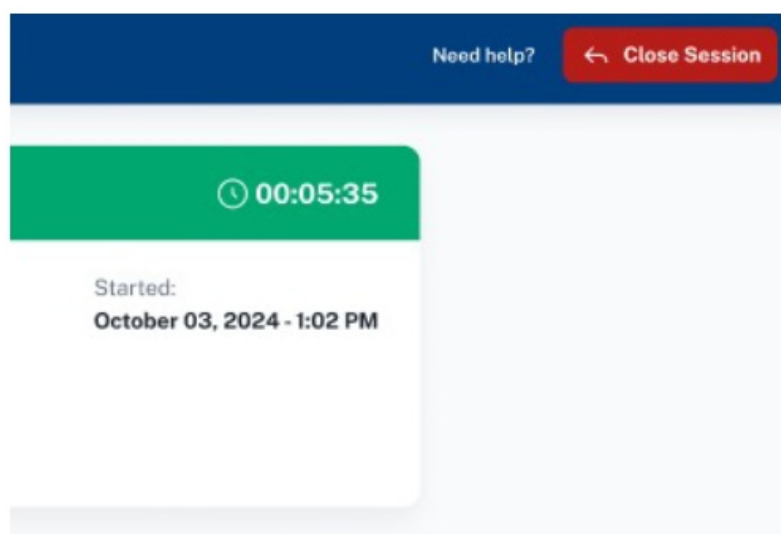


Figure 5

All CLEAR Connect sessions automatically close after 90 minutes of translation, however, an instructor can close a session whenever necessary by using the Close Session button (Figure 5) in the top right corner of the interface. Once a session is closed, all users will be removed, and a new CLEAR Connect session will need to be started to continue.

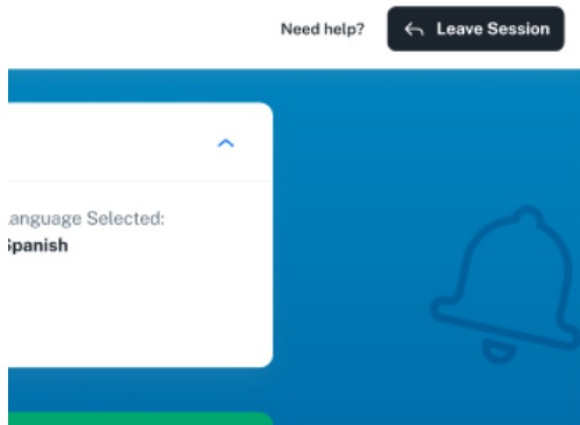


Figure 6

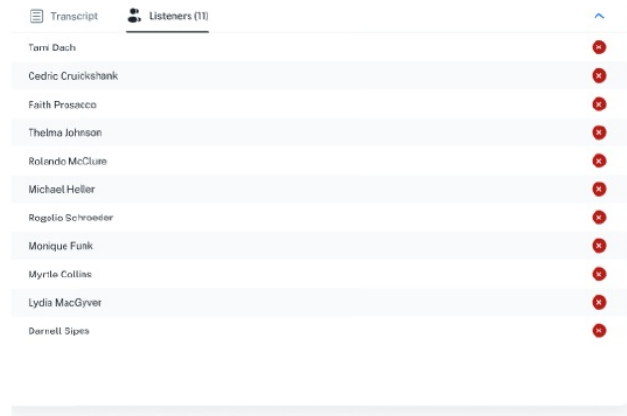


Figure 7

TROUBLESHOOTING

CLEAR CONNECT NOT RECOGNIZING XD CLEAR BRIDGE

Ensure the USB connection from the XD Clear Bridge to your computer is active, and in Windows, navigate to Settings, then Sound. Locate the device labeled Digital Audio Bridge, and ensure that it is active and set as an Audio Input Device. The LED indicator will be green if the device is correctly connected and functioning.

NETWORK AND CONTENT FILTERING REQUIREMENTS


To ensure seamless connection to CLEAR Connect, the following internet addresses must be available from your staff and student devices and networks. Any network restrictions or content filtering services must be configured to allow access to these sites.

- *.audioenhancementplus.com
- *.aeclearconnect.com
- *.aeclearconnect.live

*Audio Enhancement’s CLEAR Connect is designed with privacy and security as a top priority. The platform does not capture, store, or retain any student data once a session is closed. All data associated with the session is automatically deleted upon closure, ensuring that no personally identifiable information (PII) is stored. This commitment to data privacy aligns with our dedication to maintaining a secure and compliant digital environment for educators and students.


AudioEnhancement.com · 800.383.9362

Documents / Resources


	AUDIO ENHANCEMENT plus LINKING XD Receiver Classroom Microphones [pdf] User Guide LINKING XD Receiver Classroom Microphones, LINKING XD, Receiver Classroom Microphones, Classroom Microphones, Microphones
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

 AUDIO ENHANCEMENT

plus

 AUDIO ENHANCEMENT plus, Classroom Microphones, LINKING XD, LINKING XD Receiver Classroom Microphones, Microphones, Receiver Classroom Microphones

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.