



audio-technica Omnidirectional Condenser Boundary Microphone User Manual

[Home](#) » [Audio-Technica](#) » audio-technica Omnidirectional Condenser Boundary Microphone User Manual 



ES9450/FM5 Omnidirectional Condenser Boundary Microphone User Manual

Contents

- [1 Safety precautions](#)
- [2 Notes on use](#)
- [3 Using the product](#)
- [4 Dimensions](#)
- [5 Specifications](#)
- [6 Polar pattern/Frequency response](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Safety precautions

Although this product was designed to be used safely, failing to use it correctly may result in an accident. To ensure safety, observe all warnings and cautions while using the product.

Cautions for the product

- Do not subject the product to strong impact to avoid malfunction.
- Do not disassemble, modify or attempt to repair the product.
- Do not handle the product with wet hands to avoid electric shock or injury.
- Do not store the product under direct sunlight, near heating devices or in a hot, humid or dusty place.

Notes on use

- Do not swing or pull with the cable connected to the microphone to prevent the microphone from becoming disconnected or damaged.
- Do not wind the cable around the rack or allow the cable to become pinched.
- The microphone should be placed on a flat, unobstructed mounting surface.
- Placing any object on a surface (such as a conference table) before its finish is fully cured may result in damage to the finish.

Using the product

Included accessories

1



2




3




1. Rubber isolator (1)
2. Rubber isolator (2)
3. Nut

How to mount the product


Table/ceiling hole size (when using isolators)

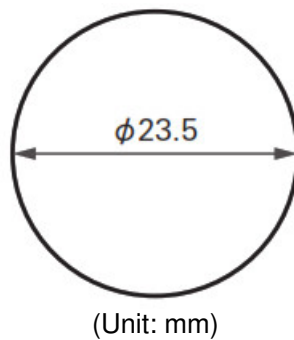

Table/ceiling hole size (when not using isolators)

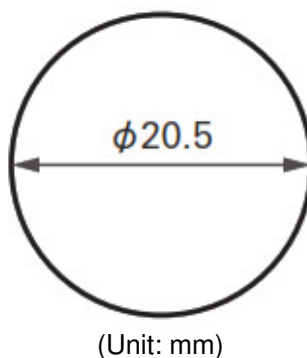





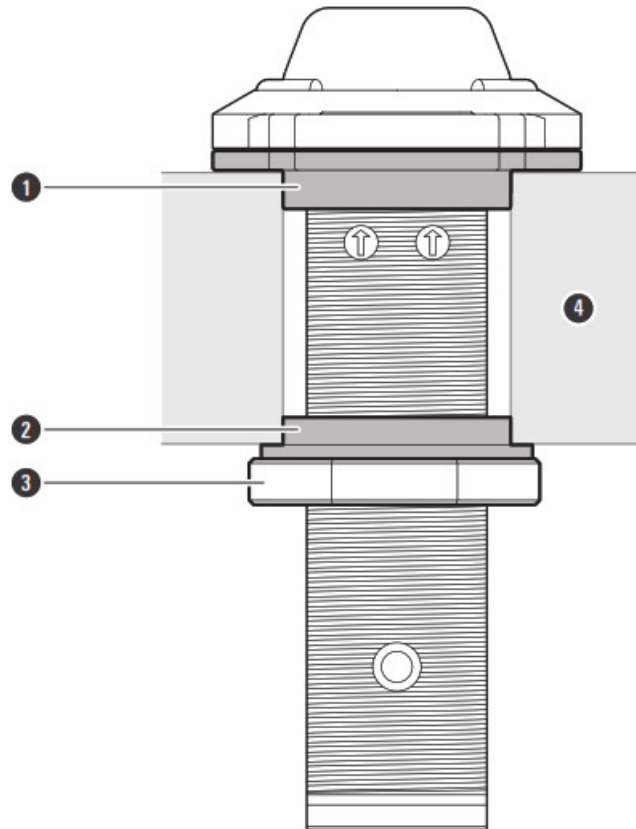





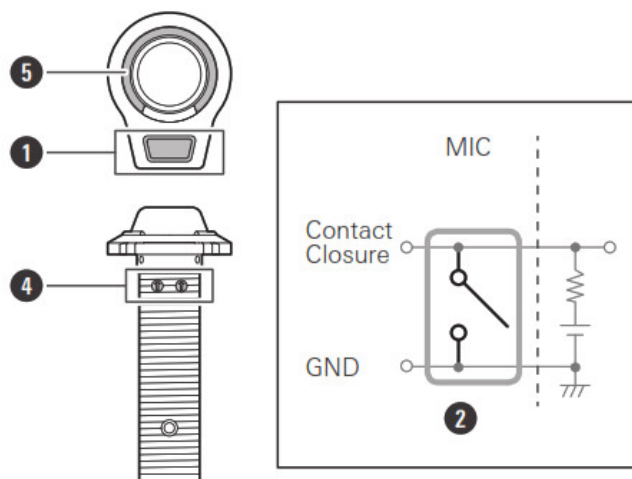

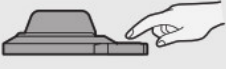




Example: Mounting on a table



1. Rubber isolator (1)
2. Rubber isolator (2)
3. Nut
4. Table

Switch setting and functions



1. Action	2. Contact closure status	3. Audio status	4. LED color	5. LED status
			LED COLOR MIC OFF MIC ON  	
			MIC OFF MIC ON  	
			MIC OFF MIC ON  	 


LED color

▼	1	2	3
OFF	RED	GREEN	YELLOW

4	5	6	7
BLUE	MAGENTA	CYAN	WHITE

Connection procedure


The output connector is an XLR-M type with polarity as shown in the figure below.

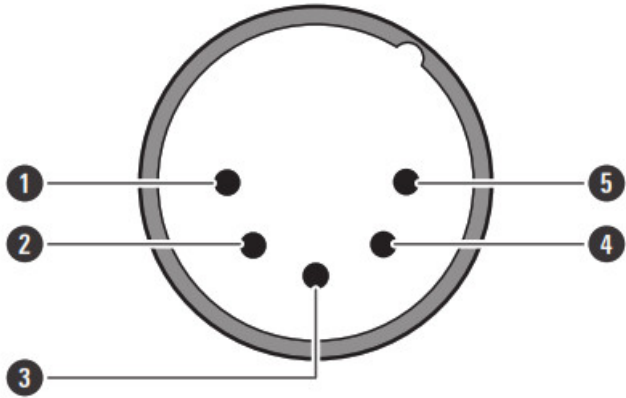

1. PIN1 (ground)
2. PIN2 (hot)
3. PIN3 (cold)

- 4. Contact closure
- 5. LED control

Dimensions

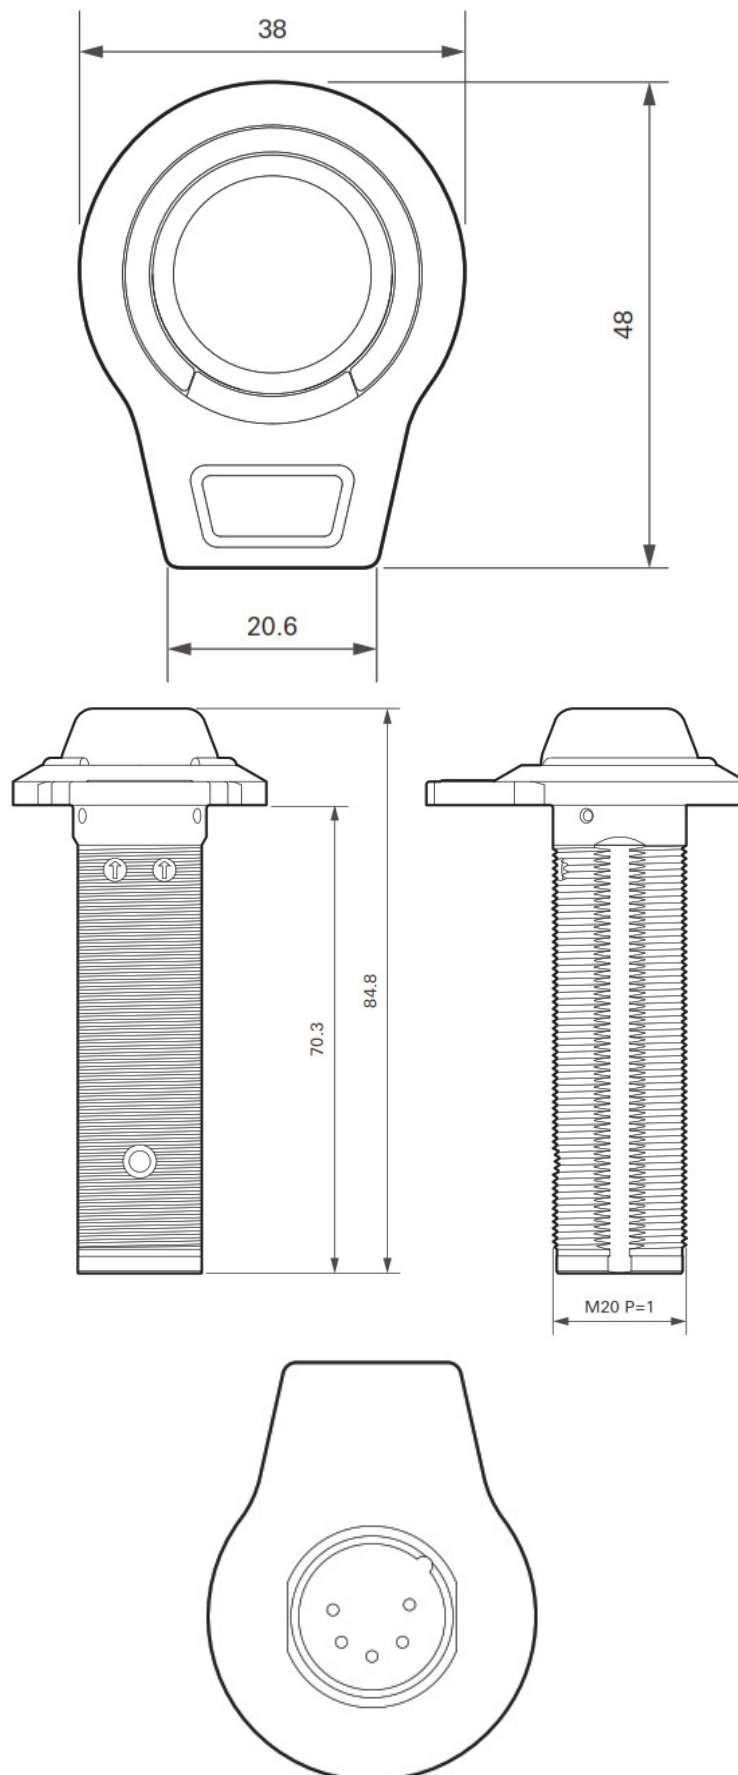


Specifications

Element	Fixed-charge back plate, permanently polarized condenser
Polar pattern	Omnidirectional
Frequency response	60 to 15,000 Hz
Open circuit sensitivity	-33 dB (0 dB = 1 V/Pa, 1 kHz)
Impedance	60 ohms
Maximum input sound level	130 dB SPL (1 kHz at 1% THD)
Dynamic range	109 dB (1 kHz at Max SPL)
Signal-to-noise ratio	73 dB (1 kHz at 1 Pa, A-weighted)
Phantom power requirements	11-52 V DC, 6.8 mA
Weight	59 g (2.1 oz)
Dimensions	38 mm (1.50") × 48 mm (1.89") × 84.8 mm (3.34") (W × D × H)
Output connector	Integral 5-pin XLR-M type
Included accessories	Rubber isolator (2 types), Nut


- 1 Pascal = 10 dynes/cm² = 10 microbars = 94 dB SPL
- For product improvement, the product is subject to modification without notice.

Polar pattern/Frequency response

Polar pattern

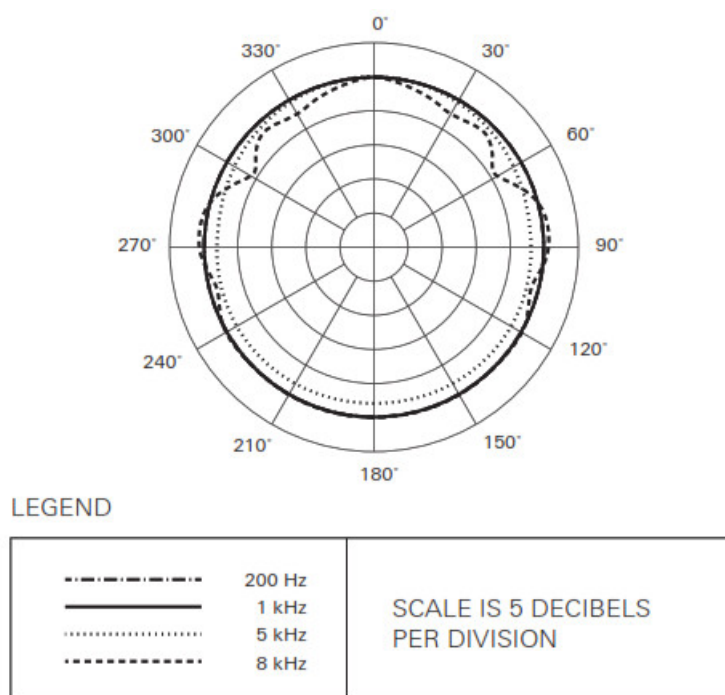

Frequency response

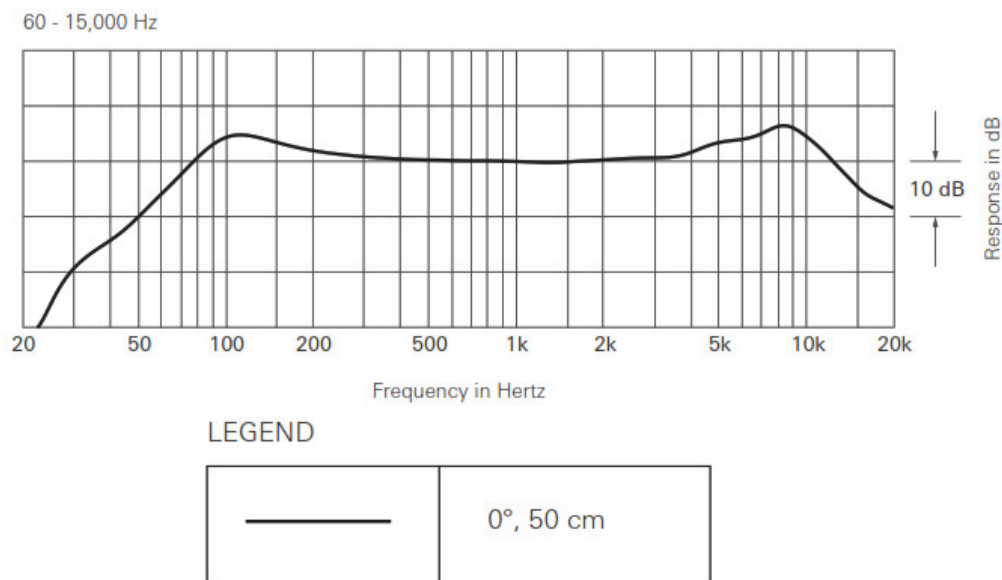

Audio-Technica Corporation

2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan www.audio-technica.com

©2021 Audio-Technica Corporation Global Support Contact: www.at-globalsupport.com

142316943-02-01

ver.1 2021.02.01

Documents / Resources

<p>ES9450FM5 Omnidirectional Condenser Boundary Microphone User Manual</p>	audio-technica Omnidirectional Condenser Boundary Microphone [pdf] User Manual Omnidirectional Condenser Boundary Microphone, ES9450, FM5
--	--