



# AUTEL MaxiPro MP808S Diagnostic Scan Tool Kit User Guide

[Home](#) » [AUTEL](#) » [AUTEL MaxiPro MP808S Diagnostic Scan Tool Kit User Guide](#) 



## Contents

- [1 Quick Reference Guide](#)
  - [1.1 MaxiPRO MP808S KIT](#)
  - [1.2 Getting Started](#)
  - [1.3 Software Update](#)
  - [1.4 Wireless Data Printing](#)
    - [1.4.1 Print via PC](#)
    - [1.4.2 Print via APP](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Quick Reference Guide

MaxiPRO MP808S KIT

Email: [sales@autel.com](mailto:sales@autel.com)


Web: [www.autel.com](http://www.autel.com)

Thank you for purchasing this Autel tool. Our tools are manufactured to a high standard and — when used according to these instructions and properly maintained — will provide years of trouble-free performance.

### Getting Started



**IMPORTANT:** Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.

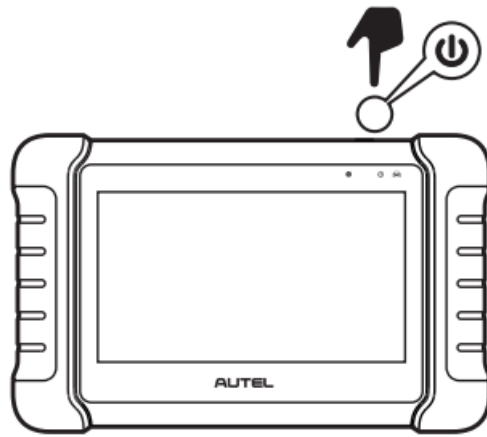


- Press and hold the **Lock/Power** button to turn on the tablet.
- Connect the female adapter of the main cable to the tablet and tighten the captive screws.

2




- Scan the QR code above to visit our website at [pro.autel.com](http://pro.autel.com).
- Create an Autel ID and register the product with its serial number and password.

3

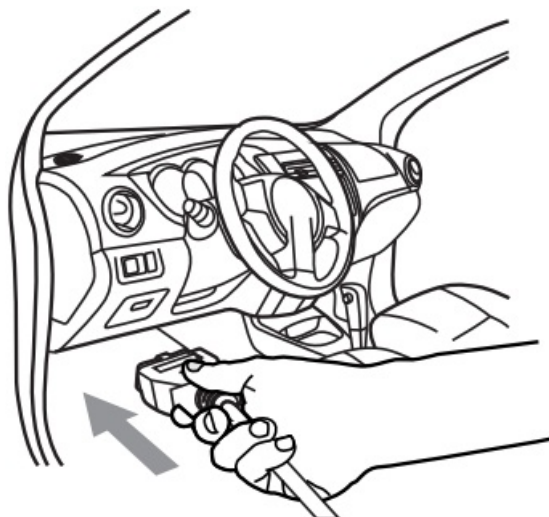

- Connect the 16-pin male adapter of the main cable to the vehicle's DLC, which is generally located under the vehicle dashboard.

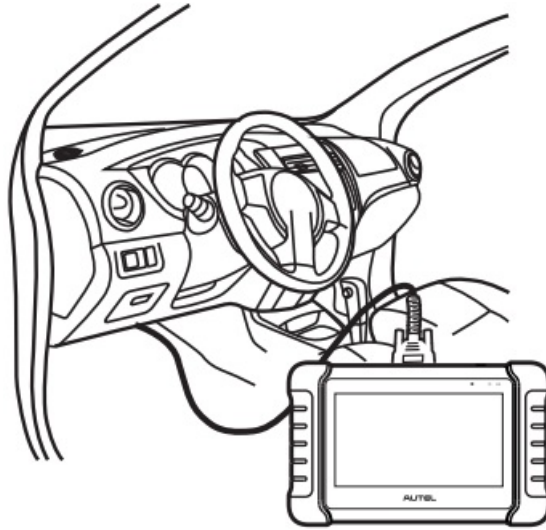

- Your tablet is now ready for use.



**Please download the Maxi PC Suite software from [www.autel.com](http://www.autel.com) > Support > Downloads > Autel Update Tools and install it on your computer.**

#### Software Update



**IMPORTANT:** Make sure the tablet is connected to the Internet and has sufficient battery or is connected to a power source.

- Tap the **Update** application button from the Diagnostics Job Menu and the Update screen will display.
- Check for all available updates:
  - a) if you want to update all the items, tap the **Update All** button;
  - b) if you want to update one or some of the items, tap the **Update** button on the right column of the specific item(s).
- Tap **Pause** to suspend the updating process. Tap **Continue** to resume.
- When the updating process is completed, the software will be installed automatically. The previous version will be replaced.

#### Wireless Data Printing

##### Print via PC



**IMPORTANT:** Make sure the tablet is connected to the same network as the computer, either via Wi-Fi or LAN, and that the computer is connected to a printer.

1. Run the **MaxiSys Printer** on the computer. This was installed along with the installation of the **Maxi PC Suite** software.
2. Click **Test Print** to make sure the printer is working properly.
3. Tap **Print** on the toolbar of the tablet. A temporary document will be created and sent to the computer.

- If the **Auto Print** option in the MaxiSys Printer is selected, the MaxiSys Printer will print the received document automatically.
- If the **Auto Print** option is not selected, click **Open PDF File** to view all the temporary files. Select the file(s) you want to print and click **Print**.

#### Print via APP

If a Wi-Fi printer is available, please purchase a Wi-Fi printer APP and install it onto your tablet. To print a file, simply click on the **Print** button of a saved file on the tablet.

For service and support, please contact us.


---

<http://pro.autel.com> / [www.autel.com](http://www.autel.com) / [support@autel.com](mailto:support@autel.com)

0086-755-2267-2493 (China HQ) / 1-855-AUTEL-US (288-3587) (North America) / 0049 (0) 6103-2000520 (Europe) / +045 5948465 (APAC) / +971 585 002709 (IMEA)

© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.

## Documents / Resources

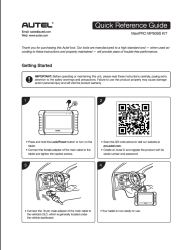	<p><a href="#">AUTEL MaxiPro MP808S Diagnostic Scan Tool Kit</a> [pdf] User Guide MaxiPro MP808S, MaxiPro MP808S Diagnostic Scan Tool Kit, Diagnostic Scan Tool Kit, Scan Tool Kit, Tool Kit</p>
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------