



AUTOMATE Pulse Hub 2 URC Integrated System User Guide

[Home](#) » [AUTOMATE](#) » AUTOMATE Pulse Hub 2 URC Integrated System User Guide 

Contents

- [1 AUTOMATE Pulse Hub 2 URC Integrated System](#)
- [2 Troubleshooting](#)
- [3 FCC Notice:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

atomi smart

AUTOMATE Pulse Hub 2 URC Integrated System




Get the app

Download the atomic smart app from the App Store or Google Play.

Register: Follow the on-screen instructions and register an account.

1

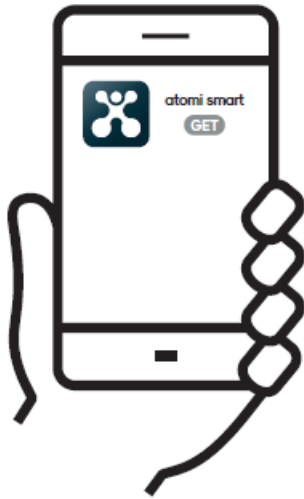

Get the app

Download the atomi smart app from the App Store or Google Play.

2



Register

Follow the on-screen instructions and register an account.

Add your Sma~ Bridge

Press "Add Device" or the "+" sign and choose the Sma~ Bridge to install from the device list. Skip to Step 6 if your Sma~ Bridge was already added to the app.

Included with the Atomi Sma~ WiFi LED Pathway Lights Turn your phone's Bluetooth ON Connect the Sma~ Bridge to the USB wall charger and plug it into the outlet.

Press "Continue" on the atomi sma~ app.

For a smooth connection, do not add the Sma~ Pathway Lights now. You will be prompted to do so on


3



Add your Smart Bridge*

Press "Add Device" or the "+" sign and choose the Smart Bridge to install from the device list.


4

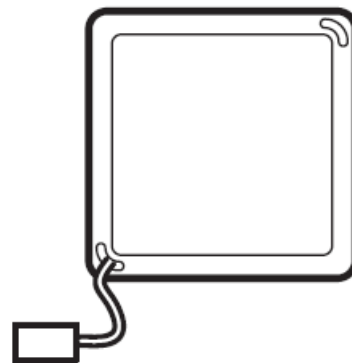

Turn your phone's Bluetooth ON

Connect the Smart Bridge to the USB wall charger and plug it into the outlet.
Press "Continue" on the atomi smart app.

Select the right network Enter your WiFi password and "Confirm". Make sure you're connected to a 2.4GHz WiFi network(atomi Sma~ can't connect to 5GHz networks).Turn on the Sma~ Pathway Lights Then open the Sma~ Bridge device that you added on the atomi sma~ app home screen.Add your Sma~ Pathway Lights Press "Add new device".If you have already added the device on Step 4, press "Add existing device".Follow the on-screen instructions.

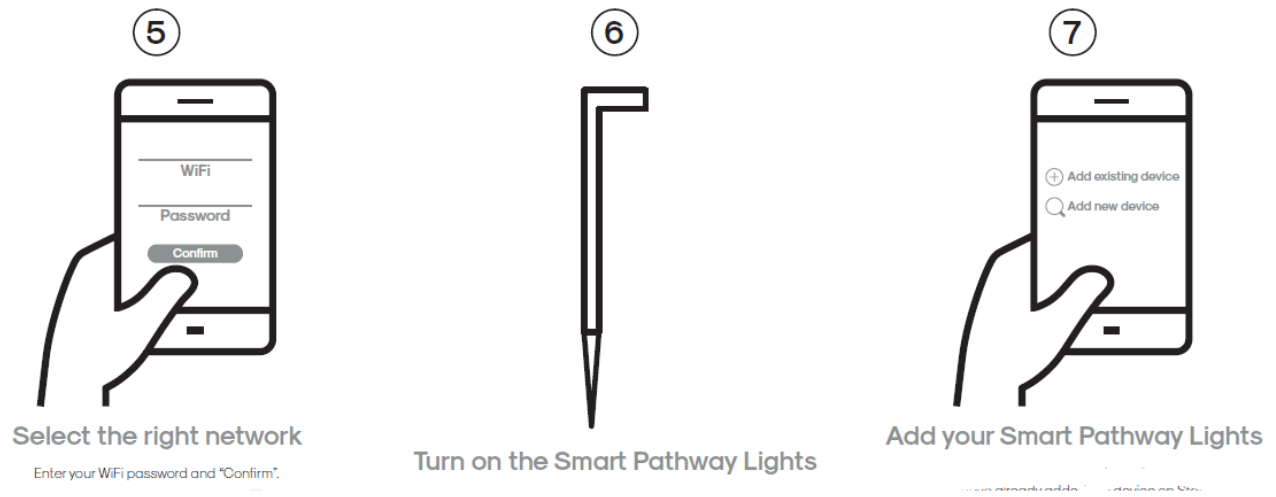

Troubleshooting

Sma~ WiFi LED Pathway Lights Extension Kit I do not have a Sma~ Bridge. The Atomi Sma~ Pathway Lights Extension Kit will not work alone. It must be paired with the Atomi Sma~ WiFi LED Pathway Lights 4-Pack set that includes the Sma~ Bridge. The app can't find my sma~ device. For Sma~ Bridge: Make sure that your phone's Bluetooth is turned ON and the permission settings are allowing the app to connect via Bluetooth. For Sma~ Pathway Lights: Press and hold the "Power" button until the light starts flashing to reset your device". My WiFi network doesn't appear in the atomi sma~ app. Use your sma~phone to confirm that you have at least two WiFi bars in the vicinity of your atomi sma~ device. If not, move your atomi sma~ device closer to your router. (The list will refresh every 10 seconds). Cannot connect to my WiFi network. Make sure that you have entered the correct WiFi password during setup. Check if there are problems with your internet connection. If the WiFi signal is too weak, reset your WiFi router and try again.

My atomi sma~ device appears as "Unavailable" in the app. Refresh the device list. My atomi sma~ app is frozen. Force quit and re-launch the atomi sma~ app. I just replaced my router. To reset the WiFi without losing your atomi sma~ devices settings, hold down the power button and wait for the LED to change from amber to blinking white, then release. When the LED begins to alternate white and amber, follow steps 3-5 to associate your atomi sma~ device with your new network.

I'm still having trouble!

WiFi networks come in a lot of shapes and sizes with many quirks of their own. It doesn't mean your atomi sma~ device is malfunctioning. If problems persist, please try these steps, in this order:

1. Force quit and re-launch the atomi sma~ app. Check to see if this fixes the issue.
2. Unplug your atomi sma~ device and plug it back in. Check to see if this fixes the issue.
3. Unplug your router and plug it back in. Check to see if this fixes the issue.
4. Delete and reinstall the atomi sma~ app. Check to see if this fixes the issue.

Still can't connect?Need assistance?

Our friendly customer service team will work hard to put a smile back on your face. Here's how we can connect. 1-800-757-1440 Mon-Fri 9:00-5:00 EST (US)

Welcome to the atomi sma~ family!

We know you will love our products so much that we are giving you an exclusive 15% off your next purchase on atomisma~.com.1. The coupon is only valid on the atomi sma~ website www.atomisma~.com. A valid code must be entered at the checkout page in order to redeem the promotion. Customers can only redeem one time at checkout. Customers can only use the promo code once. atomi sma~ reserves the right to cancel or modify any order, or revoke the use of the promo code for any reason. Unless otherwise stated, promo codes are not valid in conjunction with other promotions or discounts. Additional terms and conditions may be specified in relation to

specific promo code (for example, duration, eligibility, discount amount and products covered), and will govern the use and redemption of those vouchers.8. Promo code is not exchangeable for cash. atomi sma™ will not be liable and/or be required to offer replacement codes, discounts, credits, cash or otherwise compensate customers for: discontinued or canceled promo code; improper use of, or inability to redeem, a promo code; or the inability to redeem promo code due to technical issues.


FCC Notice:

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Warning

This product can expose you to chemicals including Lead, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov. For questions or concerns, email us at support@atomiusa.com Manufactured and marketed by Atom Inc. 10 West 33rd St., New York, NY 10001 atomi™ is a trademark of Atom Inc. atomi sma™ is a registered trademark of Atom Inc. Designed by atomi in New York. Made in China. Two-year limited warranty from the date of purchase against defects in material and workmanship.

Documents / Resources

	AUTOMATE Pulse Hub 2 URC Integrated System [pdf] User Guide Pulse Hub 2, URC Integrated System, Pulse Hub 2 URC Integrated System
---	--

References

- [Rollease Acmeda - Precision in Motion](#)
- [Automate Shades](#)