



bt5 technologies FunMouseAG1 with TX1 Character and PHOTO FRAME User Manual

[Home](#) » [bt5 technologies](#) » bt5 technologies FunMouseAG1 with TX1 Character and PHOTO FRAME User Manual 

bt5 technologies FunMouseAG1 with TX1 Character and PHOTO FRAME User Manual



Scan the QR Code to download the complete User Manual



Read Instruction before using this product

Contents

- [1 Quick Setup](#)
- [2 DPI Level changing](#)
- [3 Lighting Modes](#)
- [4 Shipping Sticker](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Quick Setup

1. Turn on your computer




2. Connect your FunMouse AG1 to the USB port of the computer



3. The message “Installing device driver software” will appear. If it does not appear -or the computer does not

detect the mouse see the User Manual

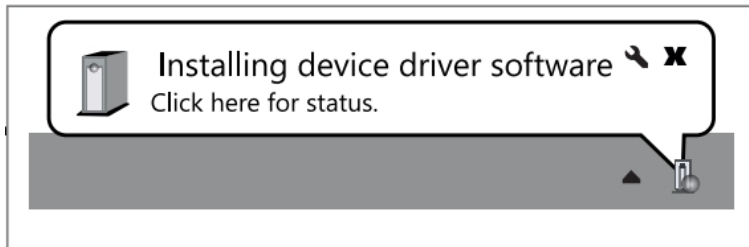


4. Once the driver installation is complete, your FunMouse is ready to use

Congrats, enjoy your FunMouse!

DPI Level changing


Push the DPI button on the top of the mouse for choosing and selecting the DPI level. The BT5 logo on the top cover will illuminate in a different color for five seconds according to the DPI level selected: 400 DPI (red), 800 DPI (yellow), 1600 DPI (green), 3200 DPI (blue) and, 6200 DPI (purple).

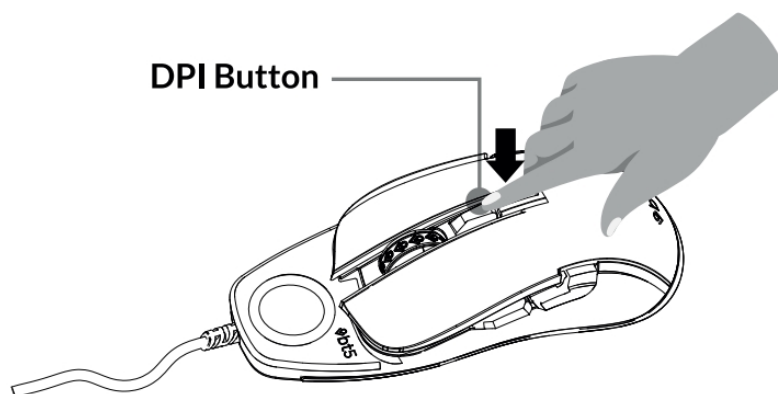

Lighting Modes

Push and release simultaneously the scroll wheel button and the left-back button for selecting the following lighting modes:

- Single color (red)
- Breathing
- Spectrum
- Rainbow
- Illumination Off

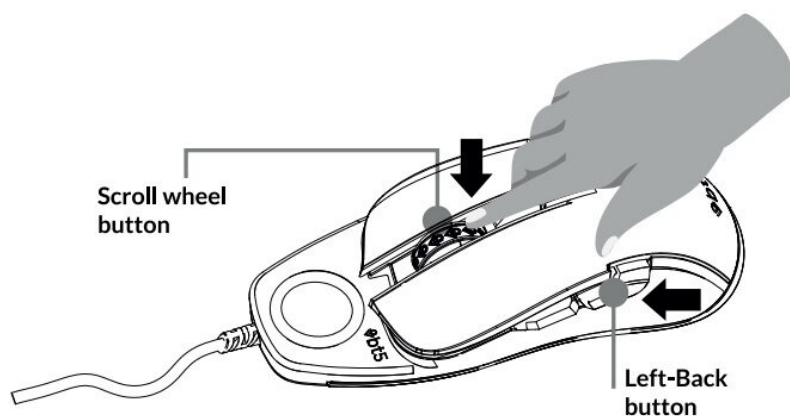

Shipping Sticker



Remove the shipping sticker

BT5 characters will stay connected to the FunMouse while playing video games.

Customize your FunMouse with your preferred BT5 characters and enjoy the game!



! WARNINGS: CHOKING HAZARD – Small parts are not intended for children under 3 years old or any individuals who have the tendency to place inedible objects in their mouths.



MAGNET COMPONENT– The collectibles contain a small magnet glued inside the base. If a magnet is swallowed it can stick together or with other metallic pieces inside the body causing serious infections and possible death. Seek immediate medical attention if one or more magnets are swallowed or inhaled.

THE BT5 CHARACTERS AND PHOTO FRAME ARE NOT TOYS

www.bt5.com

Documents / Resources



[bt5 technologies FunMouseAG1 with TX1 Character and PHOTO FRAME](#) [pdf] User Manua

| FunMouseAG1 with TX1 Character and PHOTO FRAME, Character and PHOTO FRAME, Fun MouseAG1 with TX1, FunMouseAG1