



Home » CALLTOU » CallTou SW11 Series Wireless Watch Calling System Instruction Manual 📆



#### Contents [ hide ]

- 1 CallTou SW11 Series Wireless Watch Calling System
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 Safety Precautions
- 5 How does the system work with a caregiver?
- 6 What is in the Box
- 7 Features
- 8 Learn About Products
- 9 Operational Guidance
- 10 Installation Guide
- 11 Charge the Provided Battery
- 12 Technical Parameters
- 13 Question & Answer
- 14 Documents / Resources
  - 14.1 References



**CallTou SW11 Series Wireless Watch Calling System** 



## **Product Specifications**

• Model: SW11

Buttons Model: Q-01A/Q-01ABWireless Range: 1000ft/300m

Waterproof Rating: IP67

• Features: 4 Ringtone Adjustable, Prompt Time & Date, Touch Key

# **Product Usage Instructions**

# **Safety Precautions:**

The product manual contains important safety information. Follow these precautions to ensure safe use:

- Do not place the product near flammable, explosive, or hazardous objects.
- Avoid disassembling the product as it may result in safety hazards.
- Avoid dropping or subjecting the product to strong impacts to prevent failure.
- Use appropriate detergents for cleaning to prevent discoloration or deformation of the product.
- If the product shows any abnormalities like overheating or strange smells, stop using it

immediately.

• Supervise children to prevent them from playing with the product.

### How does the system work with caregivers?

The system is designed for elderly care and sends signals to caregivers for bed alarms, fall prevention, hospice care, and home nursing.

#### **Contents:**

- Call Button
- Double-Sided Adhesive Tape
- Auxiliary Tool
- Manual
- AC Plug
- Screwdriver
- Charging Cable
- Lanyard

#### Features:

The SW11 Smart Call Watch Receiver features a waterproof design with a wireless range of 1000ft/300m. It includes a touch key, 4 ringtone options, and adjustable prompt times.

## **Operational Guidance:**

#### Add Call Buttons/Transmitters:

- 1. Press and hold the Setup key.
- 2. Access the Administrator menu.
- 3. Select "Add Buttons".
- 4. Edit the transmitter number by pressing the Setup key and entering digits.
- 5. Press the transmitter button to confirm.

#### **Installation Guide:**

Follow the provided manual for step-by-step installation instructions to set up the wireless watch calling system.

### **Charge the Provided Battery:**

Utilize the charging cable and AC plug to charge the provided battery for uninterrupted usage of the product.

Receiver Model: SW11

**Buttons Model:** Q-01A/Q-01AB

## **Safety Precautions**

The instruction manual contains important information to prevent harm to the user and other people and damage to property, and to ensure safe and correct use of the product. Please thoroughly understand the following contents (displays and graphic symbols)



# **Caution**



Do not place the product in or near an inflammable, explosive, or hazardous object.



Do not disassemble the product. Disassembly may result in a risk of safety hazards.



Do not drop or subject it to strong impact. It will be the cause of the failure.



Do not use chlorine-based or acidic detergents for cleaning. The main body may become discolored or deformed, or toxic gases may be generated, which may harm your health.



Do not be mixed with other commercial wastes for disposal.



If you feel any abnormality such as getting hot or smelling strange, please stop using it immediately. It may cause fire or electric shock.



Children should be supervised to ensure that they do not play with the appliance.

# How does the system work with a caregiver?

Designed for elderly care, it sends a signal to caregivers.




Bed Alarms and Fall Prevention






Hospice Care, Home Nursing

What is in the Box

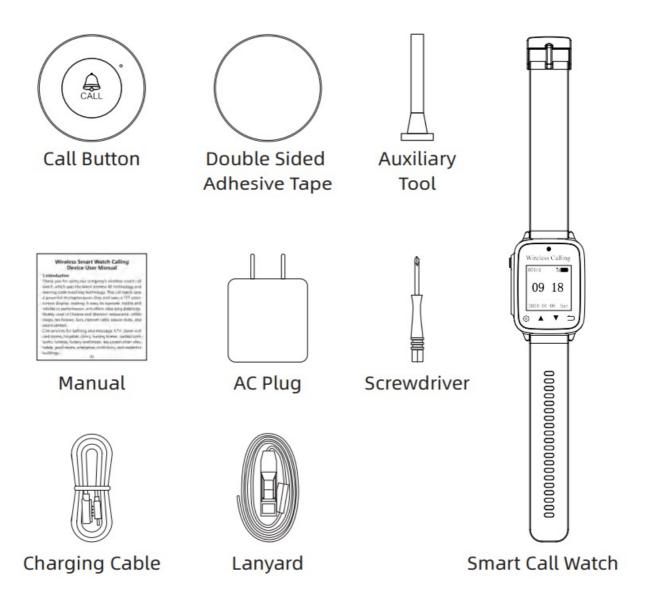

# **Features**

#### Watch Receiver-SW11

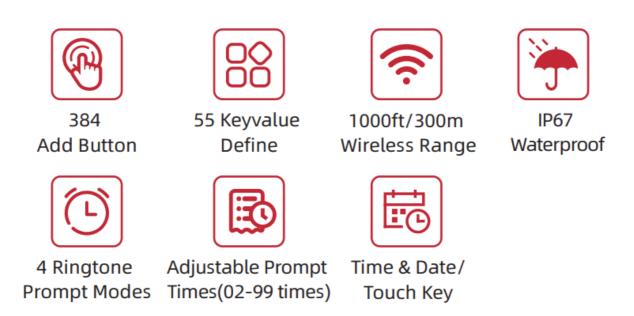

### Call Button-Q-01AB



### **Learn About Products**

#### **SW11-Watch Receiver**




#### Q-01AB/Q-01A-Call Button



## **Operator Interfaces**



# B Add Buttons

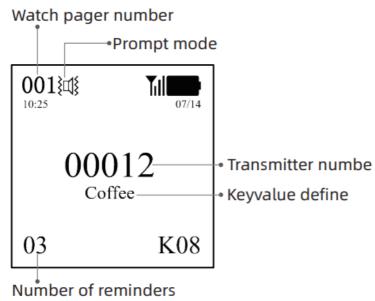

Add Buttons

00022
000/005pcs

Trigger button

# **©** Keyvalue Define

Keyvalue Define

Fun: Coffee Keyvalue: 08

All: Reset CLEAR

Trigger button

# Del All Buttons

Del All Buttons


Delete All Buttons?

Ν


Y


# **Operational Guidance**

1. Add Call Buttons/Transmitters

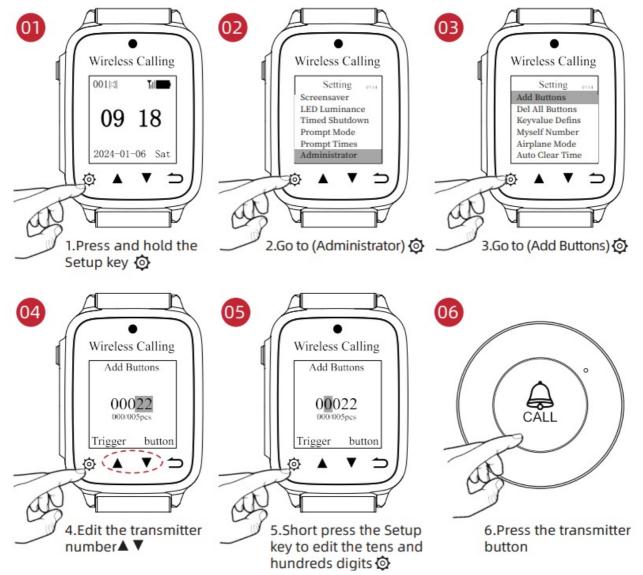


2. Keyvalue Define

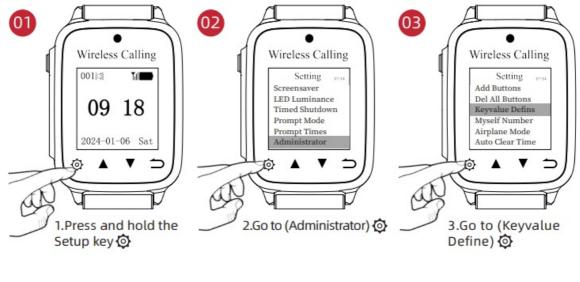

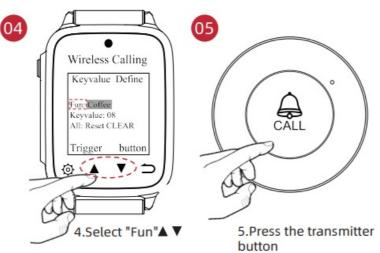


## 3. Del All Buttons

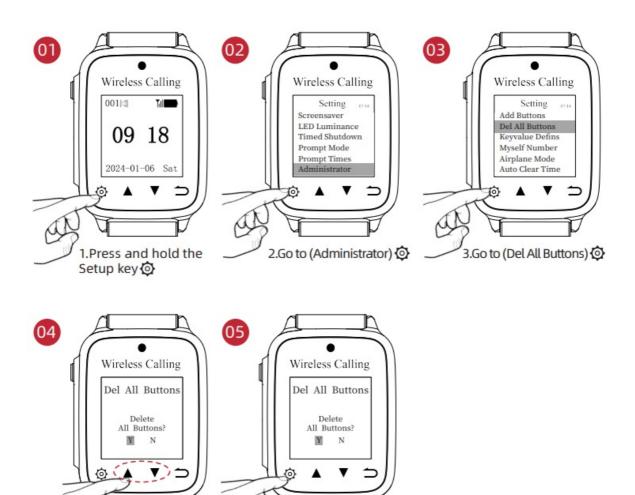

5.Press and hold the Setup key 🔯

4. Changing the Prompt Mode (Ringtone)/Prompt Times

4.Select "Yes"▲▼

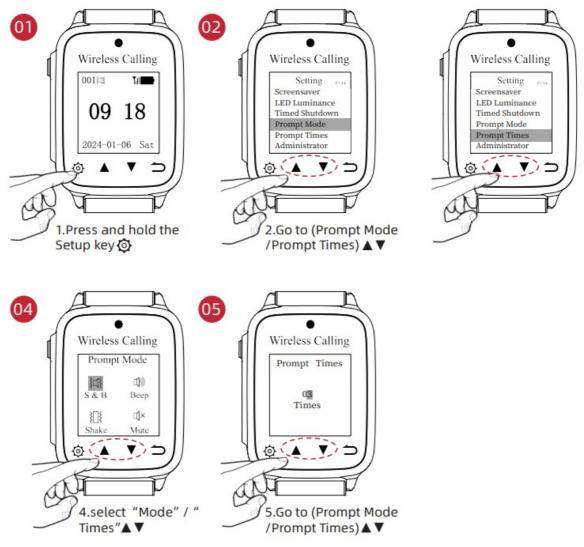

## 5. Data Sync

This function only applies if you have purchased more than one watch receiver. you can contact us to send you a data cable (a customized cable is required), if you have purchased few watch receivers, just do it manually.

# 6. Timeout Prompt

Press and hold the Setup key O - Go to (Timeout Prompt)

# 7. For more features, please check the video QR code

How to set alarm, change background and font color, alert language, rest time and screen brightness

#### Video Guide

Model: Q-01A/Q-01AB

FCC ID: 2AWYQ-Q-01A

**Power:** AAA Battery



SW11 Receiver and Transmitter Operation Video


Please scan the code to view




www.calltou.com
Service01@calltou.com

## **Installation Guide**

1. The transmitter button can be used in two ways

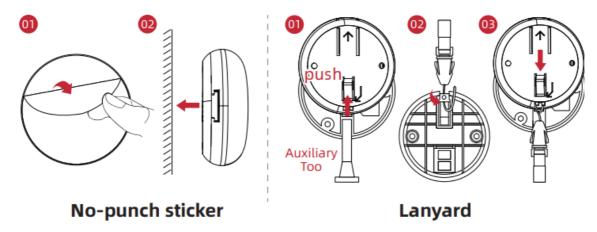


2. Call Button-Replacing Battery

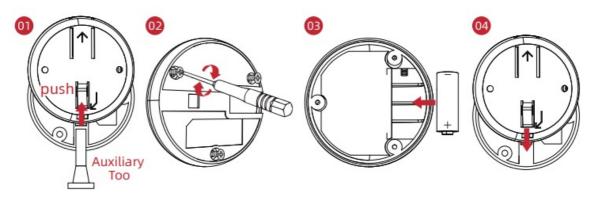

Note: For more detailed instructions, please scan the QR code on page 12 to watch.

# **Charge the Provided Battery**

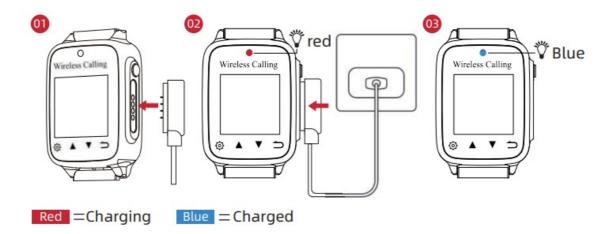

- 1. First, fully charge the battery by plugging
- 2. it into a power source using the provided cable.
- 3. The small light on top will glow blue once fully charged.

## **Technical Parameters**

- Battery capacity 3.7V 450mAh
- Standby current <12mA
- Receiving frequency 433.92MHz
- Receiving sensitivity -113 dBm
- Power supply 5V IA
- Ambient temperature -200 °C to 55°C

#### **Question & Answer**

Q: Do I need to pair the receiver and transmitter myself?

A: The receiver and transmitter are factory-paired and do not need to be paired yourself.

Q: What factors affect the use distance of the pager?

A: Obstacles near the transmitter and receiver can interfere with the signal. Avoid placing them near items like power supplies, TVs, microwaves, or iron doors.

Q: The pager cannot select the menu.

A: Long press the setup button for 5s ,enter the menu page ,short press the setup button to select next menu,

# **Documents / Resources**



CallTou SW11 Series Wireless Watch Calling System [pdf] Instruction Manual

SW11, Q-01A, Q-01AB, SW11 Series Wireless Watch Calling System, S W11 Series, Wireless Watch Calling System, Watch Calling System, Calling System

#### References

- User Manual
- CALLTOU
- ◆ Calling System, CALLTOU, Q-01A, Q-01AB, SW11, SW11 Series, SW11 Series Wireless Watch Calling System, Watch Calling System

# Leave a comment

Your email address will not be published. Required fields are marked*				
Comment *				

Comment *		

Name

	╛
mail	
/ebsite	_
	1
Save my name, email, and website in this browser for the next time I comment.	
Post Comment	

## Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.