



## **CARSON HF-11 Split Handle LED Lighted Magnifier Instruction Manual**

[Home](#) » [Carson](#) » CARSON HF-11 Split Handle LED Lighted Magnifier Instruction Manual 

# **CARSON<sup>®</sup>**

# **SPLITHANDLE<sup>™</sup>**

2x / 3.5x LED LIGHTED MAGNIFIER  
HF-11




## Contents

- 1 Instructions for use:
- 2 Documents / Resources
- 3 Related Posts

### Instructions for use:

#### Installing Batteries


Pull apart handle into split position to reveal battery compartment (Fig. 1). Slide down to remove battery cover located on inside of right handle (Fig. 2). Insert 2 AAA batteries into the battery compartment according to polarity indicators marked inside it (Fig. 3). Replace battery door when done (Fig. 4).

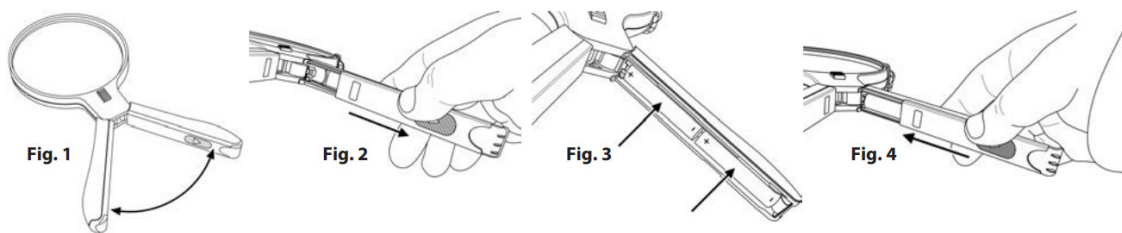

**Warning:** Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in the direction indicated. Rechargeable batteries are not recommended.

#### To Activate LED Light


To turn the light on, a slide switch is located on top of the handle up (Fig. 5). Turn the light off when not in use.

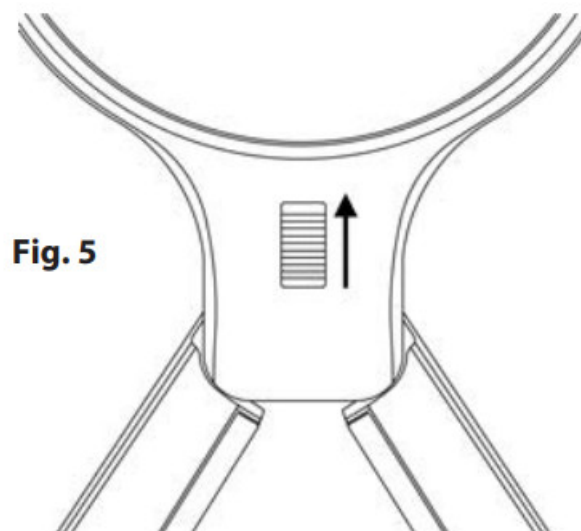


#### Attaching Neck Strap

The neck strap is stored inside the left handle (Fig. 6). Slide down and remove cover located on inside of left handle (Fig. 7).

Remove strap (Fig. 8) and replace the cover. Unravel neck strap and locate C clamps on each side of strap (Fig. 9).

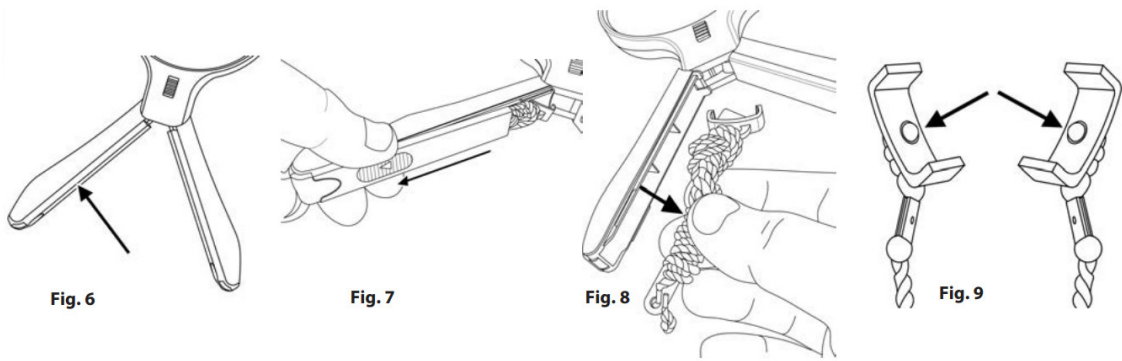


Snap clamps into place on each side of the magnifier lens frame (Fig. 10-11). Note: Circular bumps on the inside of clamps should line up with indents on the sides of the lens frame (Fig. 12).

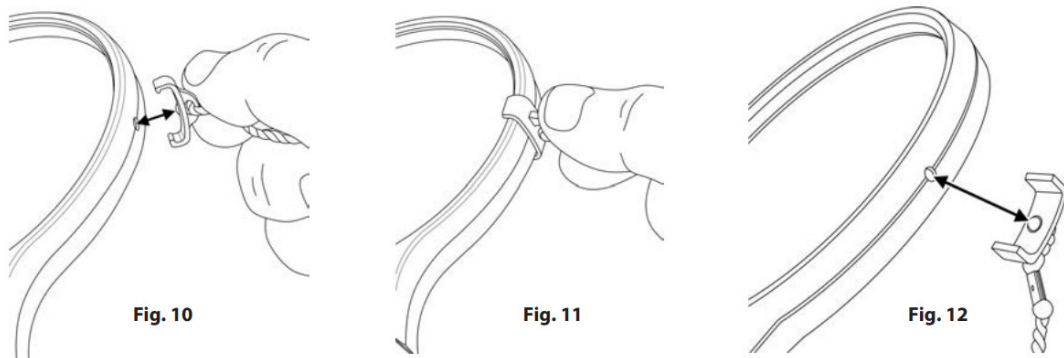


### To Use Hands-Free

With neck strap attached and handles in split position (Fig. 13), place strap around neck and rest ends of handles on chest (Fig. 14). Rubber tips on the ends of handles will keep the magnifier from slipping. Adjust the length of a neck strap as desired.

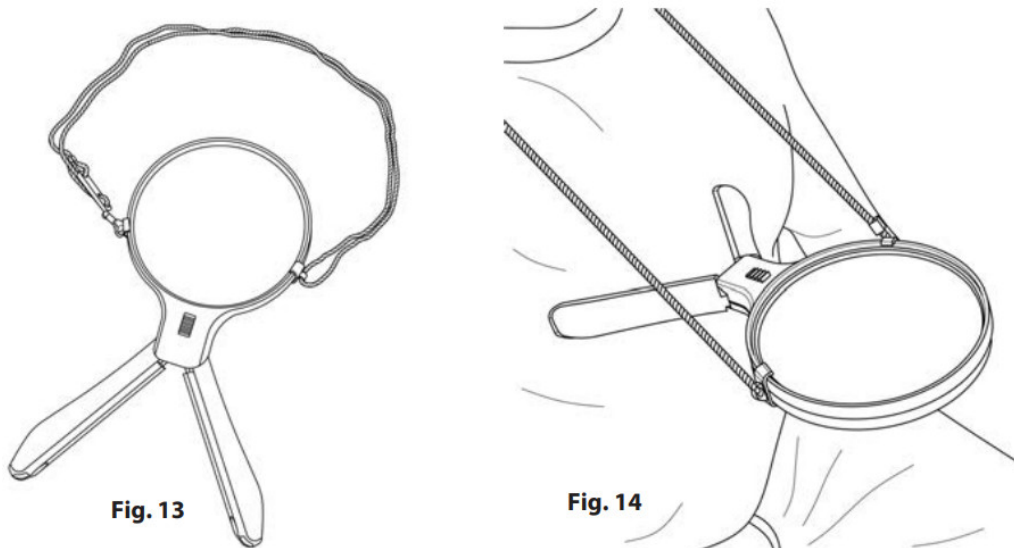

### To Use Hand Held

Remove neck strap and push sides of handles together to form one large handle (Fig. 15).

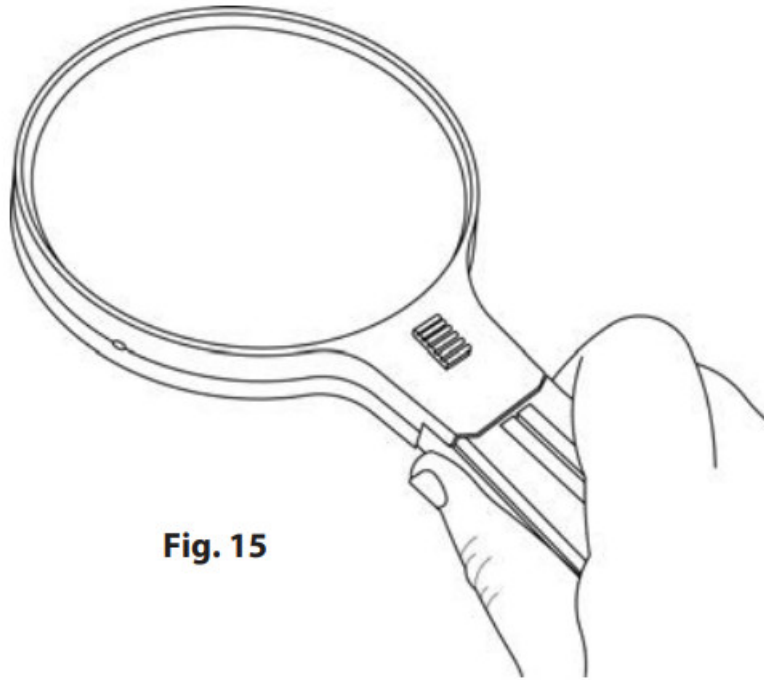

**Fig. 15**

### **Cleaning Your Magnifier**

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if needed. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

### **Customer Service:**

If you experience any difficulties, please contact us and we will be happy to help you.

#### **In the U.S.A.**

**Phone:** 1-631-963-5000

**Email:** [info@carson.com](mailto:info@carson.com)

#### **In the U.K.**

**Phone:** +44 (0) 1938 557440

**Email:** [uksupport@carson.com](mailto:uksupport@carson.com)

#### **In the E.U.**


**Phone:** +44 (0) 1938 557440

**Email:** [eusupport@carson.com](mailto:eusupport@carson.com)

**For warranty information, visit** [www.carson.com/warranty](http://www.carson.com/warranty)

HF-11 / © 2020

**Documents / Resources**

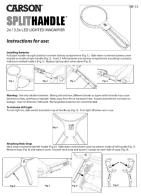

[CARSON HF-11 Split Handle LED Lighted Magnifier](#) [pdf] Instruction Manual  
Split Handle, LED Lighted Magnifier, HF-11