

# cell2 MS3 Surface Mount User Manual

Home » Cell2 » cell2 MS3 Surface Mount User Manual

## Contents


- 1 cell2 MS3 Surface
- Mount
- **2 Surface Mount**
- **3 Adhesive Mount**
- **4 Screw Mount**
- **5 Bracket Mount**
- 6 Documents / Resources
  - **6.1 References**
- **7 Related Posts**



cell2 MS3 Surface Mount



## **Surface Mount**

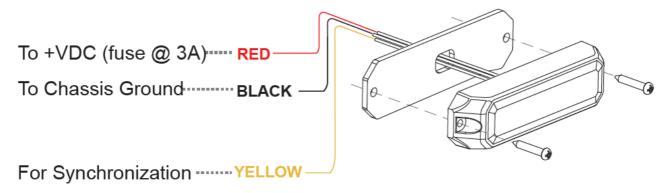

Connect YELLOW wires of all heads together for synchronization (All heads must be set at the same pattern)

# For Simultaneous or Alternating Flash

- 1. Apply +VDC to RED and YELLOW wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flashes:
  - 1. Single flash = Group1
  - 2. Double flash = Group2
- 2. Remove YELLOW wire from +VDC and momentarily apply to +VDC to change Groups:
  - 1. Heads in the same Group flash together.
  - 2. Group1 Heads alternate with Group2 Heads

#### For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- · once for next pattern
- · quickly three times for pattern 0


FP#	Flash Patterns		
0	Random	6	Quad
1	Single	7	Quint
2	Single	8	8 Flash
3	Mega	9	Single-Quad
4	Double	10	Single H/L
5	Triple	11	Single-Triple-Quint

NOTE: This unit may not be factory set at FP# 0.

# **Adhesive Mount**


- 1. Select mounting location and clean surface.
- 2. Peel one side of adhesive and apply to lighthead base.
- 3. Peel other side of adhesive and secure lighthead firmly to the mounting surface

NOTE: Optimun adhesive strength is achieved after 24hrs

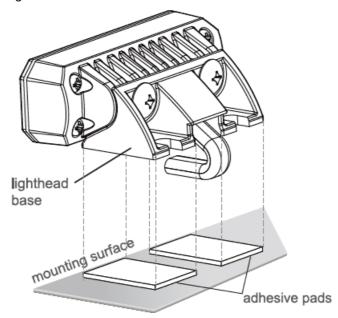



# **Screw Mount**

- 1. Select a mounting location.
- 2. Mark and drill mounting holes.
- 3. Place the rubber pad to the bottom of the lighted base.
- 4. Secure light head to the mounting surface with supplied screws

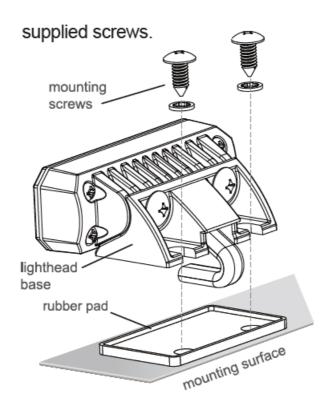

## **Bracket Mount**

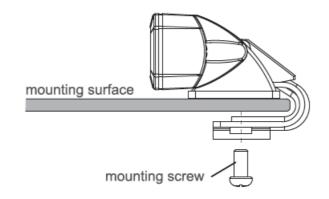

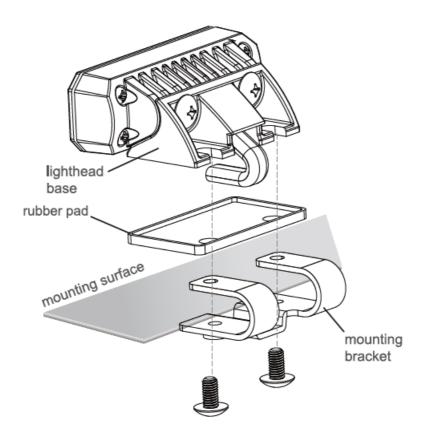

- 1. Select a mounting location.
- 2. Place the rubber pad to the bottom of the lighted base.
- 3. Place light head to the mounting surface.
- 4. Align top holes of the bracket onto the lighted base alignment points.
- 5. Secure lightheaded with supplied screws from the bottom of the bracket

Unit 4 Premus, Brunel Park, Coldharbour Way Aylesbury, Buckinghamshire HP19 8AP web: <a href="https://www.cell2.com">www.cell2.com</a> email: <a href="mailto:sales@cell2.com">sales@cell2.com</a> tel : +44(0)2033 285 494

## **Documents / Resources**



cell2 MS3 Surface Mount [pdf] User Manual MS3 Surface Mount, MS3, Surface Mount, Mount

# References

Manuals+,