



## CPR CALL BLOCKER V.105 Number Blocking 200 Pre Programmed User Guide

[Home](#) » [CPR CALL BLOCKER](#) » CPR CALL BLOCKER V.105 Number Blocking 200 Pre Programmed User Guide



**CPR CALL BLOCKER V.105 Number Blocking 200 Pre Programmed**



## Contents

- 1 Thank you
- 2 INTRODUCTION
- 3 SETTING UP CPR CALL BLOCKER
- 4 INSTALLATION DIAGRAM
- 5 BLOCK NOW
- 6 PROGRAMMING CODES
- 7 FREQUENTLY ASKED QUESTIONS
- 8 GENERAL INFORMATION
- 9 NEED MORE HELP?
- 10 CUSTOMER SERVICES
- 11 Documents / Resources
  - 11.1 References

## Thank you

for purchasing CPR Call Blocker.  
You are now in control of your privacy.

## INTRODUCTION

Congratulations on your new purchase!


Before using this guide there are a few things you need to know:-

- Call Blocker protects a single phone, or a cordless phone with multiple handsets
- CPR Call Blocker requires your line to have Caller Identity service (Caller ID) from your telephone operator.
- Caller ID is a service that forwards the caller's number to you with each call. It is available from most telephone companies. You might be familiar with this from your mobile phone. To register for Caller ID contact your telephone operator by dialling 150 – it is available free with BT and most other providers
- The CPR Call Blocker will work with a wide range of telephone equipment including corded and cordless phones. It protects all the phones that are plugged into it. If you need a number of extensions in your house we recommend that you use a modern multi-handset cordless phone system so that the CPR Call Blocker can protect all your phones.
- We recommend that you don't use the CPR Call Blocker with phones plugged into other extension sockets in your house. These may give a short ring when calls from unknown callers are received, and won't ring when the caller is put through.
- Some phones automatically check the 1571 network voicemail service at regular intervals and display a 'Message waiting' light. These are called 1571 phones. We recommend that you do not use 1571 phones with The CPR Call Blocker.
- We recommend that you don't plug The CPR Call Blocker into a wireless phone line extension box, as these don't forward Caller ID.

## SETTING UP CPR CALL BLOCKER

### Step 1

Remove the line cable from your telephone and plug into the **LINE 1** port of the Call Blocker.

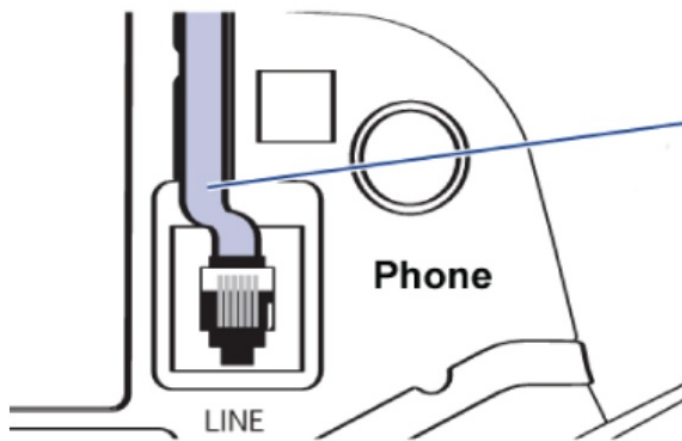

Disconnect line cable from your telephone and plug into the LINE 1 port of the Call Blocker

## Step 2

Use the small Black cable provided to connect the TEL 1 port to your telephone


## Step 3

Insure all cables are connected securely

The Call Blocker is setup correctly when there is a red light displayed on the top of the unit, this is shown when the phone is off the receiver or when on a call. If you are using a cordless phone then press the Call Button for a dial tone.

If you have no dial tone or no red light you will need to disconnect the cables then reconnect using the **LINE 2** and **TEL 2** ports.

## INSTALLATION DIAGRAM

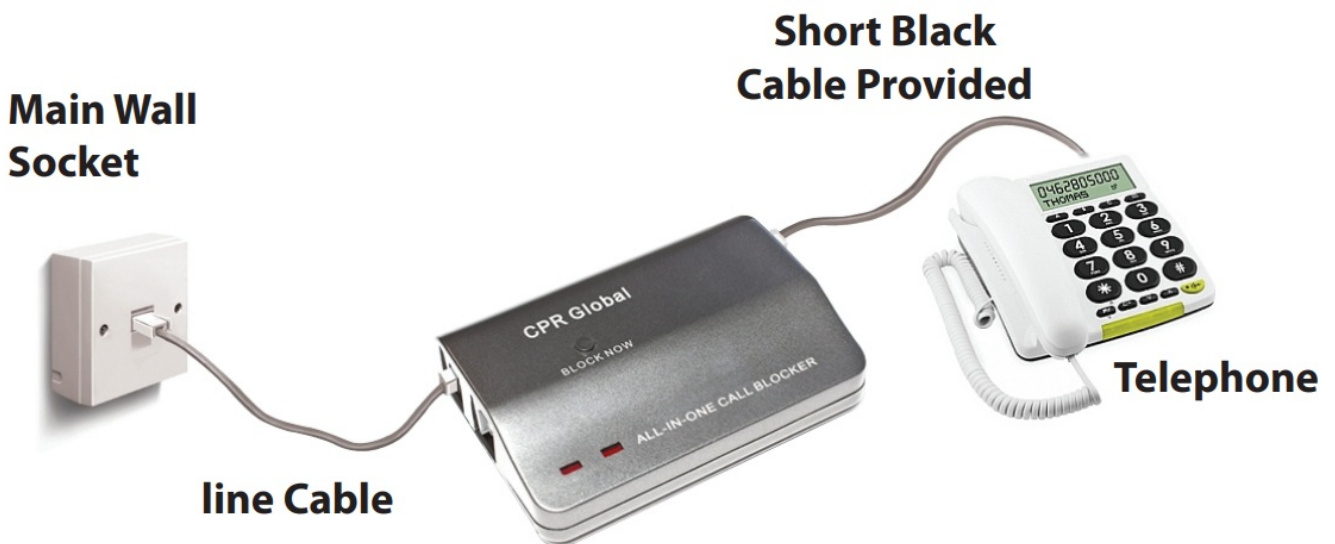

## BLOCK NOW

The easiest way to block Nuisance Callers is to use the BLOCK NOW button located on the top of the Call Blocker.

When a Nuisance Caller gets through press the 'BLOCK NOW' button and then hang up the call, this Caller will now be blocked from calling again.

You can also use this function without having to answer the phone.

**For example:** If an unfamiliar number is calling , press the BLOCK NOW button and the CPR Call Blocker will stop

that number from calling again.

The Block Now Button only works with Visible numbers.

If you are receiving nuisance calls from **'WITHHELD'** or **'INTERNATIONAL'** numbers please use the programming codes on pages 5 and 6.

## PROGRAMMING CODES

### Programming a number into "Blocking" list

1. Pick up the telephone and input \* \*7 # you will hear a **"Beep"**
2. Then enter the telephone number you wish to block, followed by the # key, You will hear a 'beep' after each # to confirm success.
3. Enter the next number or hang up to complete setup.

### Programming an area code into "Blocking" list

1. Pick up the telephone and input \* \* 7 # you will hear a **"Beep"**
2. Then enter the area code you wish to block, followed by the # key, You will hear a 'beep' after each # to confirm success.
3. Enter the next area code or hang up to complete setup.

### Erasing one number or area code from the "Blocking" list

1. Pick up the telephone and input \* \* 6 # you will hear a **'Beep'**
2. Then enter the telephone number you wish to delete followed by the # key, You will hear a 'beep' after each # to confirm success.
3. Hang up to complete setup.

### Block Last Calling Number

1. To block last number : Get a dial tone and input \* \* 2 # \* 2 # You will hear a 'beep' after each # to confirm success.

### Turning Call Blocker On and Off

1. To Turn On: Get a dial tone and input \* \* 4 # \*4#
2. To Turn Off : Get a dial tone and input \* \* 3 # \*3# You will hear a **'beep'** after each # to confirm success.

### Blocking all "Withheld" Callers

1. To Turn On: Get a dial tone and input \* \* 7 # 7\*#
2. To Turn Off : Get a dial tone and input \* \* 6 # 7\*# You will hear a **'beep'** after each # to confirm success.

### Alternative "Withheld" blocking function ( Use this if the conventional code doesn't work)

1. To Turn On: Get a dial tone and input \* \* 7 # #
2. To Turn Off : Get a dial tone and input \* \* 6 # # You will hear a **'beep'** after each # to confirm success.

### Blocking all "International" Callers

1. To Turn On: Get a dial tone and input \* \* 7 # \* #

2. To Turn Off : Get a dial tone and input \* \* 6 # \* # You will hear a ‘beep’ after each # to confirm success.

### **Blocking all IP Dialling systems (skype / overseas nuisance call centres)**

1. To Turn On: Get a dial tone and input \* \* 7 # 6\*#
2. To Turn Off : Get a dial tone and input \* \* 6 # 6\*# You will hear a ‘beep’ after each # to confirm success.

### **Blocking all “0” type calls (Single digit spoof callers)**

1. To Turn On: Get a dial tone and input \* \* 7 # 0#
2. To Turn Off : Get a dial tone and input \* \* 6 # 0# You will hear a ‘beep’ after each # to confirm success.

### **Resetting the Call Blocker back to factory settings**

1. Get a dial tone and input \*\* 1 # \* 1 # You will hear a ‘beep’ after each # to confirm success.

**Note:** Three “Beeps” indicated that an error has occurred – Either a number has been entered incorrectly or the function is already ON.

## **FREQUENTLY ASKED QUESTIONS**

Q. Will the CPR Call Blocker work on my broadband line?

A. The CPR Call Blocker will work happily alongside your broadband connection - just unplug your telephone and plug into Call Blocker.

Q. How much power does the CPR Call Blocker use?

A. The CPR Call Blocker uses only the power from your telephone line which is of no cost to you!

Q. Which network providers does the CPR Call Blocker support?

A. The CPR Call Blocker will work on standard domestic telephone lines from all the main telephone providers.

Q. Do I need caller ID for this product to work?

A. Yes. Caller ID should be enabled on your telephone line for the product to work effectively. Caller ID Display is available free for BT customers

Q. Can I use any telephone with the CPR Call Blocker?

A. The CPR Call Blocker will work with a wide range of modern telephone equipment - cordless DECT phones, cordless analogue phones.

Q. Can I use the CPR Call Blocker with extension telephone sockets?

A. The CPR Call Blocker is designed to work on one telephone socket. If you wish to have several phones around the house it is best to use a DECT phone with multiple cordless handsets

## GENERAL INFORMATION

### Safety

- Simply clean CPR Call Blocker with a damp cloth. Do not use chemicals or abrasive cleaning products.
- Do not open CPR Call Blocker as there are voltages inside the unit.

### Environmental

- CPR Call Blocker is intended for indoor use only.
- Do not submerge any part of CPR Call Blocker in water and do not use it in damp or humid conditions, such as in bathrooms.
- Do not expose CPR Call Blocker to fire, explosive or other hazardous conditions.
- There is a slight chance that CPR Call Blocker could be damaged by an electrical storm.

We recommend that you unplug the telephone line cord for the duration of the storm as such damage is not covered by the guarantee.

### Data Protection

We are registered under the Data Protection Act 1998 (registration Z2140320).

The data controller is CPR Global Limited of York Chambers, York Street, Swansea, SA1 3LZ

We will process personal data disclosed by you in accordance with our privacy policy published on our website ([www.cprcallblocker.com](http://www.cprcallblocker.com))

### NEED MORE HELP?

#### Need more help?

If you need further help setting up CPR Call Blocker please email or phone through to our Technical support team for help with problems, or advice.

### CUSTOMER SERVICES

**CPR Global Post :** CPR Global LTD

York Chambers  
York Street  
Swansea  
UK  
SA1 3LZ

**E-mail :** [support@cprcallblocker.com](mailto:support@cprcallblocker.com)

**Phone :** +44 0800 652 7780

© CPR Global 2012

**Patent Number** – 1200049.3

[www.cprcallblocker.com](http://www.cprcallblocker.com)



Disposal instructions Waste electronic equipment should be separated from your normal household waste

and taken to your local recycling centre for disposal, or back to where you bought the equipment.

Proper recycling of electronic equipment will help

For more products from CPR Global, please visit our website [www.cprdistribution.com](http://www.cprdistribution.com)

And view our fantastic range of innovative products




# CALLBLOCKER

## THE ALL-IN-ONE CALL BLOCKER

---

### Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">CPR CALL BLOCKER V.105 Number Blocking 200 Pre Programmed</a> [pdf] User Guide<br/>V.105 Number Blocking 200 Pre Programmed, V.105, Number Blocking 200 Pre Programmed,<br/>Blocking 200 Pre Programmed</p> |
|---|--|

### References

- [CPR Block Nuisance Calls with CPR Call Blocker for Landline Phones.](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

#### Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.