



Delta OHM HD32.3TC Viewing the Data with Datalog10 Software Instruction Manual


[Home](#) » [Delta OHM](#) » Delta OHM HD32.3TC Viewing the Data with Datalog10 Software Instruction Manual 




HD32.3TC Viewing the Data with Datalog10 Software Instruction Manual

1. Start the DeltaLog10 software.
2. Connect the instrument mini-USB port to a PC USB port by means of the supplied CP31 cable (USB drivers installation is not required).
3. Display the tree of the directories in the main window of the software.


Warning: the instrument does not require a connection procedure, therefore it is not necessary to press the "Connect" button.

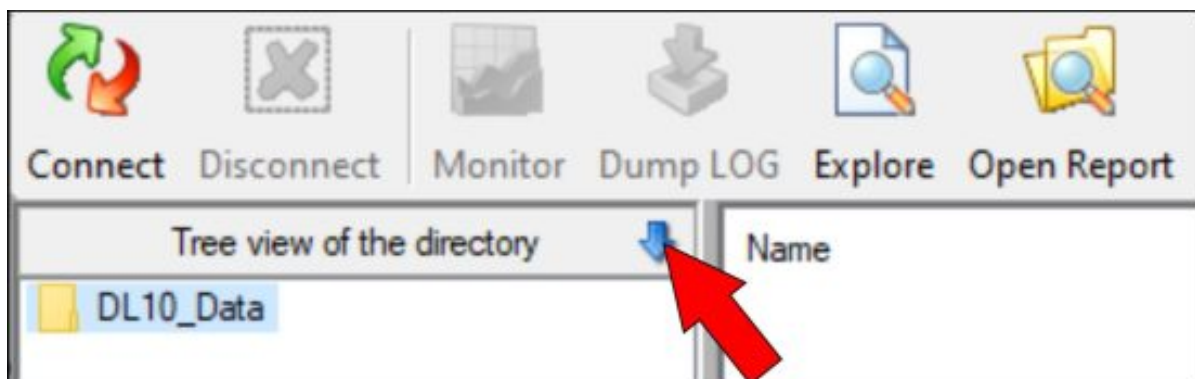

4. Expand the disk drive corresponding to the instrument and select the desired folder.

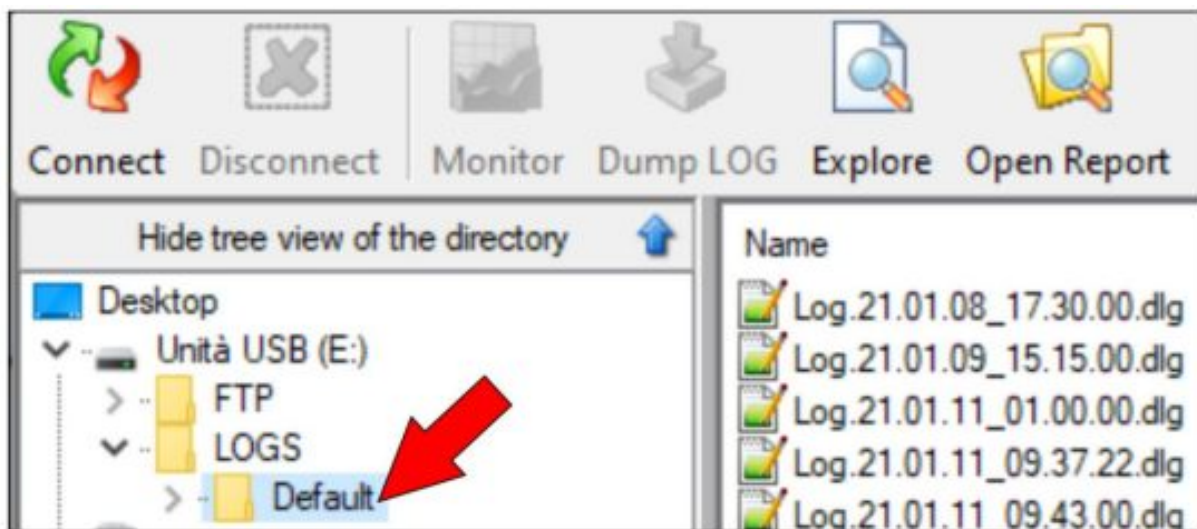

5. Double-click on the name of the data file.

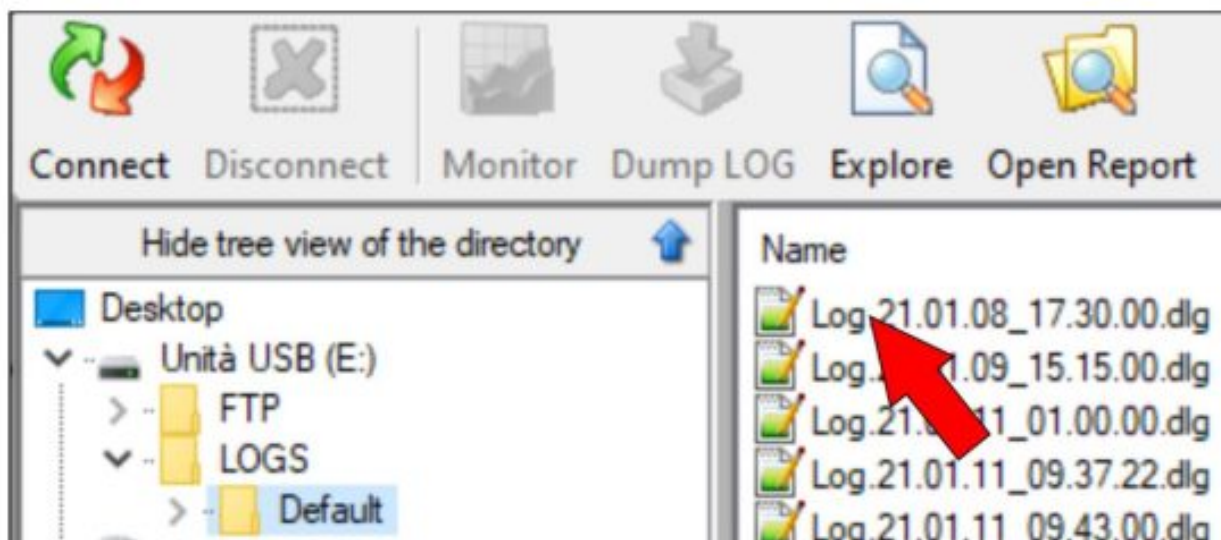

6. Proceed according to the instructions of the software to analyze the data.

Rev. 1.0 – 03/02/2021

DELTA OHM S.r.l. a socio unico – Via G. Marconi, 5 – 35030 Caselle di Selvazzano (PD) – ITALY

TEL. 0039 049 89 77 150, FAX 0039 049 63 55 96, e-mail: info@deltaohm.com, Web Site: www.deltaohm.com

Contents

1 Documents / Resources

1.1 References

2 Related Posts

Documents / Resources

	Delta OHM HD32.3TC Viewing the Data with Deltalog10 Software [pdf] Instruction Manual HD32.3TC Viewing the Data with Deltalog10 Software, HD32.3TC, Viewing the Data with Deltalog10 Software
--	--

References

- [!\[\]\(6302aad5aed157b291fddf37b4870784_img.jpg\) Delta OHM - Measuring, monitoring, testing and control instruments](#)

Manuals+.