



# DIMENSION Fiber Endface Microscope EasyGet WiFi User Manual

[Home](#) » [DIMENSION](#) » DIMENSION Fiber Endface Microscope EasyGet WiFi User Manual 




## EasyJet Wifi

### Wireless Fiber Endface Microscope Product Manual

#### Contents

- [1 Product Description](#)
- [2 Hardware Features](#)
- [3 Specifications](#)
- [4 Important Safety Information](#)
- [5 Service Policy](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

## Product Description

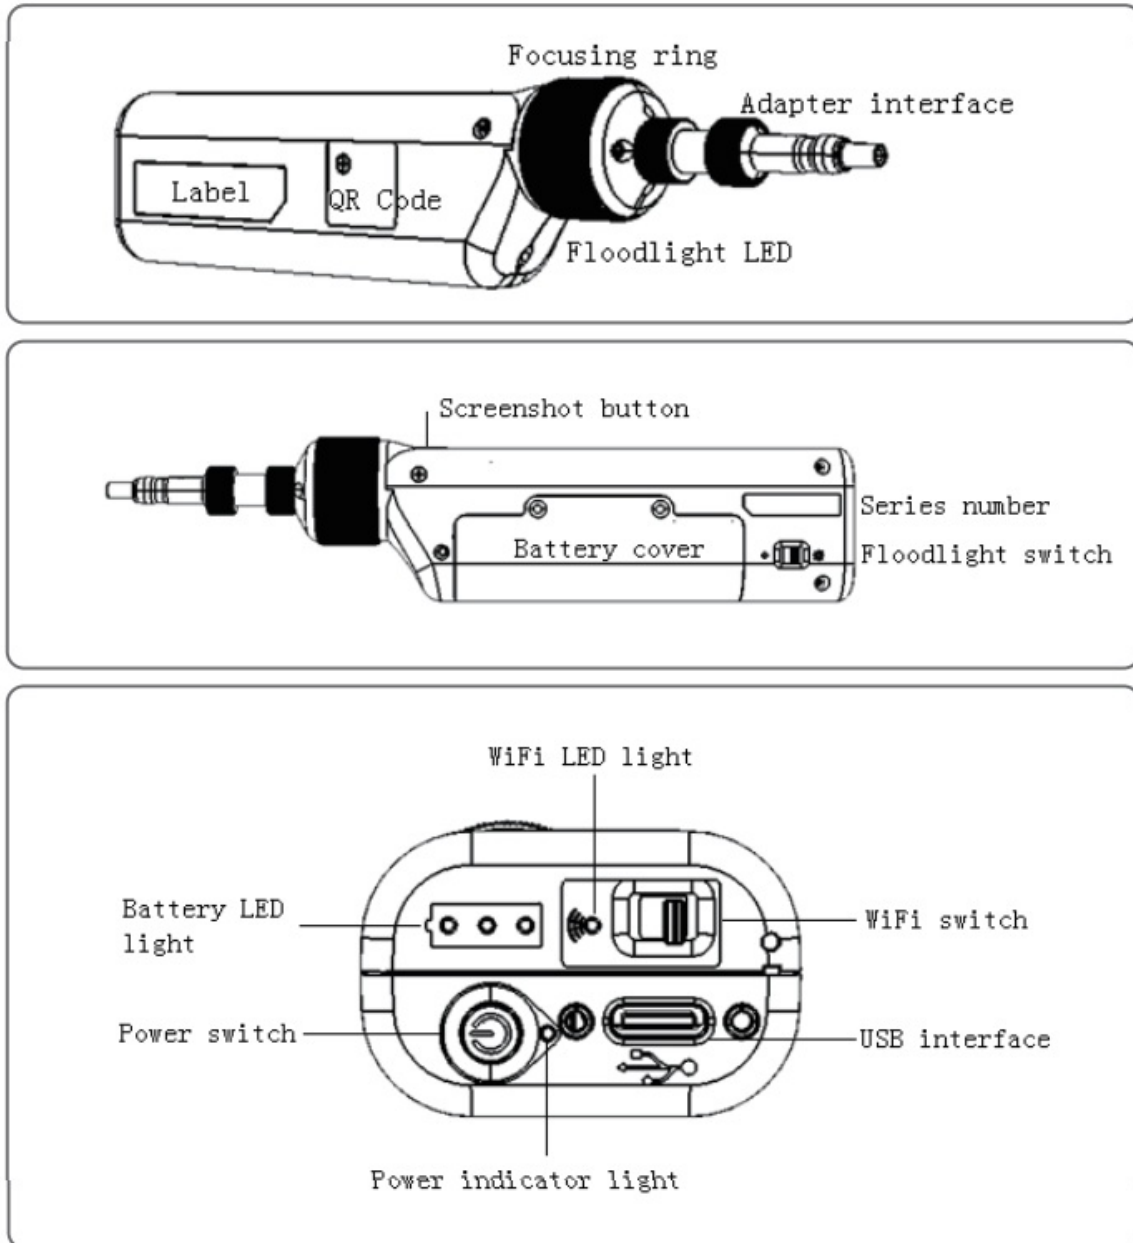

### Note Item


- \* Attention to keep the video display interface clean, no fat, no pollution.
- \* The equipment should be protected from moisture, otherwise, it may cause damage to the equipment.
- \* It is best to place it in the instrument case when not in use for a long time.
- \* Check the power of the equipment before use, and if only one light is on and flashing, charge it before use.
- \* Please activate the device after removing the battery each time.
- \* Device body camera button is enabled when WiFi connection is in use.

### Hardware Features

- \* Series of adaptors meet a variety of testing needs.
- \* High-quality optical components, high-resolution CCD sensor for accurate end face inspection.
- \* Supports multiple connections: WiFi USB
- \* High capacity rechargeable battery, over 5 hours work time.
- \* Humanized front light is conducive to the operation of various environments.
- \* Equipped with high impact resistance protective cap to extend equipment life.
- \* Convenient camera button, easy to use.
- \* Looks small, simple, beautiful, one hand to complete the operation. Operation Introduction


## 1. Focus

As shown in figure, rotate the focus ring clockwise and the connector is away from the fuselage direction.

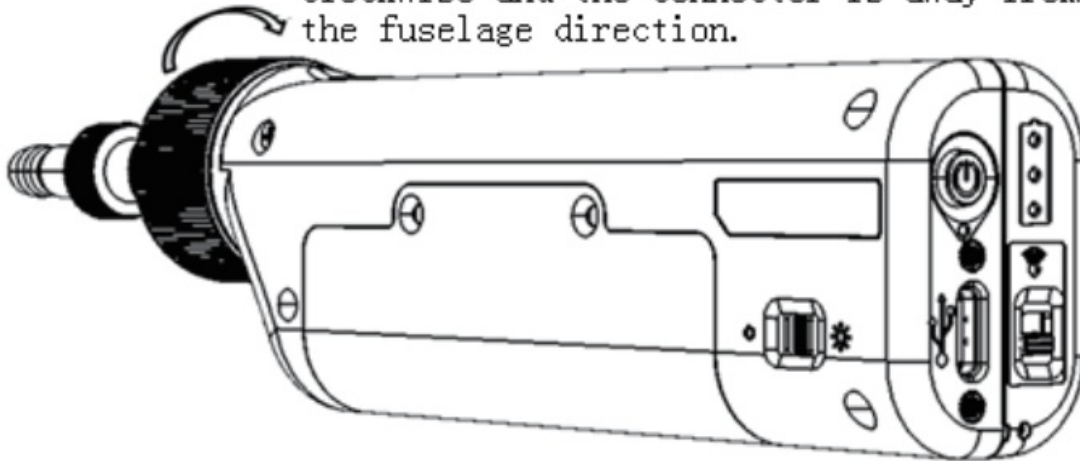



## 2. WiFi Connect

**Note:** WiFi default password is 12345678


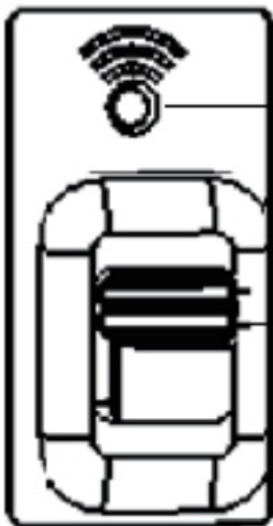


2. WiFi lights are always on

1. WiFi switch on

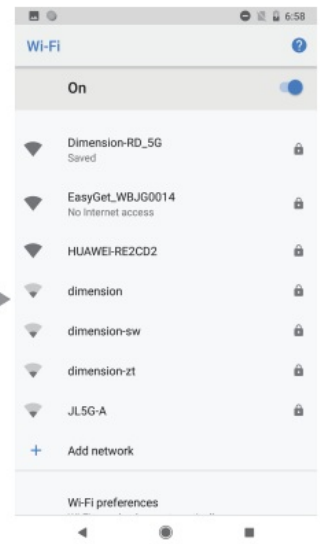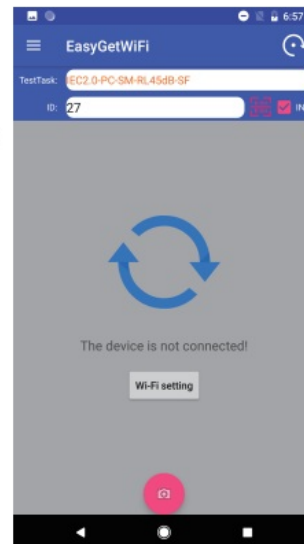



## 3. Take a picture

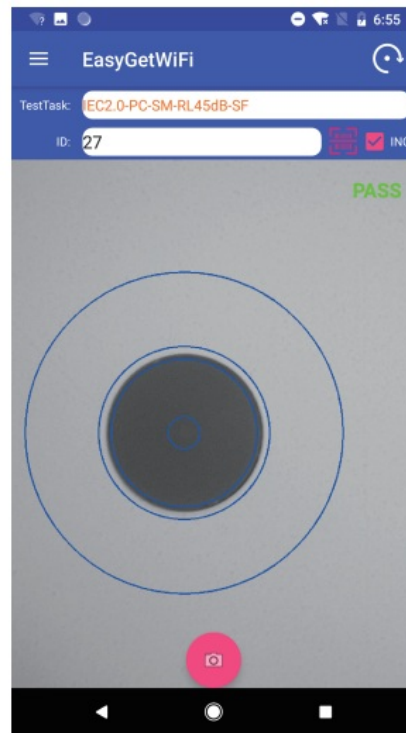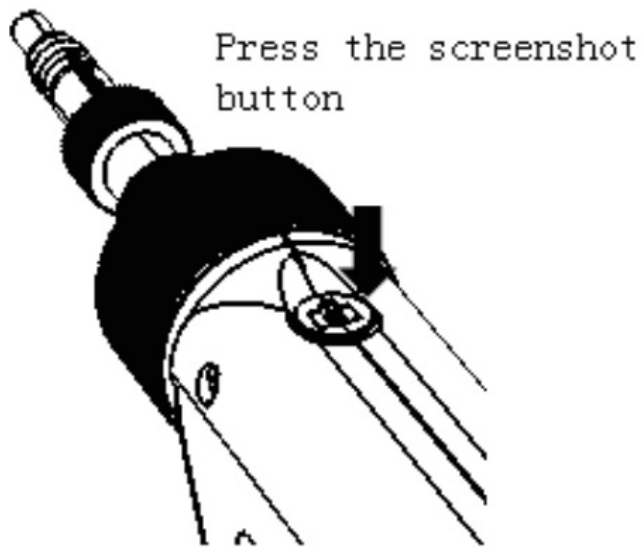

When pressing the screenshot button, the software interface is shown.

**Note:** Mobile phone wifi has been connected.

#### 4. View Image

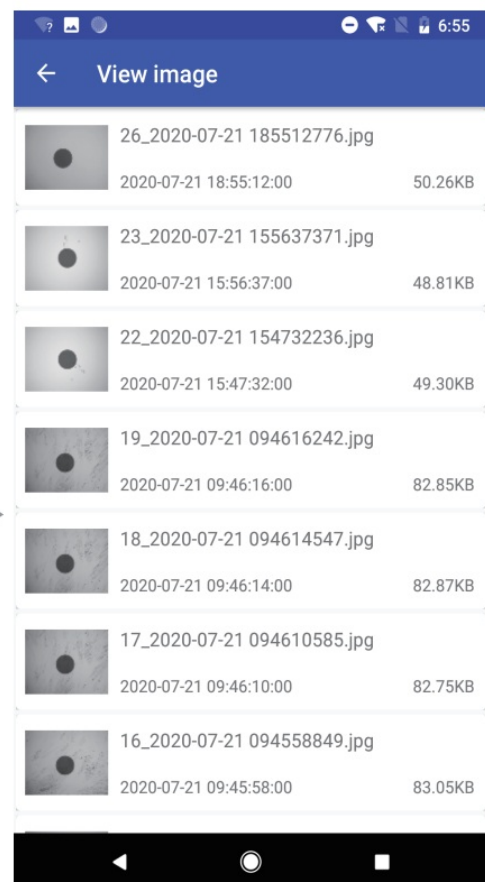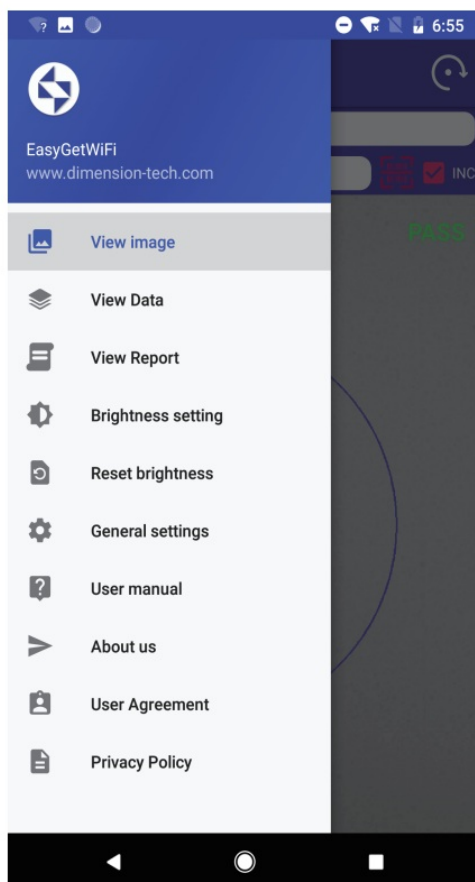

#### Specifications

Item	Parameter
Power	2.0W
Power adapter	DC 5V/2A
Size	212*45*32mm
Weight	188g
Software compatible	Android 4.2/ iOS 9.3/PC Win7 /
version	Linux2.6 or higher

### To learn more

You can visit [www.weidujs.com](http://www.weidujs.com) for more information about the product.

## Important Safety Information

- \* Before using this equipment, please read all safety information to ensure correct and safe use.
- \* Use of an adapter, charger, or battery that is not approved by the manufacturer may cause a fire explosion or another hazard. Please use the accessories approved by this manufacturer.
- \* Do not replace the battery yourself to avoid damage to the battery or equipment. The battery can only be replaced by a service center.
- \* Please charge with the manufacturer's specific charger, to avoid leakage, fire, damage to the equipment and charger.
- \* If charging is complete, disconnect the charger from the device and unplug the charger from the power outlet. Continuous charging time should not exceed 12 hours.
- \* Please follow the local regulations to handle the battery. If the battery is improperly handled, it may cause the battery to fire and explode.
- \* The battery is prohibited from impact, squeezing, or putting in a fire. Do not continue to use it if it is experiencing severe expansion.
- \* Do not repair this equipment yourself.
- \* Please do not connect any unassigned equipment.

## Service Policy

### Warranty Term

We warrant that for a period of one (1) year from the Shipping Date, the product purchased by the customer shall be free of defects in material and workmanship under normal authorized use consistent with the product instructions.

### Warranty Content


In the event that we receive notice during the warranty period that any part does not conform to its warranty, our sole and exclusive liability shall be, at its sole option, to either repair or replace the non-conforming part in accordance with this limited warranty.

### Warranty Exception

No warranty will apply if

1. Device damage caused by the wrong operation;
2. Unconventional repair or modification;
3. The causes of failure outside of the instrument;
4. Used in high temperature and humidity, corrosive gas, harsh conditions such as vibration;
5. Fires, earthquakes, and other natural disasters as well as the pollution caused by radioactive substances and harmful substances, and when the other force majeure such as war, riot, crime;
6. Consumables and consumable parts.

Documents / Resources

	<a href="#">DIMENSION Fiber Endface Microscope EasyGet WiFi</a> [pdf] User Manual Fiber Endface Microscope EasyGet WiFi
---	--

[Manuals+](#).